
Connector Joining Wire Harness and Wire Harness

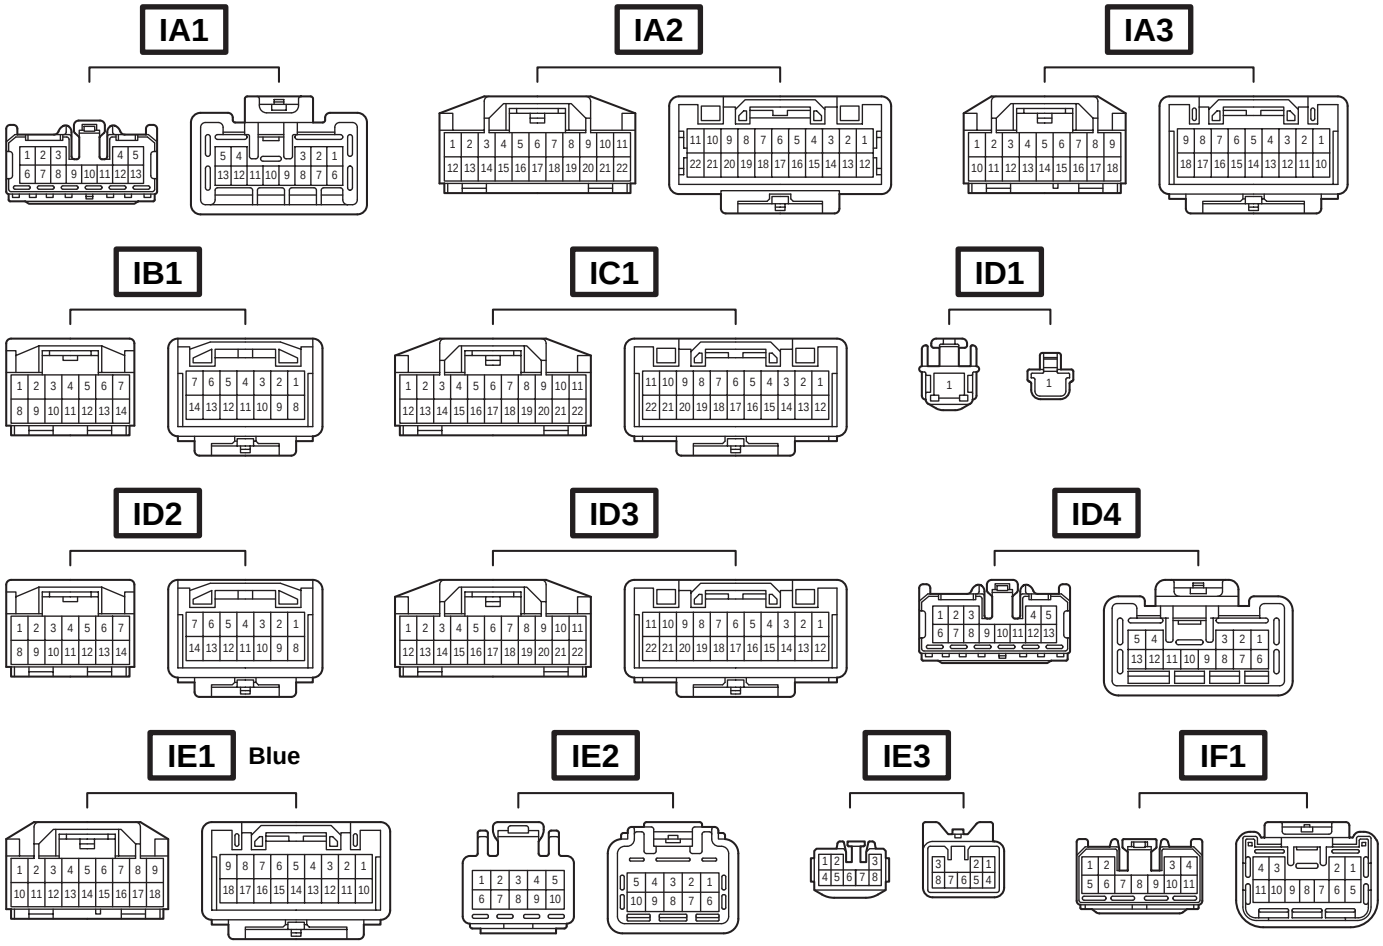

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA2	
IA3	
IB1	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IC1	Engine Room Main Wire and Floor Wire (Cowl Side Panel LH)
ID1	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID2	
ID3	
ID4	
IE1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2	
IE3	
IF1	Floor Wire and Engine Room Main Wire (Left Kick Panel)