
Connector Joining Wire Harness and Wire Harness

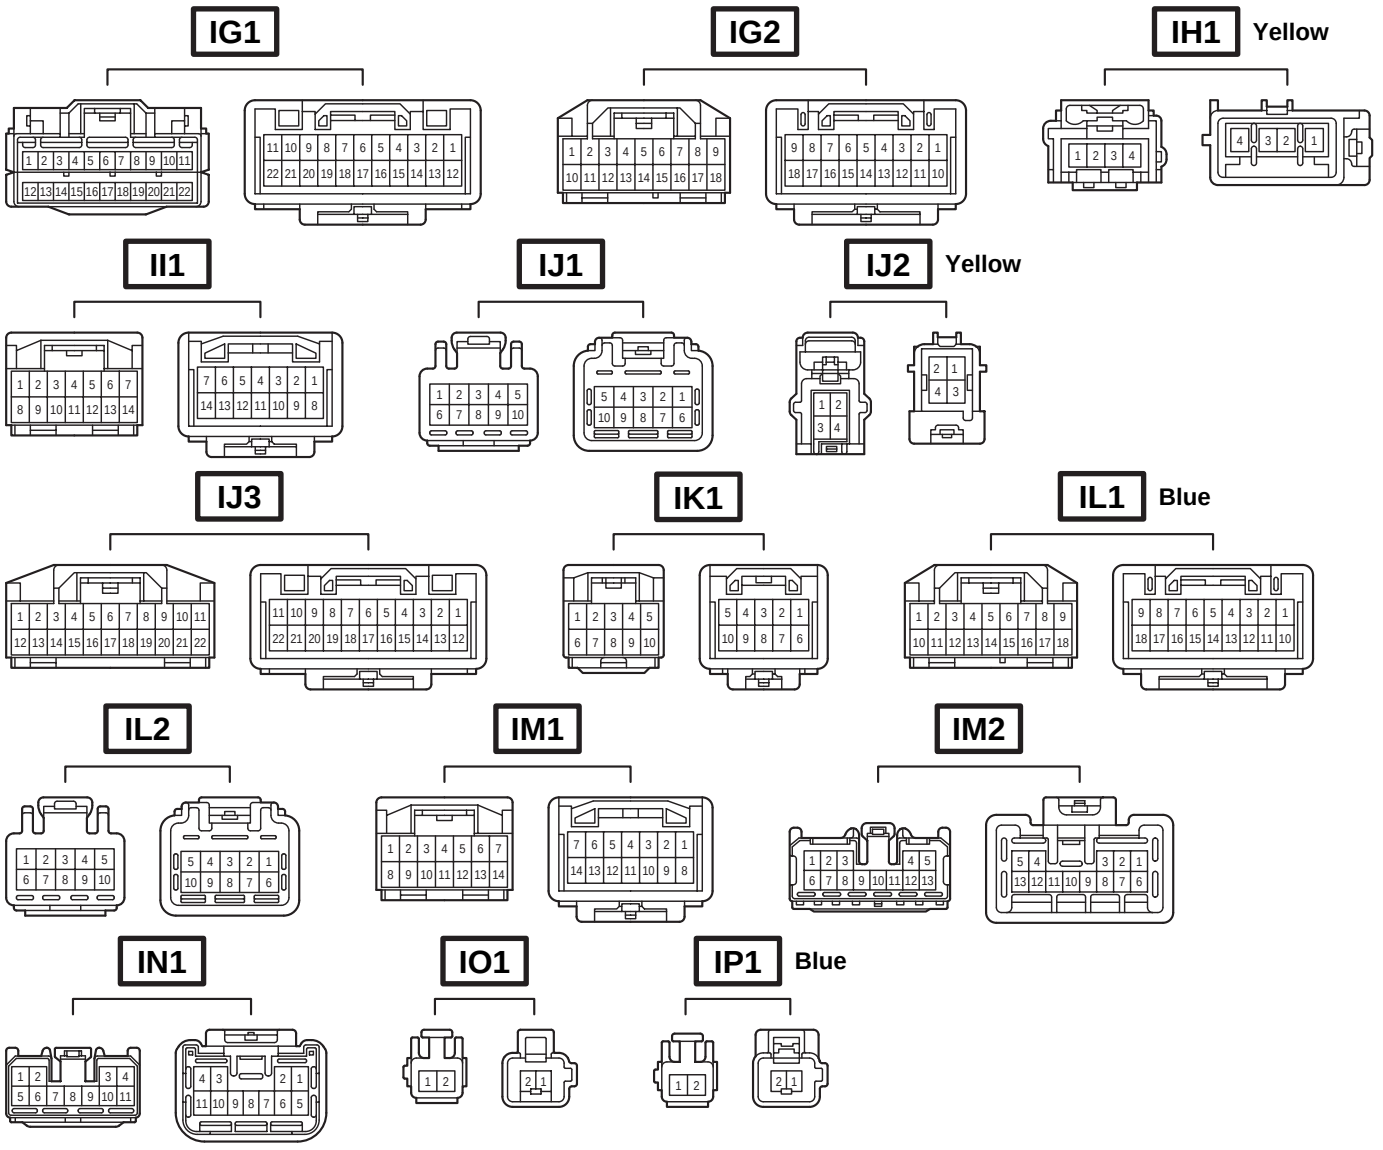

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2	
IH1	Instrument Panel Wire and Instrument Panel No.1 Wire (Behind the Glove Box)
II1	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ1	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)
IJ2	
IJ3	
IK1	Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel RH)
IL1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2	
IM1	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM2	
IN1	Floor No.2 Wire and Engine Room Main Wire (Right Kick Panel)
IO1	Instrument Panel Wire and Instrument Panel No.4 Wire (Front Console Box LH)
IP1	Engine Room No.2 Wire and Engine Room Main Wire (Upper Parts of Front Body Pillar LH)