
Connector Joining Wire Harness and Wire Harness

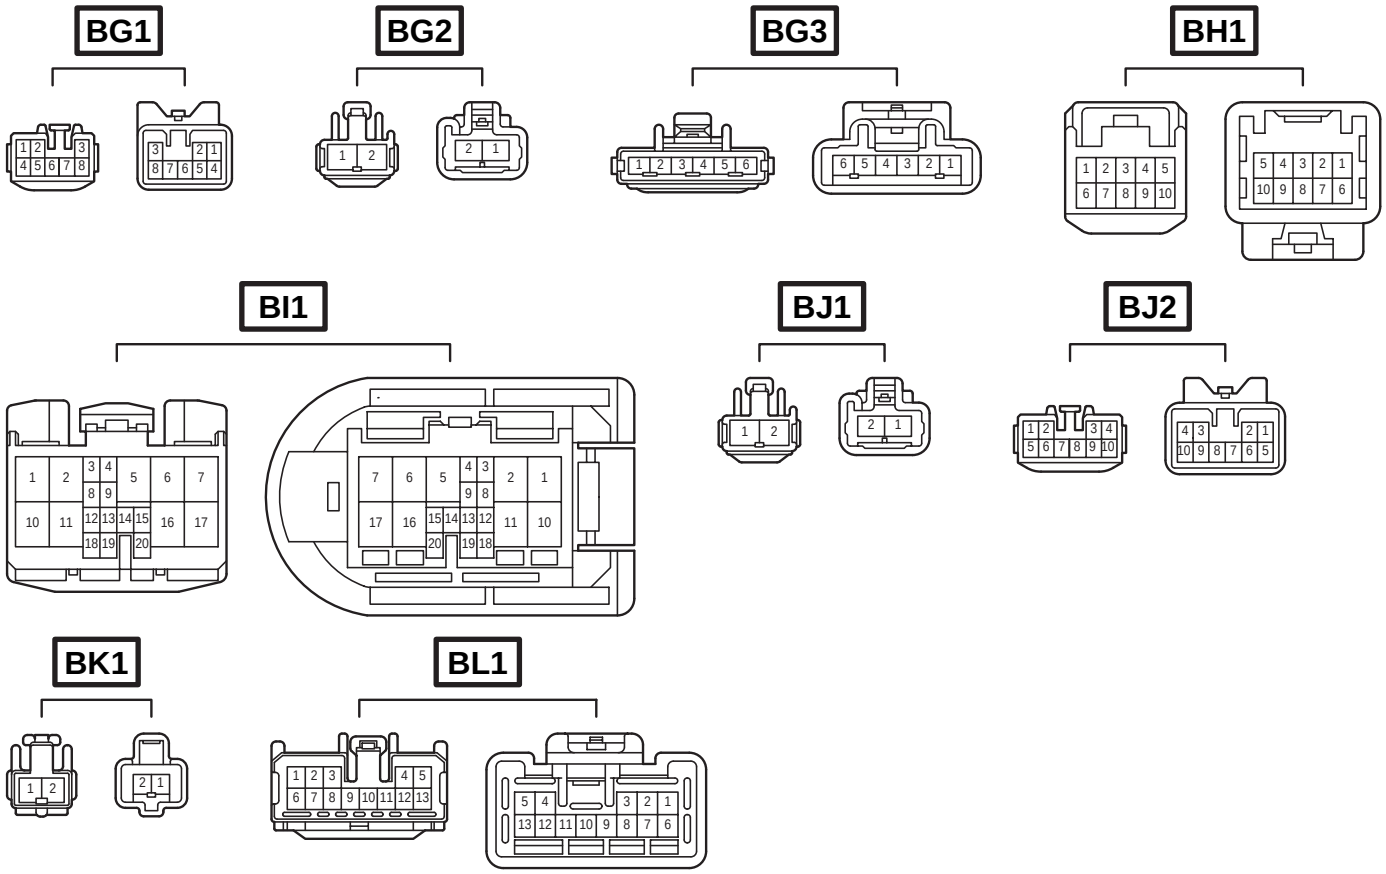

Code	Joining Wire Harness and Wire Harness (Connector Location)
BG1	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BG2	
BG3	
BH1	Front Door RH Wire and Electrical Key RH Wire (Near the Front Door Outside Handle RH)
BI1	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
BJ1	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)
BJ2	
BK1	Skid Control Sensor No.2 Wire and Floor No.2 Wire (Front Side of Right Quarter Panel)
BL1	Floor No.2 Wire and Floor Wire (Rear Side of Right Quarter Panel)