
Connector Joining Wire Harness and Wire Harness

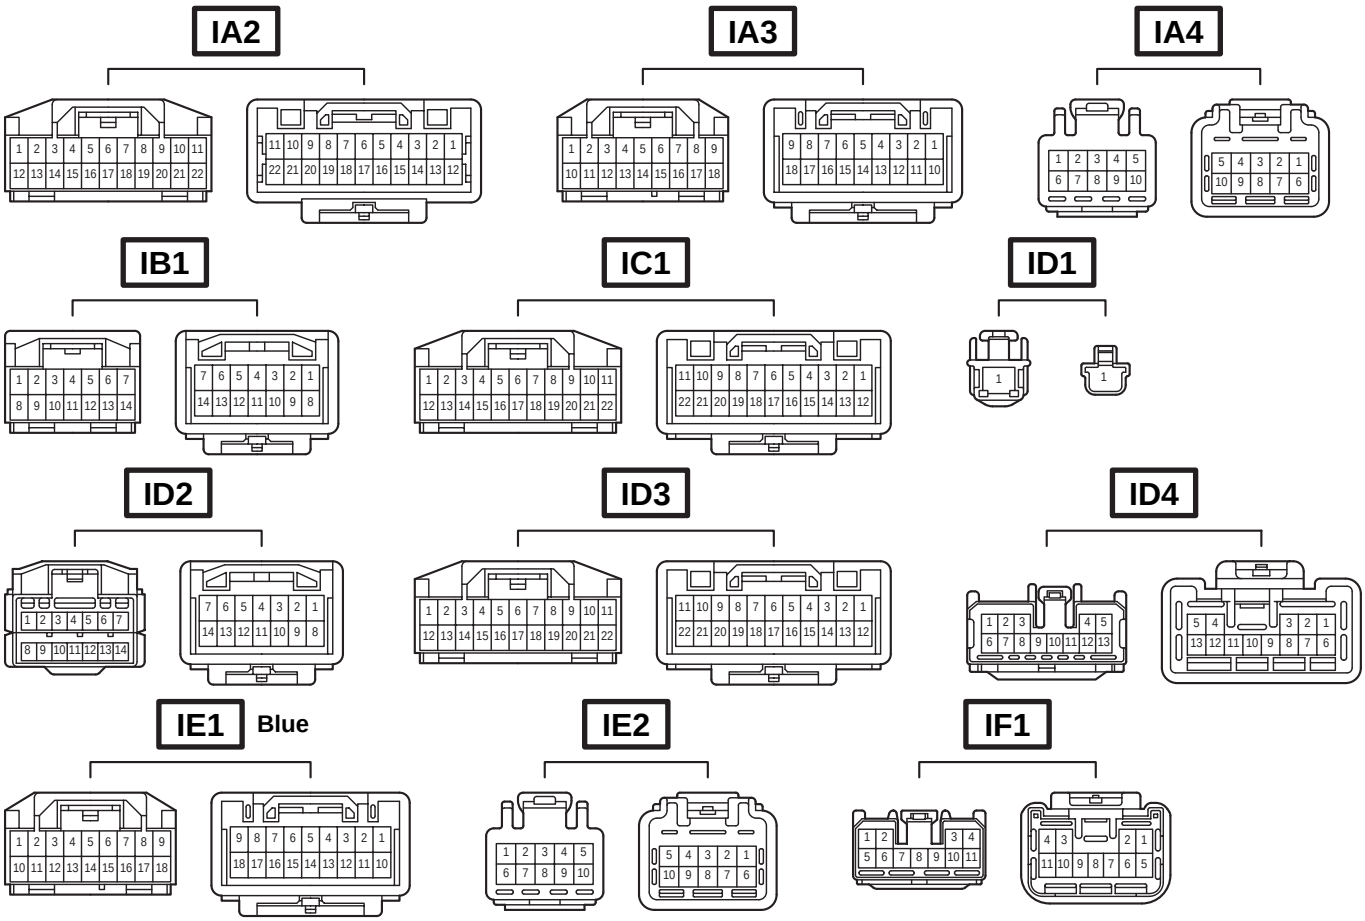

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA2	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar RH)
IA3	
IA4	
IB1	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar RH)
IC1	Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel LH)
ID1	Instrument Panel Wire and Floor Wire (Right Kick Panel)
ID2	
ID3	
ID4	
IE1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2	
IF1	Floor No.2 Wire and Engine Room Main Wire (Left Kick Panel)