
Connector Joining Wire Harness and Wire Harness

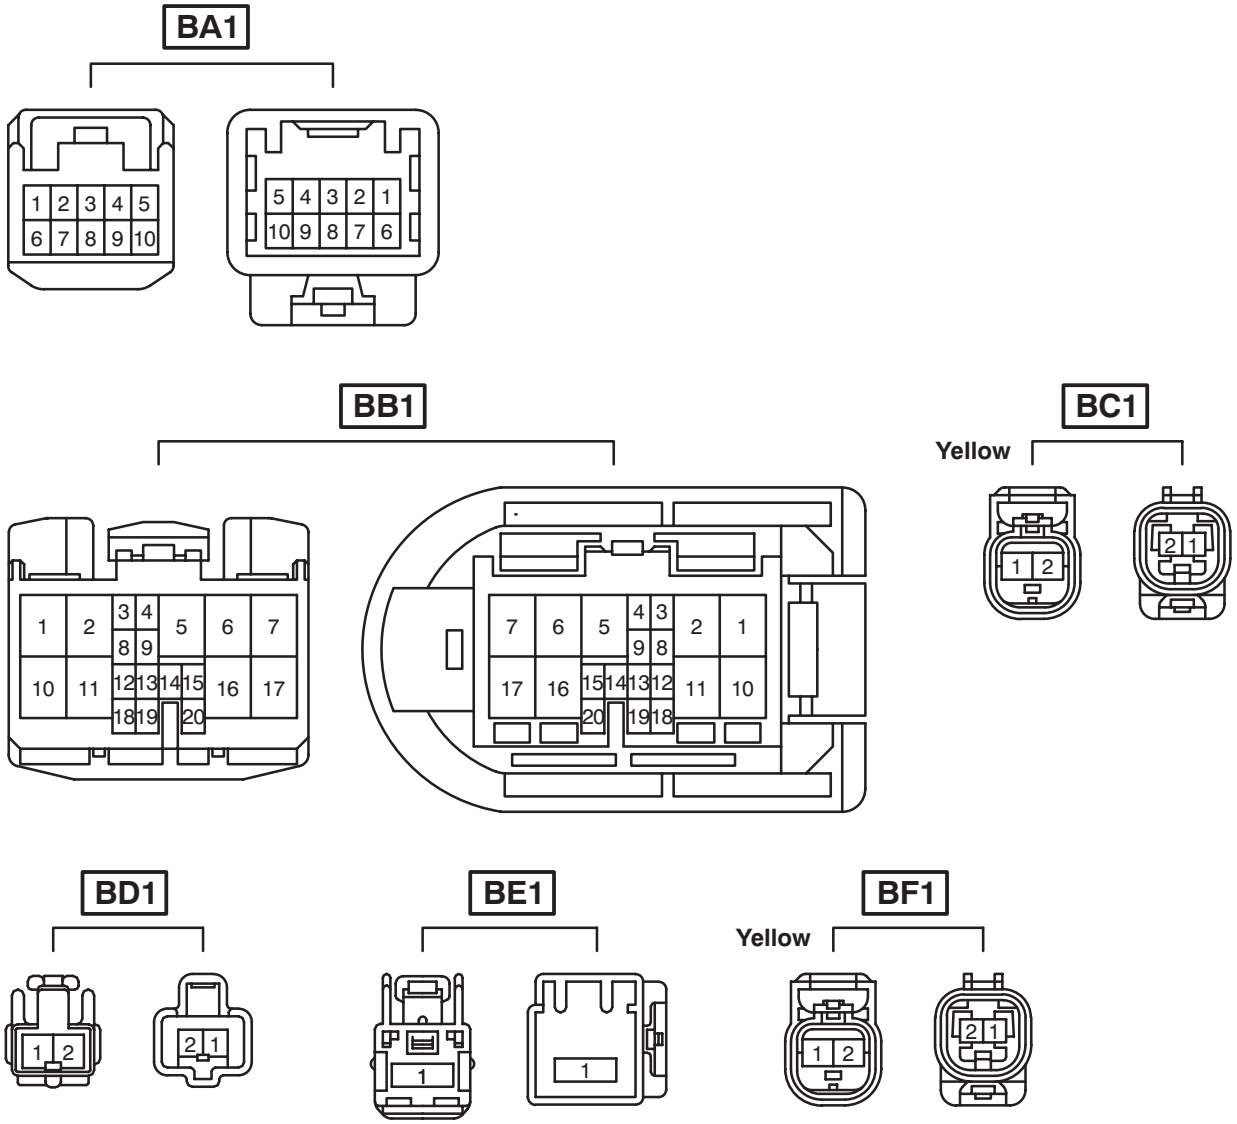

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Front Door LH Wire and Electrical Key LH Wire (Near the Front Door Outside Handle LH)
BB1	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BC1	Floor No.2 Wire and Seat Airbag No.1 Wire (Under the Front Passenger's Seat)
BD1	Skid Control Sensor No.1 Wire and Floor No.2 Wire (Front Side of Left Quarter Panel)
BE1	Frame Wire and Floor Wire (Front Side of Left Quarter Panel)
BF1	Floor Wire and Seat Airbag No.2 Wire (Under the Driver's Seat)