

Double Locking

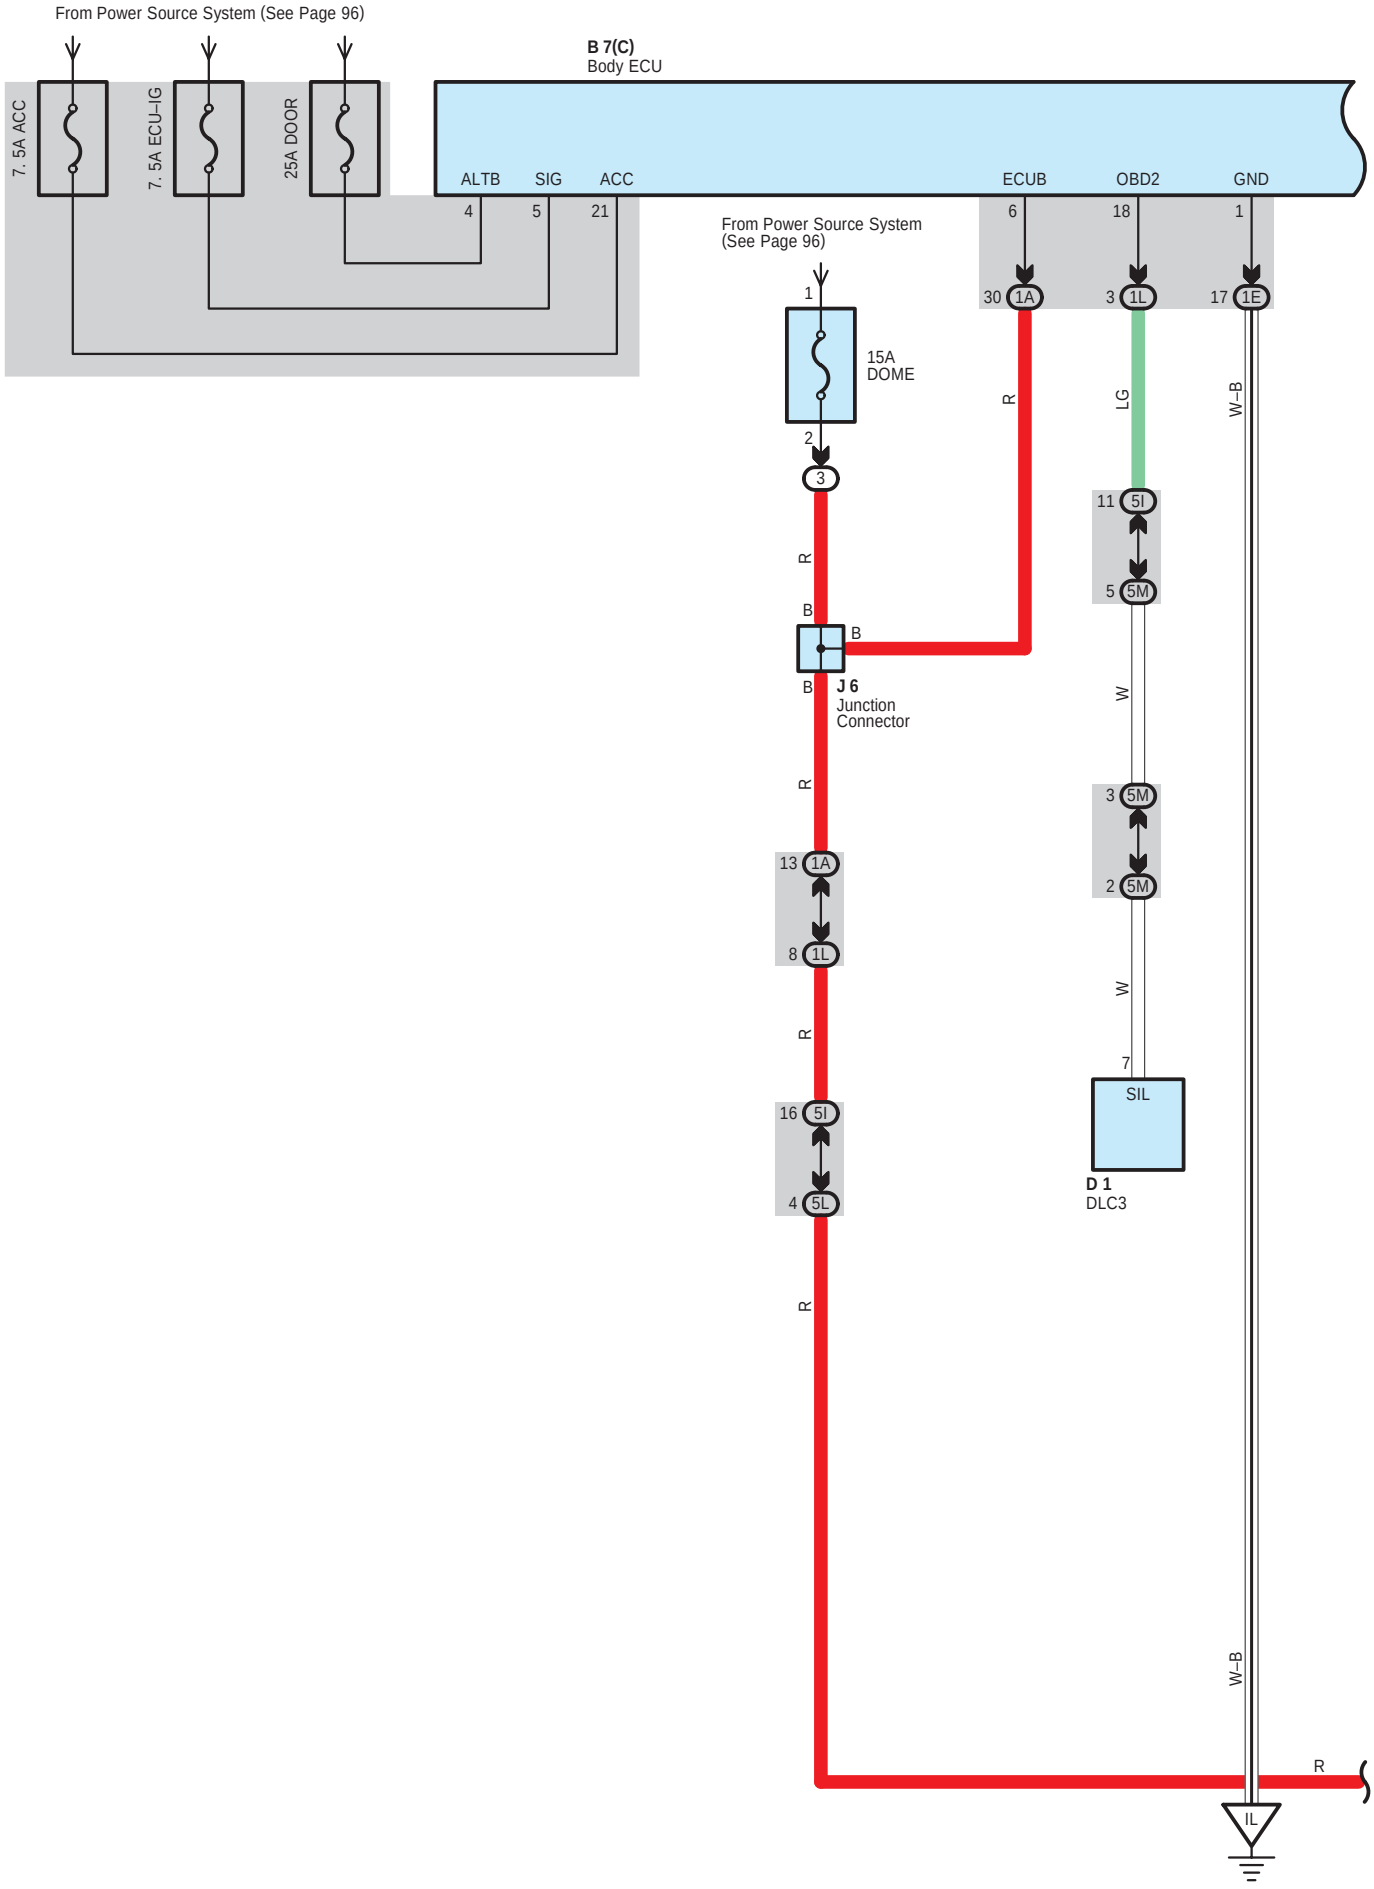


B 7(C)
Body ECU
DLRR
DLRL
DLPP
ACTS
ACTR
J26
Junction
Connector
D16
Double Lock Motor Rear RH
Double Lock Position SW Rear RH
D14
Double Lock Motor Rear LH
Double Lock Position SW Rear LH
D12
Double Lock Motor (Front Passenger' s Side)
Double Lock Position SW
(Front Passenger' s Side)
J30
Junction
Connector
J29
Junction
Connector
J27
Junction
Connector
J31
Junction
Connector
BM

Double Locking

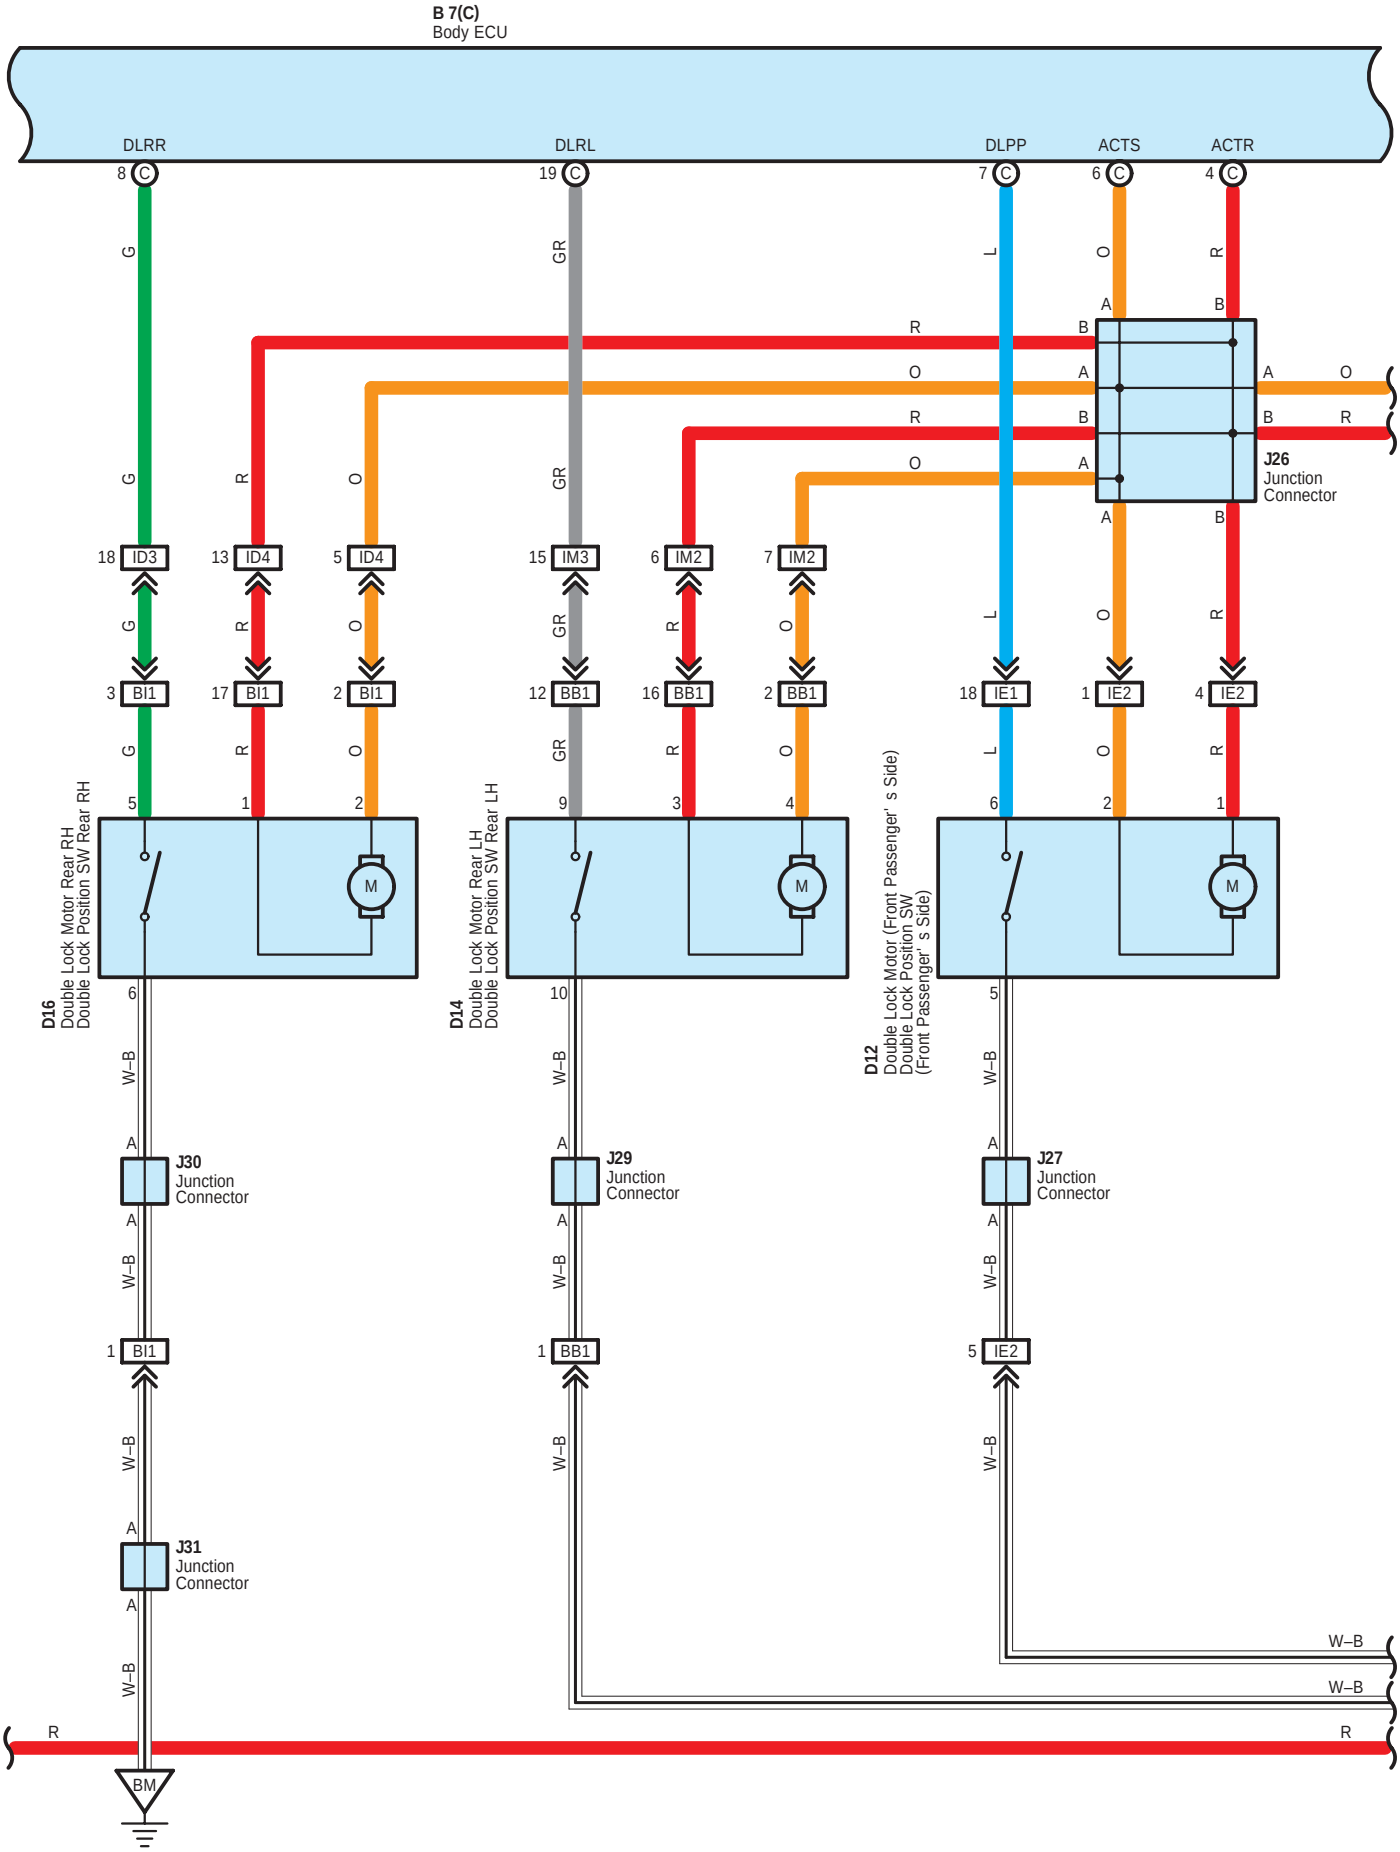