



Door Lock Control

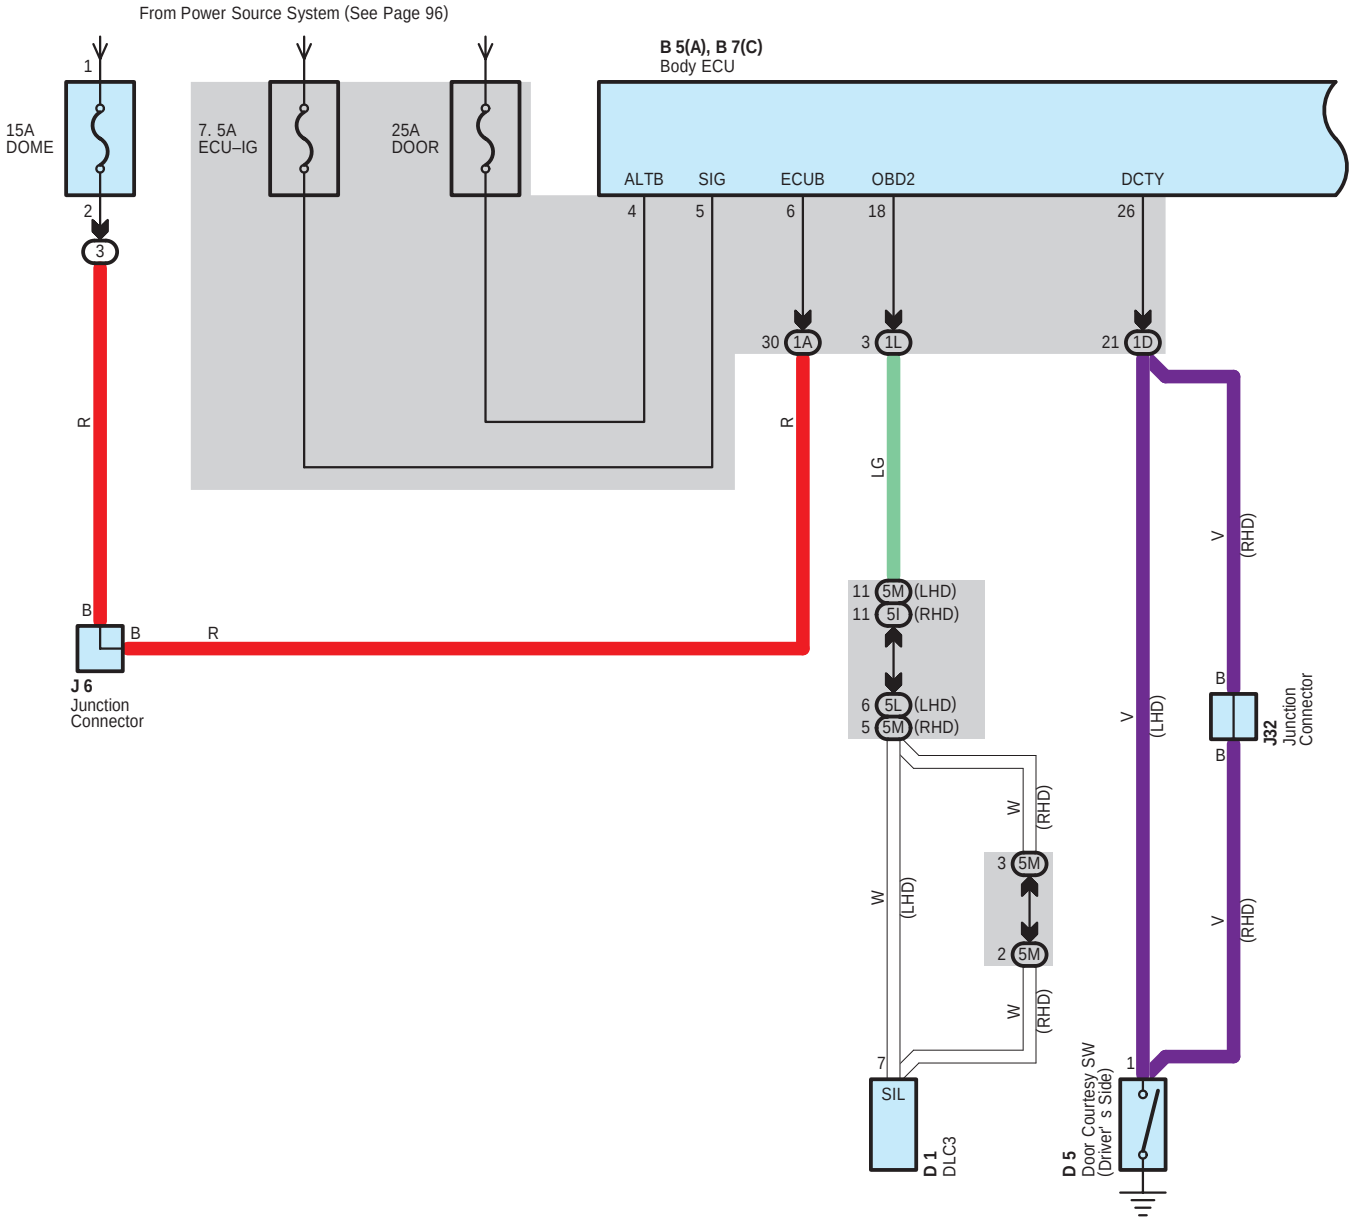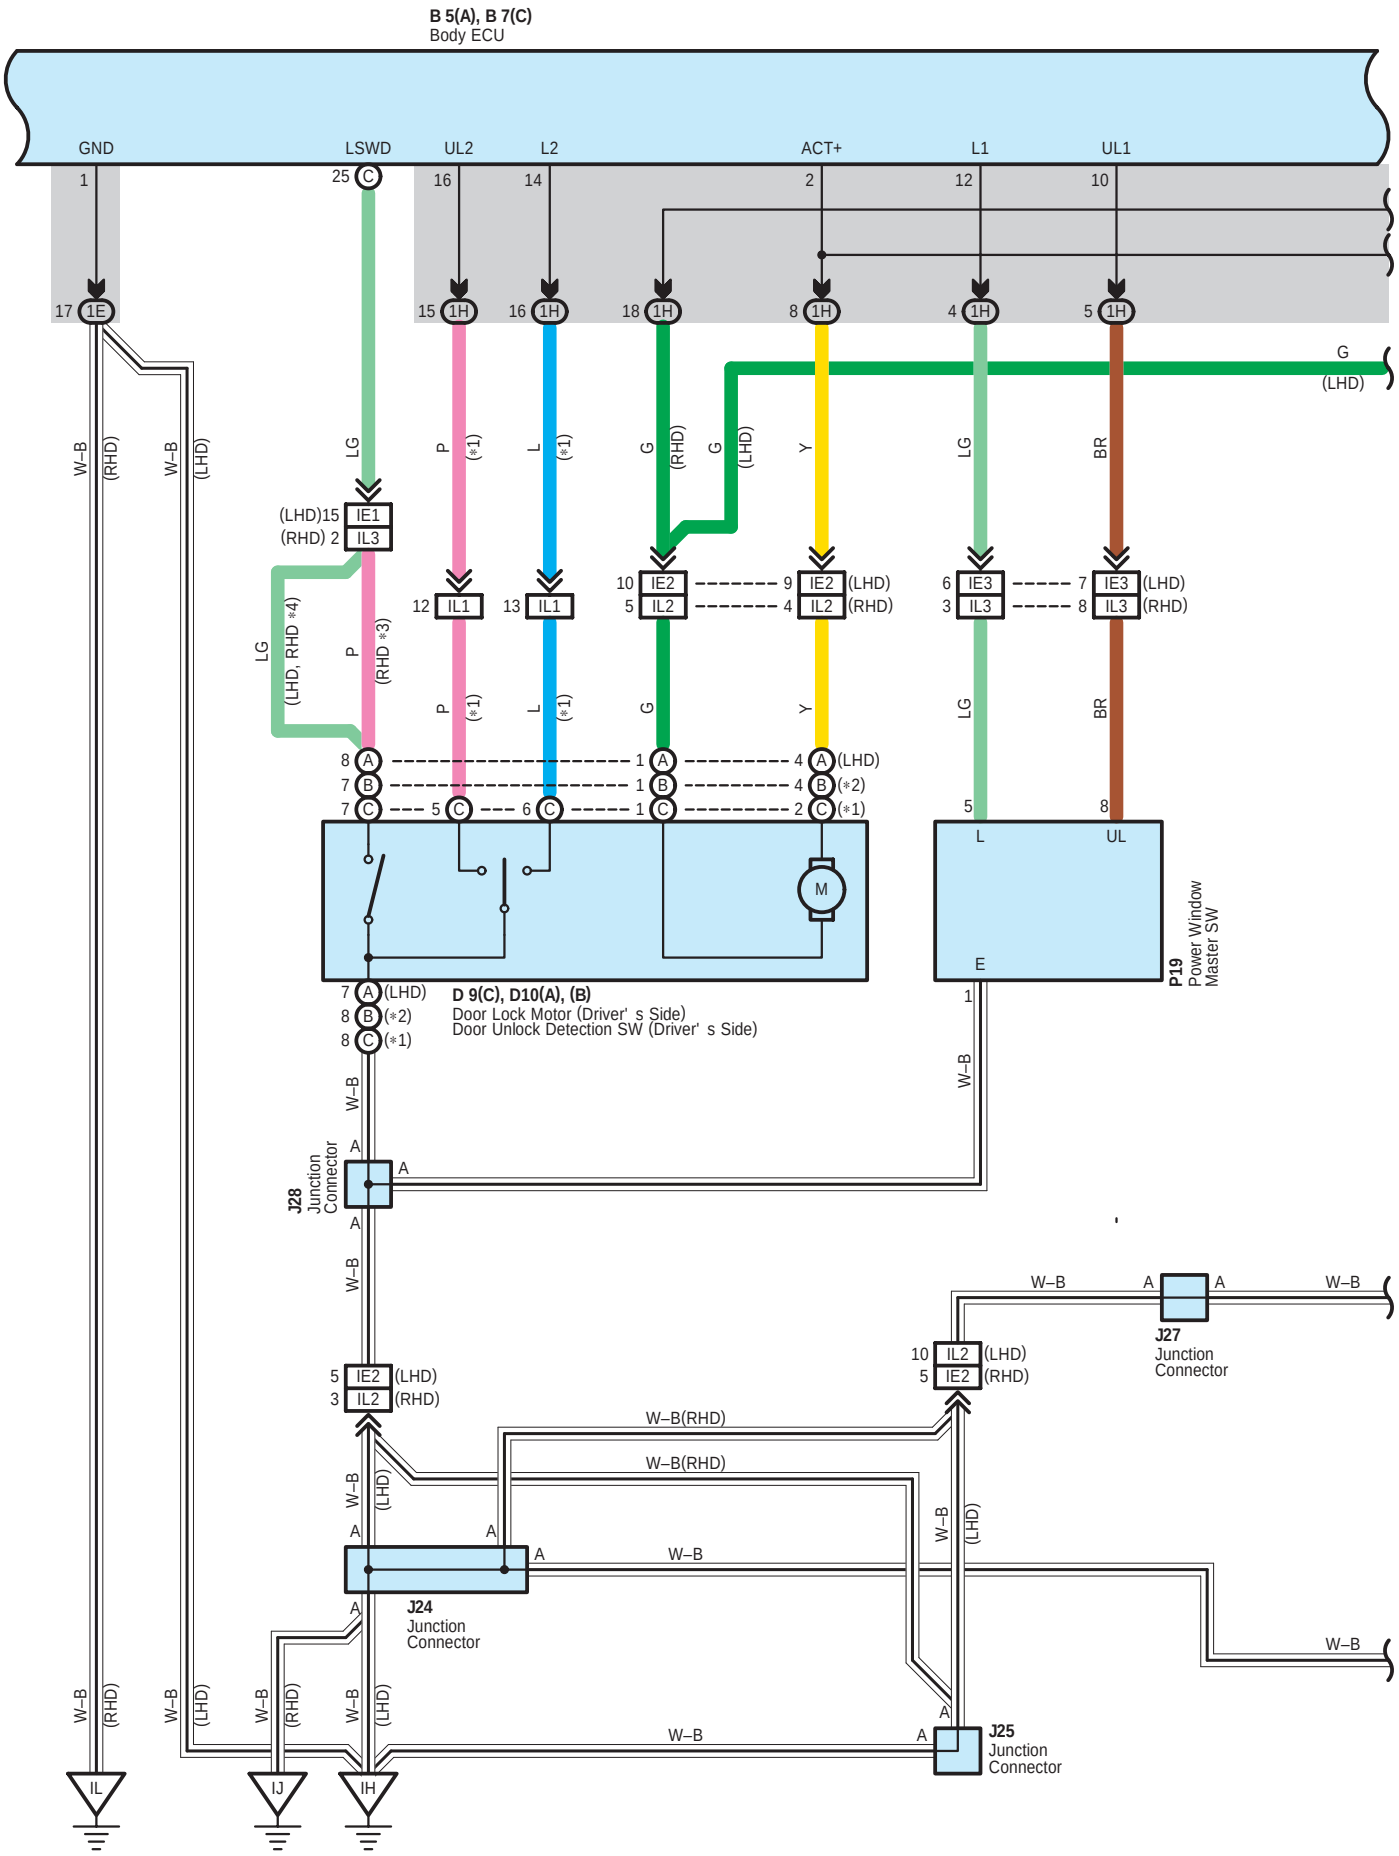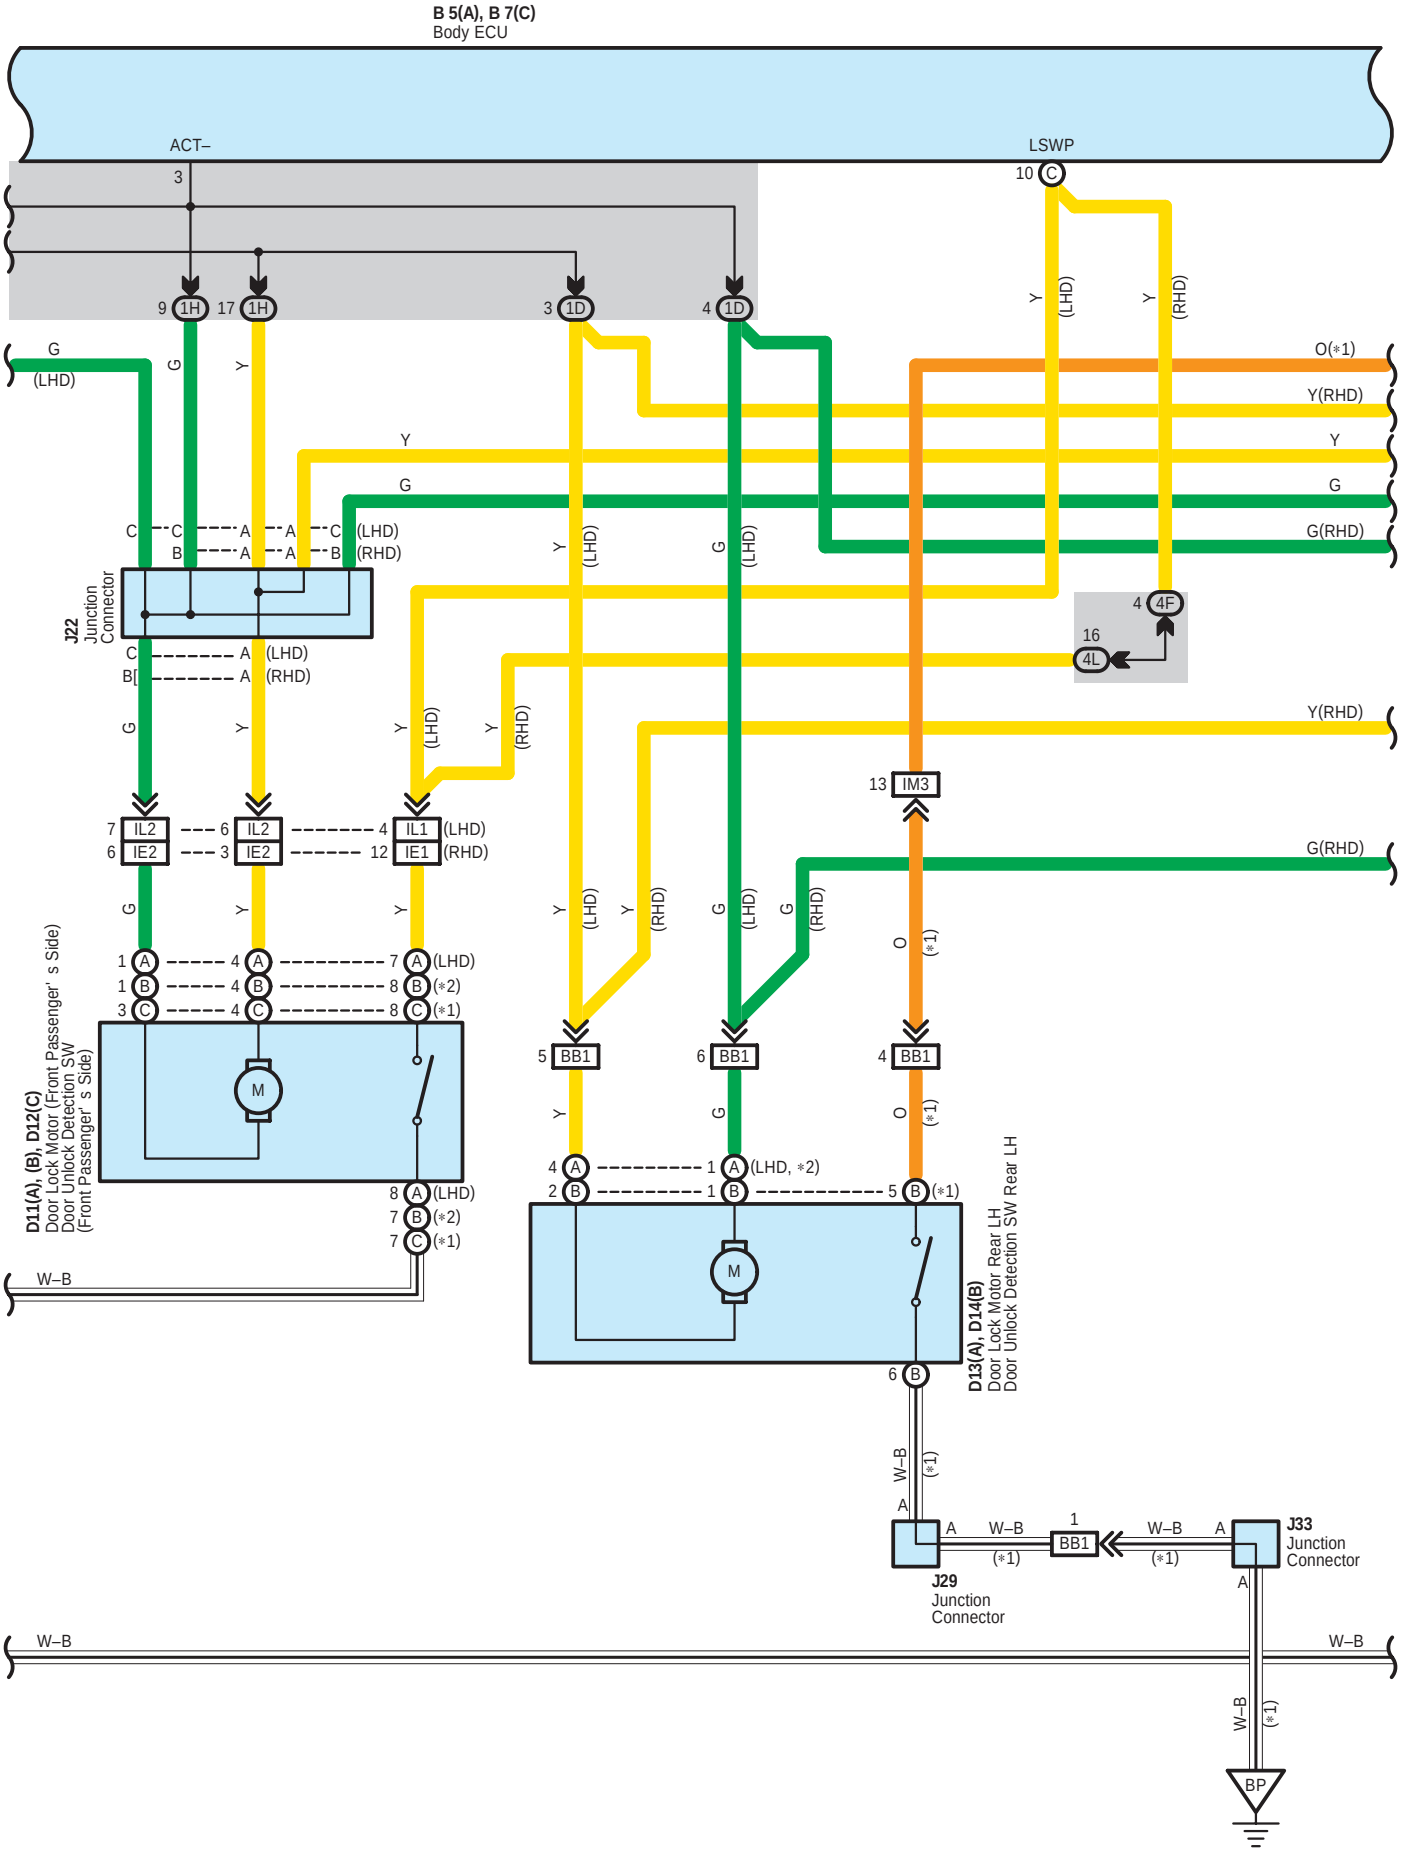

∗ 1 : RHD Except Australia, Singapore, Hong Kong
∗ 2 : Australia, Singapore, Hong Kong
∗ 3 : w/ Smart Entry System
∗ 4 : w/o Smart Entry System


B 5(A), B 7(C)
Body ECU
GND
LSWD
UL2
L2
ACT+
L1
UL1
D 9(C), D10(A), (B)
Door Lock Motor (Driver' s Side)
Door Unlock Detection SW (Driver' s Side)
P19
Power Window
Master SW
J28
Junction
Connector
J24
Junction
Connector
J27
Junction
Connector
J25
Junction
Connector
W–B(RHD)


B 5(A), B 7(C)
Body ECU
ACT–
LSWP
J22
Junction
Connector
D11(A), (B), D12(C)
Door Lock Motor (Front Passenger's Side)
Door Unlock Detection SW
(Front Passenger's Side)
D13(A), D14(B)
Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
J29
Junction
Connector
J33
Junction
Connector
W–B
BP

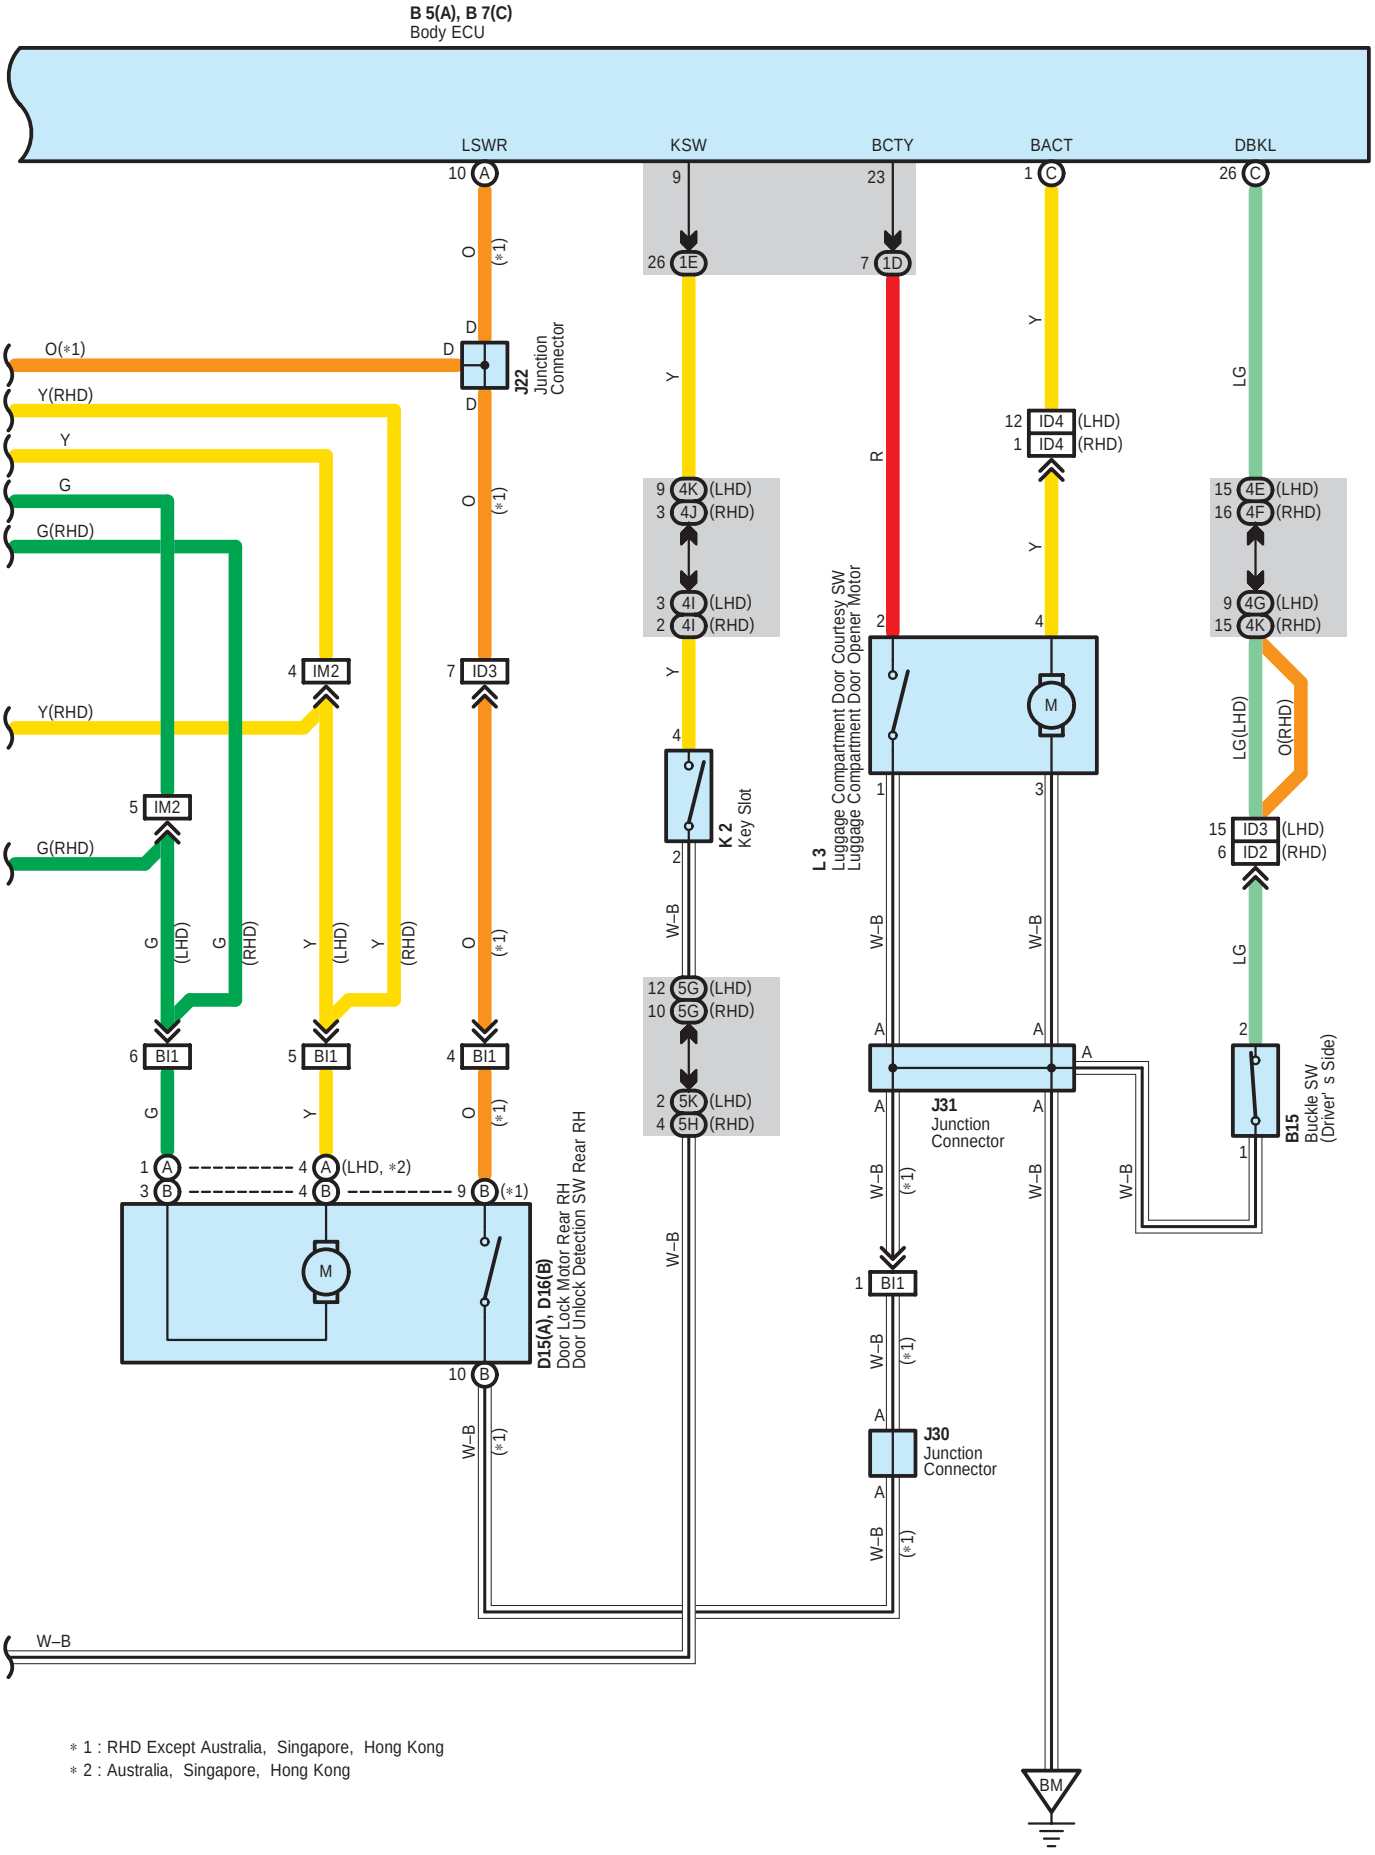

* 1 : RHD Except Australia, Singapore, Hong Kong
* 2 : Australia, Singapore, Hong Kong