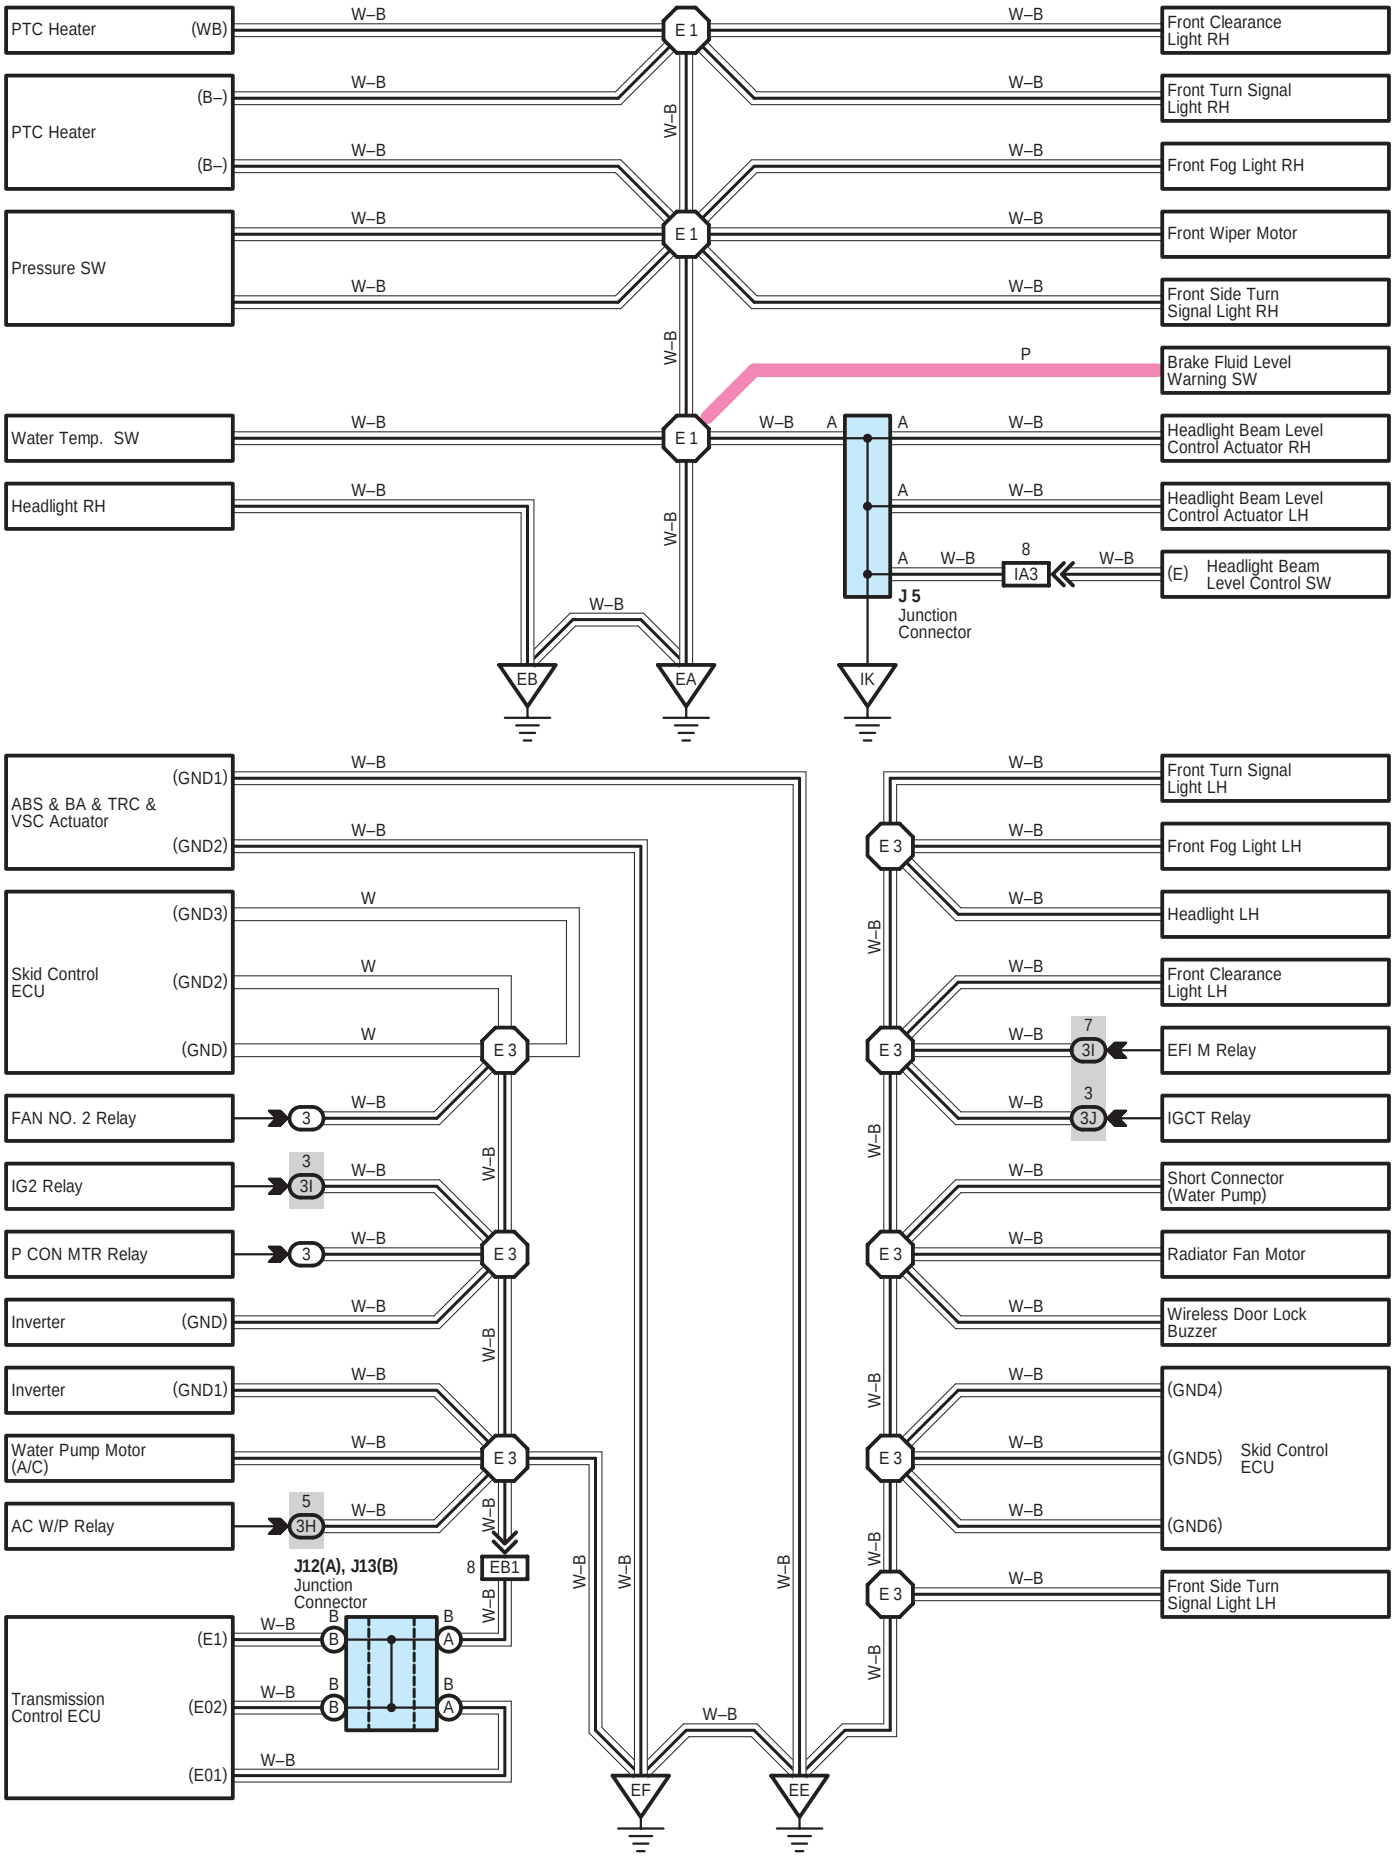
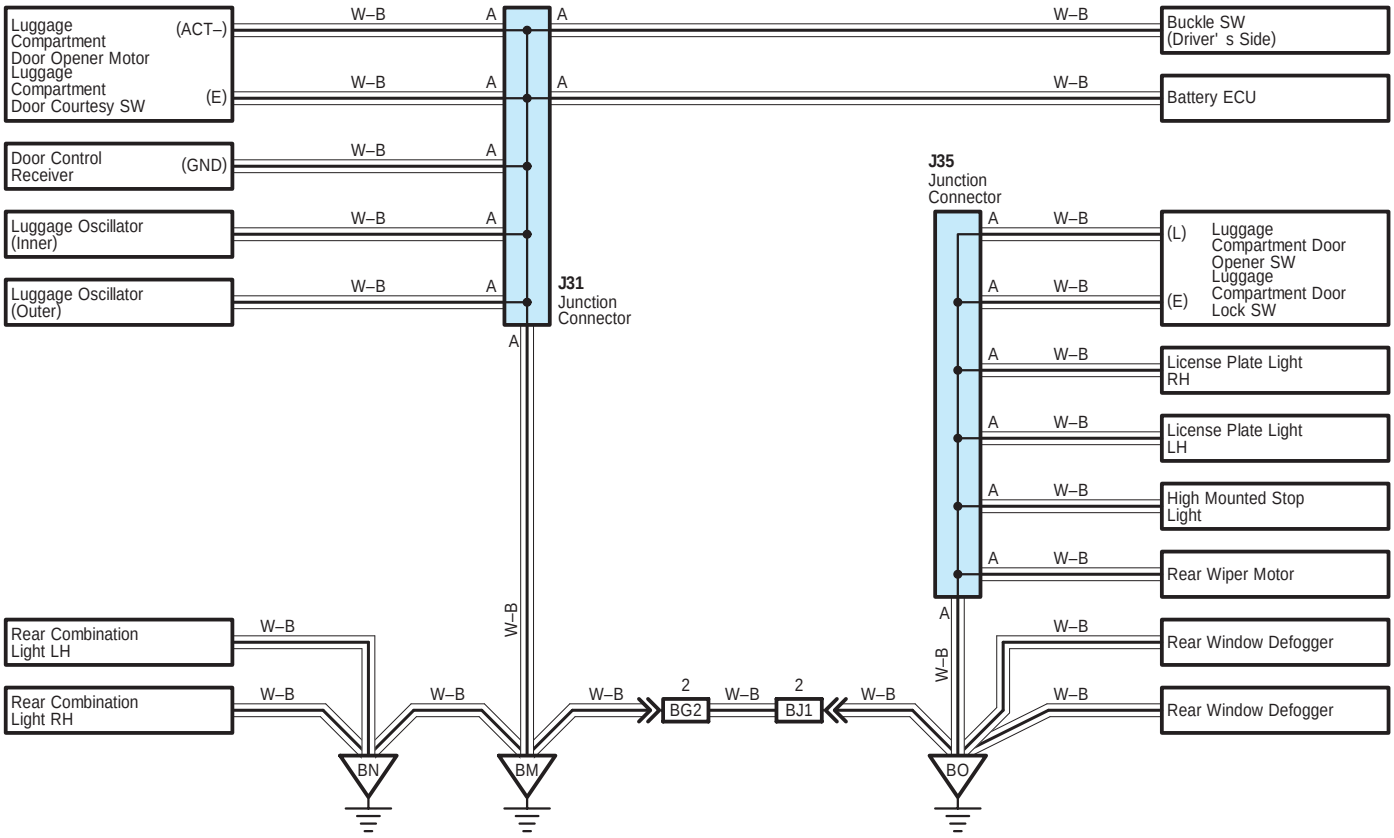
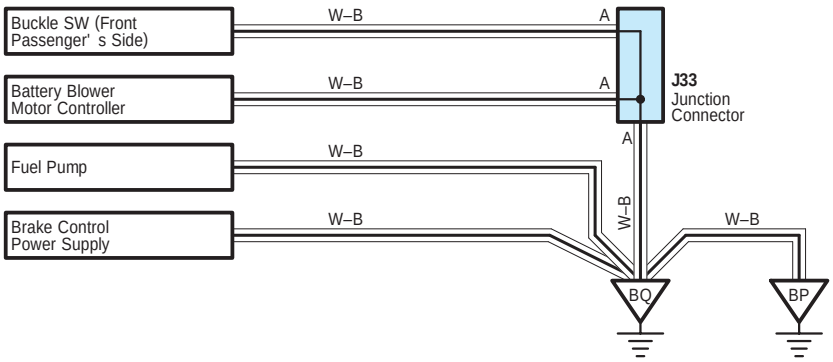
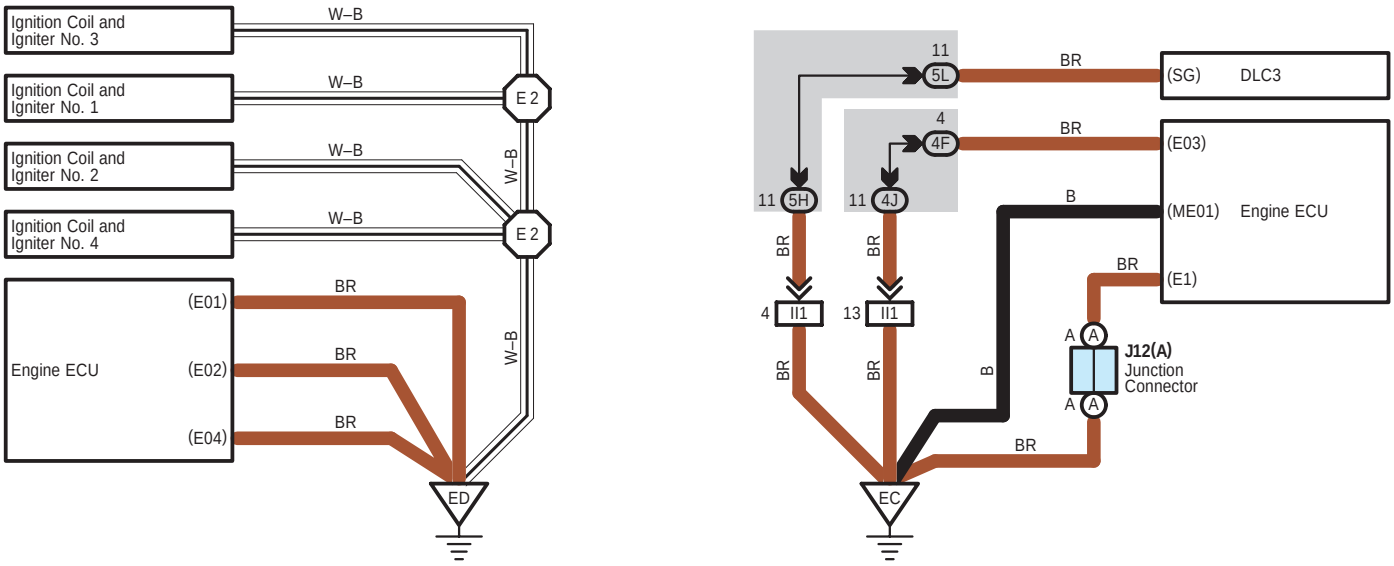
I GROUND POINT (LHD)

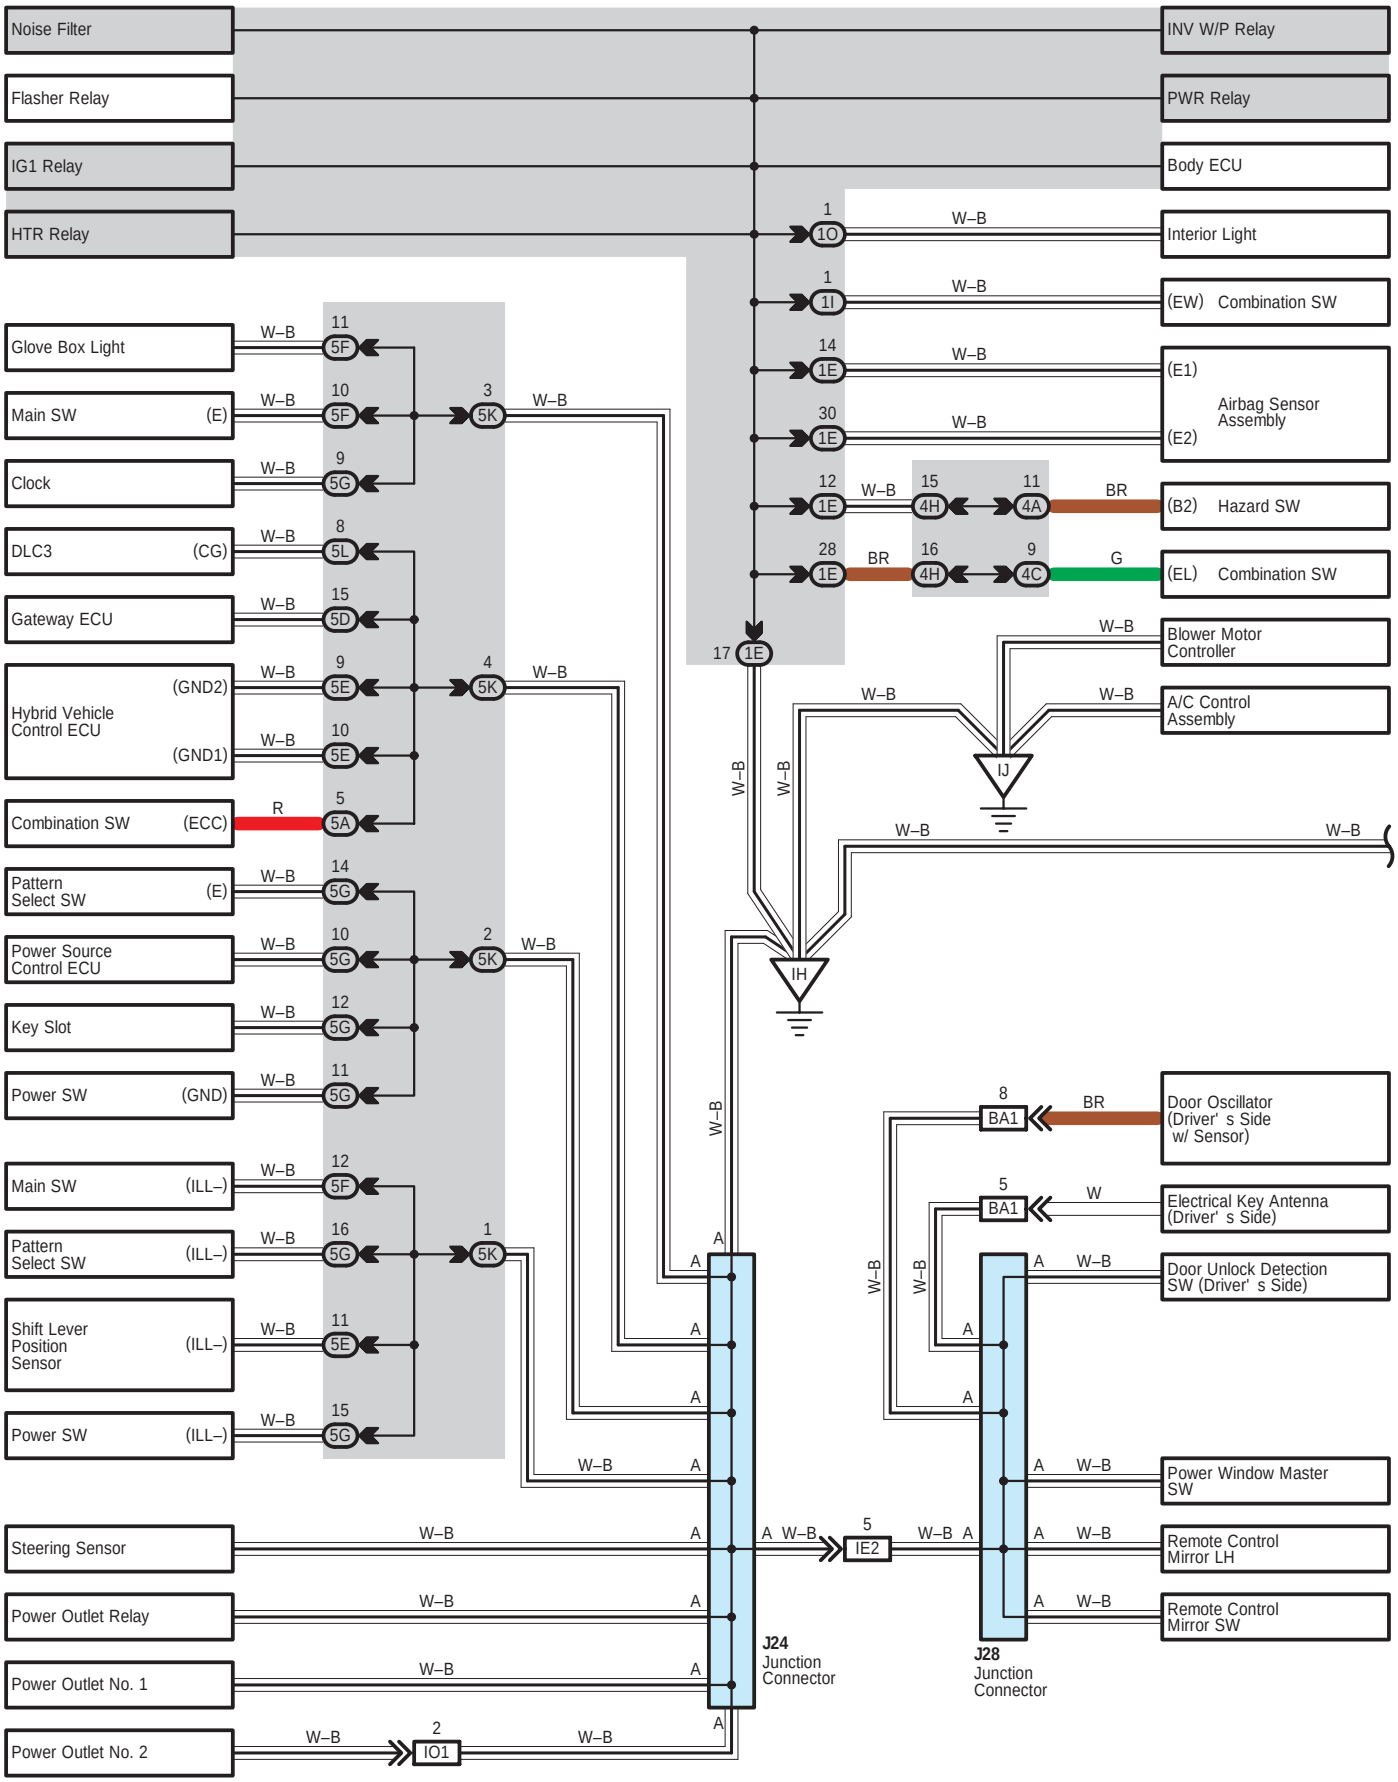


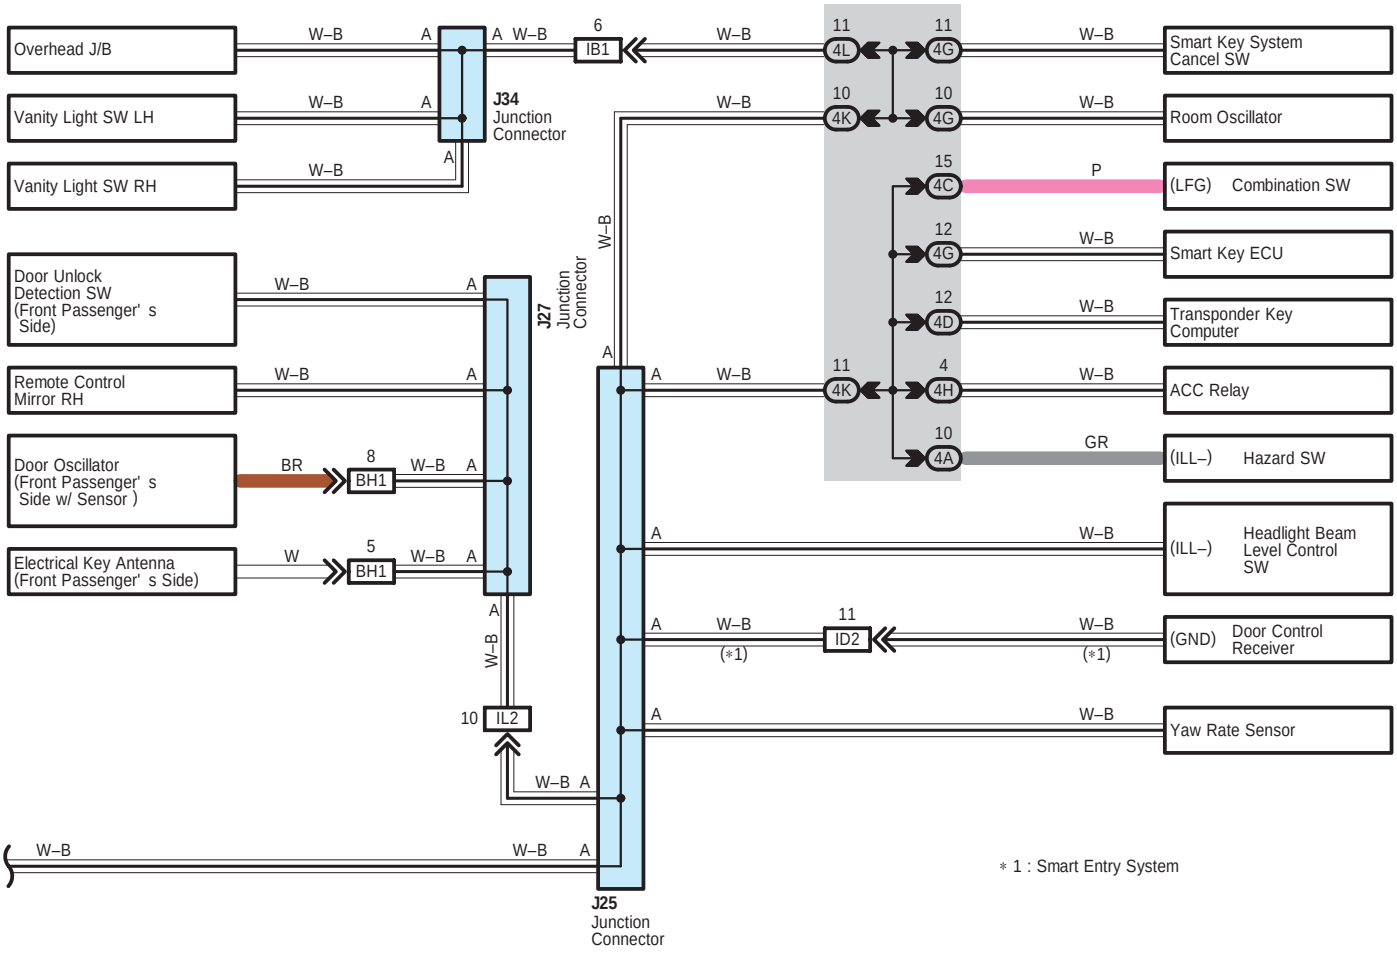

Luggage Compartment Door Opener Motor
Luggage Compartment Door Courtesy SW
(ACT–)
(E)
Door Control Receiver
(GND)
Luggage Oscillator (Inner)
Luggage Oscillator (Outer)
W–B
A
J31
Junction Connector
J35
Junction Connector
Buckle SW (Driver' s Side)
Battery ECU
(L) Luggage Compartment Door Opener SW
(E) Luggage Compartment Door Lock SW
License Plate Light RH
License Plate Light LH
High Mounted Stop Light
Rear Wiper Motor
Rear Window Defogger
Rear Combination Light LH
Rear Combination Light RH
2
BG2
BJ1
BN
BM
BO

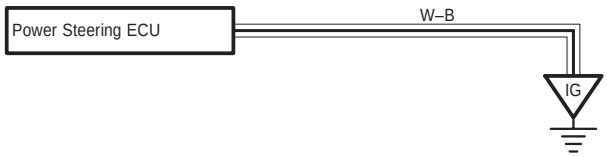

Buckle SW (Front Passenger' s Side)
Battery Blower Motor Controller
Fuel Pump
Brake Control Power Supply
W–B
A
J33
Junction Connector
BQ
BP

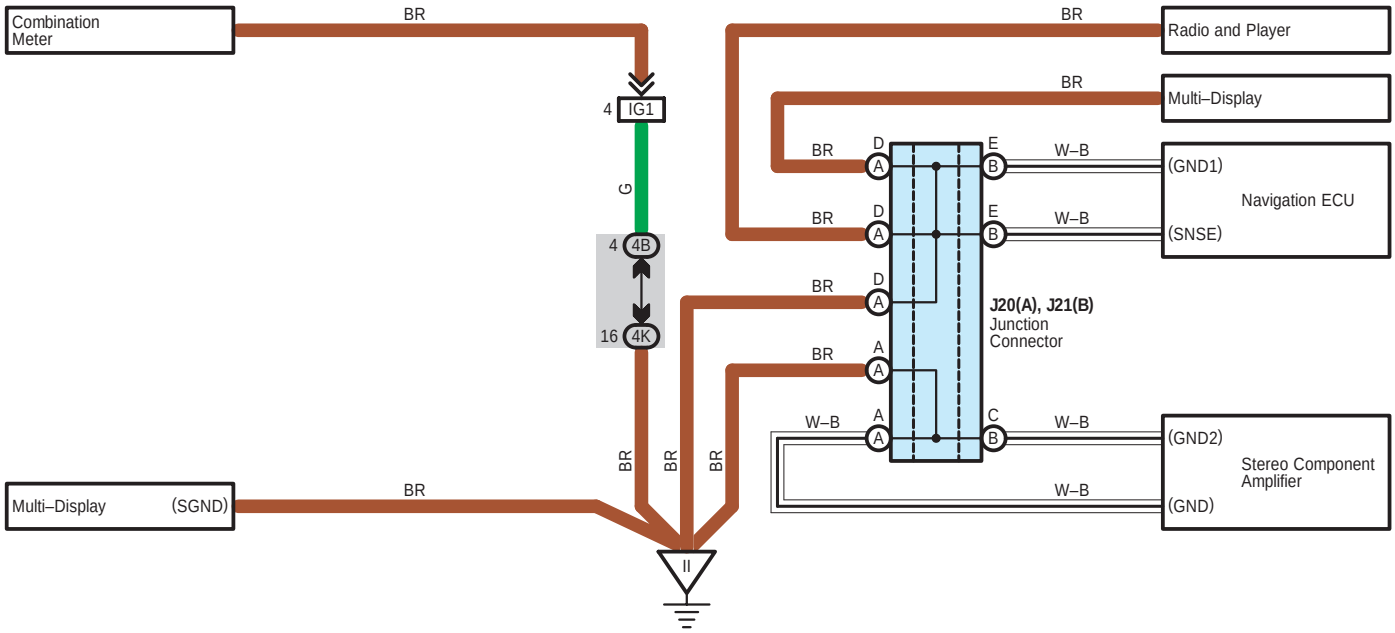

Ignition Coil and Igniter No. 3
Ignition Coil and Igniter No. 1
Ignition Coil and Igniter No. 2
Ignition Coil and Igniter No. 4
E 2
Engine ECU
(E01)
(E02)
(E04)
BR
ED
11
5L
4
4F
11 5H
11 4J
4 I1
13 I1
(SG) DLC3
(E03)
(ME01) Engine ECU
(E1)
B
J12(A)
Junction Connector
EC

I GROUND POINT (LHD)




Overhead J/B
Vanity Light SW LH
Vanity Light SW RH
Door Unlock Detection SW (Front Passenger' s Side)
Remote Control Mirror RH
Door Oscillator (Front Passenger' s Side w/ Sensor)
Electrical Key Antenna (Front Passenger' s Side)
J34 Junction Connector
J27 Junction Connector
J25 Junction Connector
IB1
IL2
BH1
ID2
4L
4G
4K
4C
4D
4H
4A
Smart Key System Cancel SW
Room Oscillator
(LFG) Combination SW
Smart Key ECU
Transponder Key Computer
ACC Relay
(ILL–) Hazard SW
(ILL–) Headlight Beam Level Control SW
(GND) Door Control Receiver
Yaw Rate Sensor
(*1)
* 1 : Smart Entry System


Power Steering ECU
IG


Combination Meter
IG1
4B
4K
Multi–Display (SGND)
J20(A), J21(B) Junction Connector
Radio and Player
Multi–Display
(GND1) Navigation ECU (SNSE)
(GND2) Stereo Component Amplifier
(GND)