



I GROUND POINT (RHD)

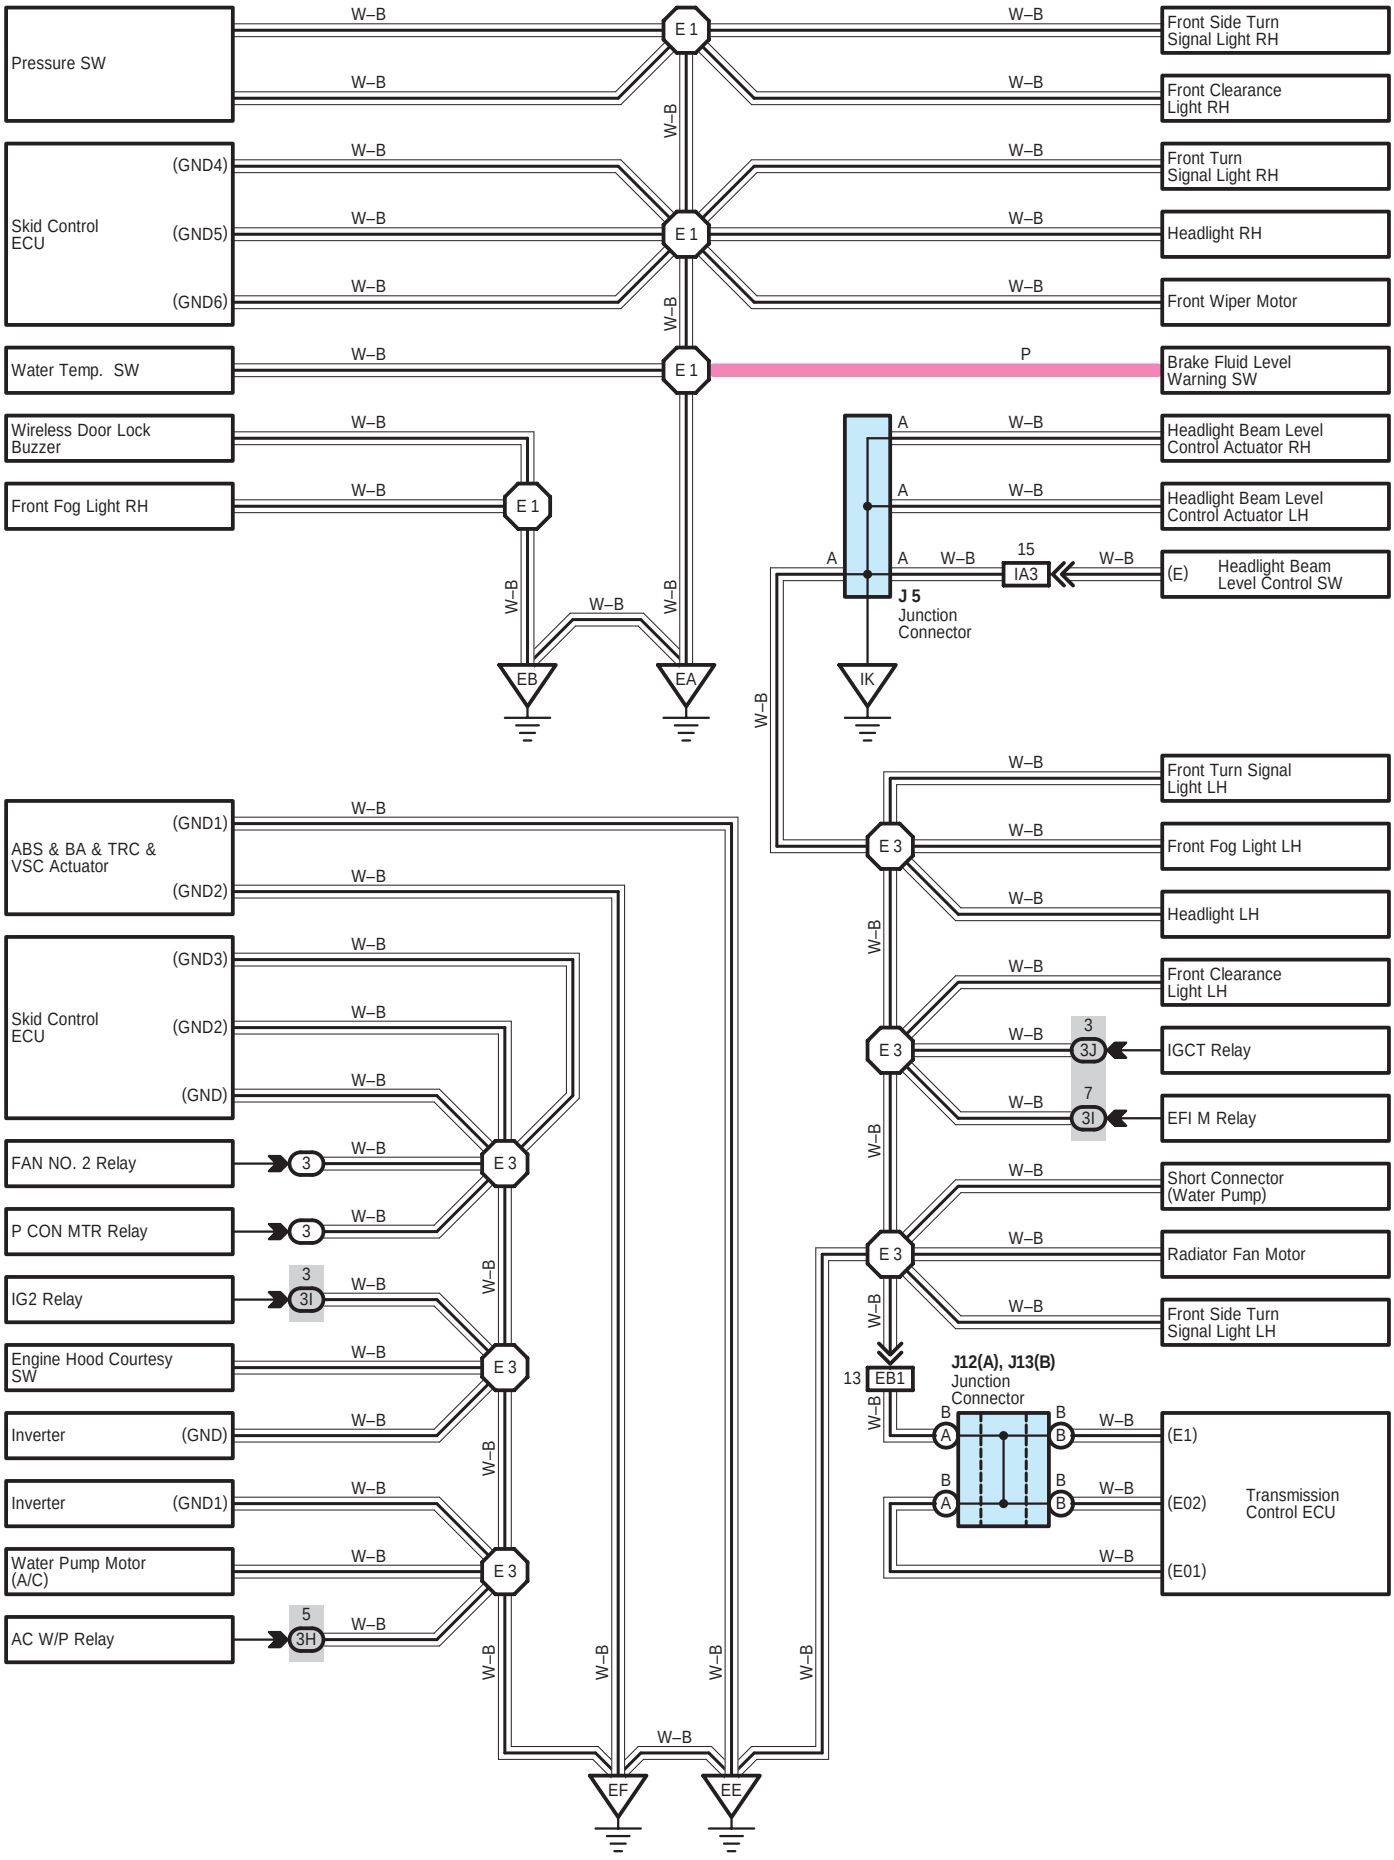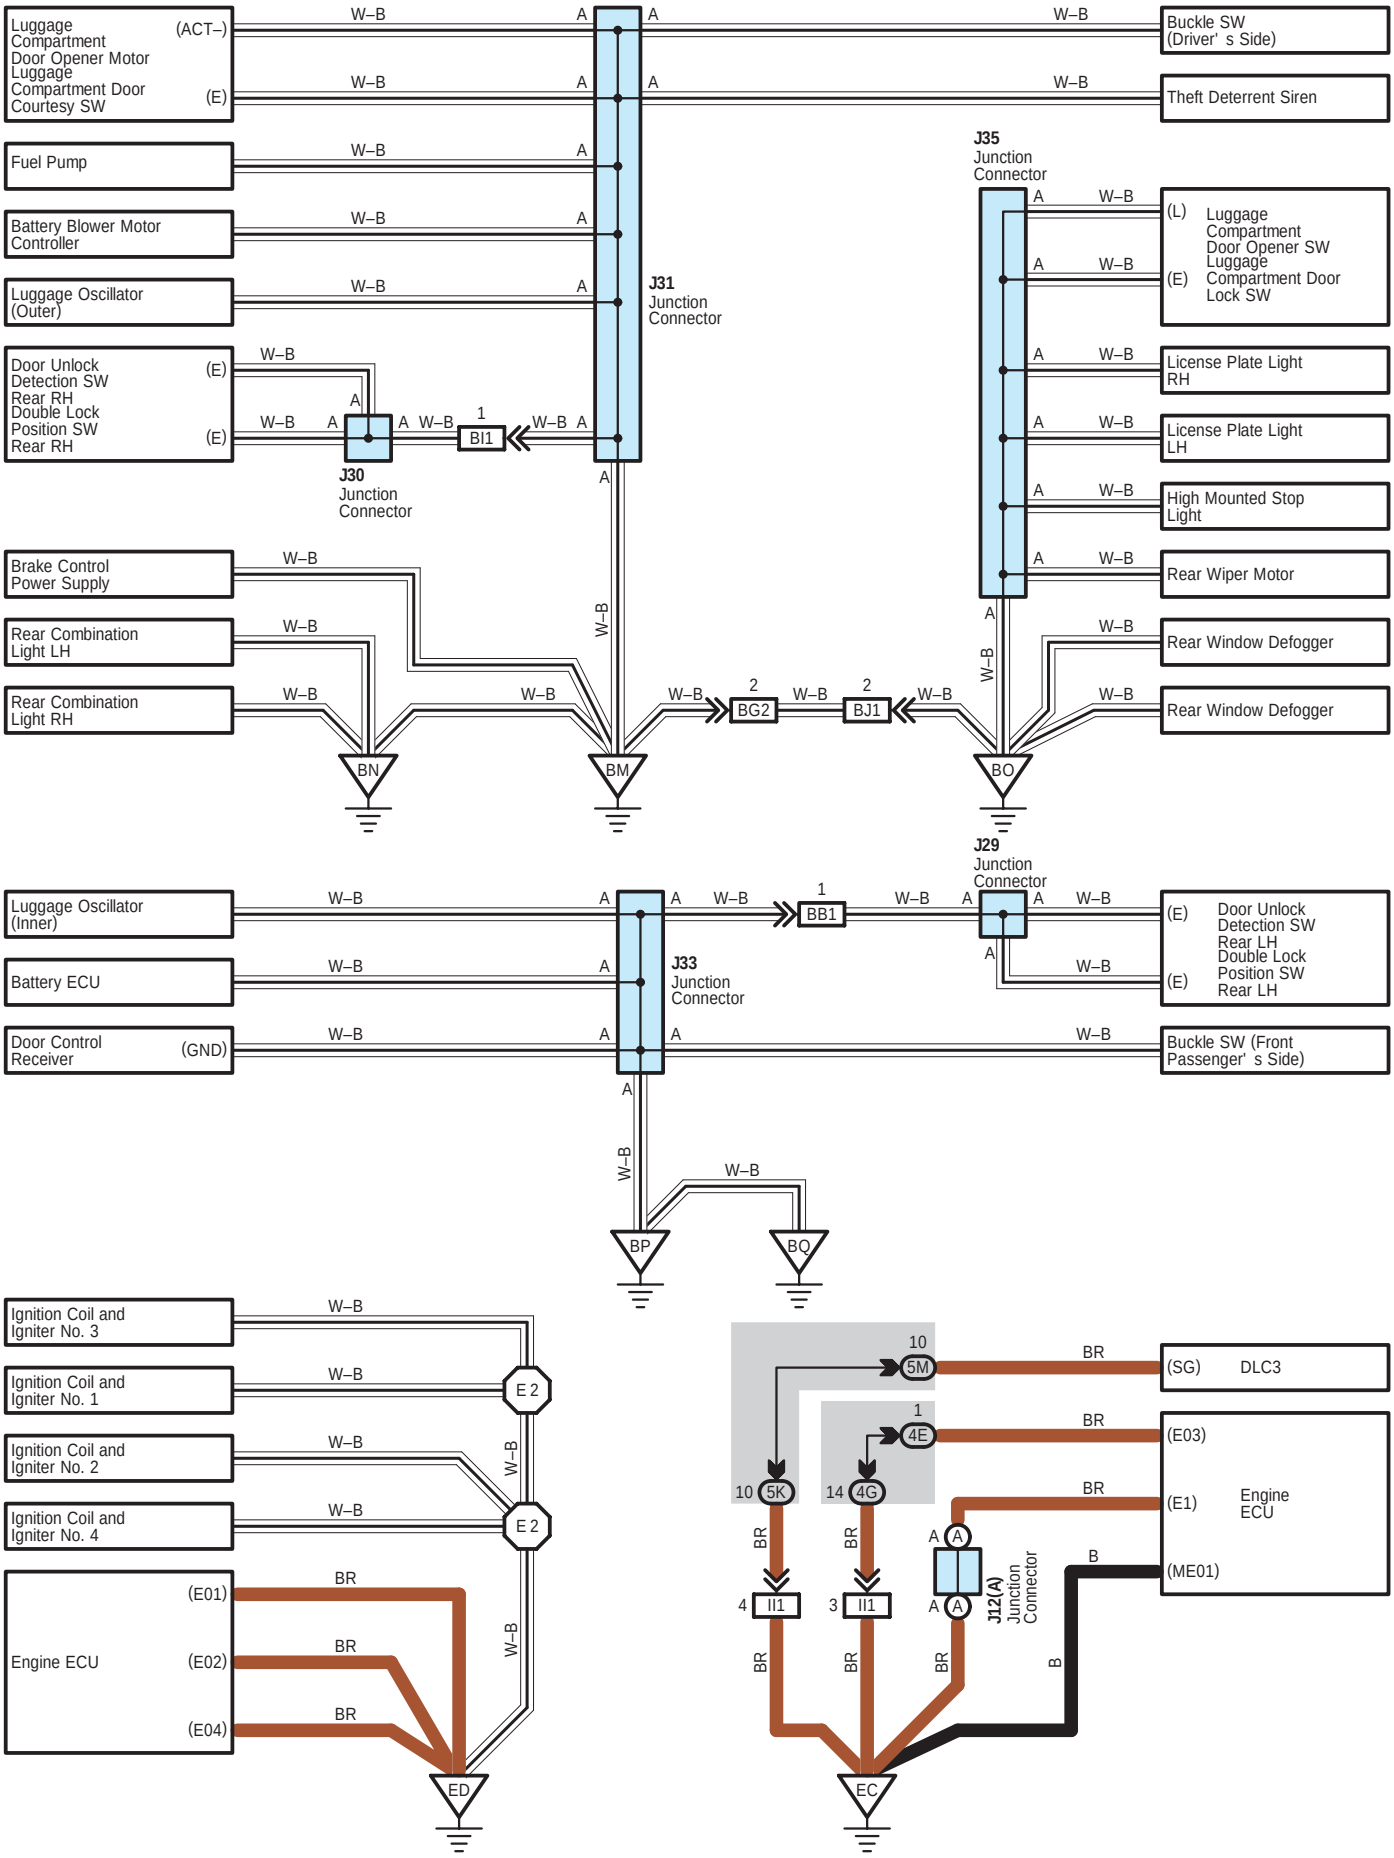


Luggage Compartment Door Opener Motor
Luggage Compartment Door Courtesy SW
(ACT–)
(E)
Fuel Pump
Battery Blower Motor Controller
Luggage Oscillator (Outer)
Door Unlock Detection SW Rear RH
Double Lock Position SW Rear RH
(E)
(E)
J30 Junction Connector
BI1
J31 Junction Connector
Brake Control Power Supply
Rear Combination Light LH
Rear Combination Light RH
BN
BM
BG2
BJ1
BO
Buckle SW (Driver' s Side)
Theft Deterrent Siren
J35 Junction Connector
(L) Luggage Compartment Door Opener SW
(E) Luggage Compartment Door Lock SW
License Plate Light RH
License Plate Light LH
High Mounted Stop Light
Rear Wiper Motor
Rear Window Defogger
Rear Window Defogger
Luggage Oscillator (Inner)
Battery ECU
Door Control Receiver
(GND)
BB1
J33 Junction Connector
BP
BQ
J29 Junction Connector
(E) Door Unlock Detection SW Rear LH
(E) Double Lock Position SW Rear LH
Buckle SW (Front Passenger' s Side)
Ignition Coil and Igniter No. 3
Ignition Coil and Igniter No. 1
Ignition Coil and Igniter No. 2
Ignition Coil and Igniter No. 4
E 2
E 2
Engine ECU
(E01)
(E02)
(E04)
ED
10 5M
1 4E
10 5K
14 4G
4 II1
3 II1
A A
A A
J12(A) Junction Connector
EC
(SG) DLC3
(E03)
(E1) Engine ECU
(ME01)
W–B
BR
B

I GROUND POINT (RHD)

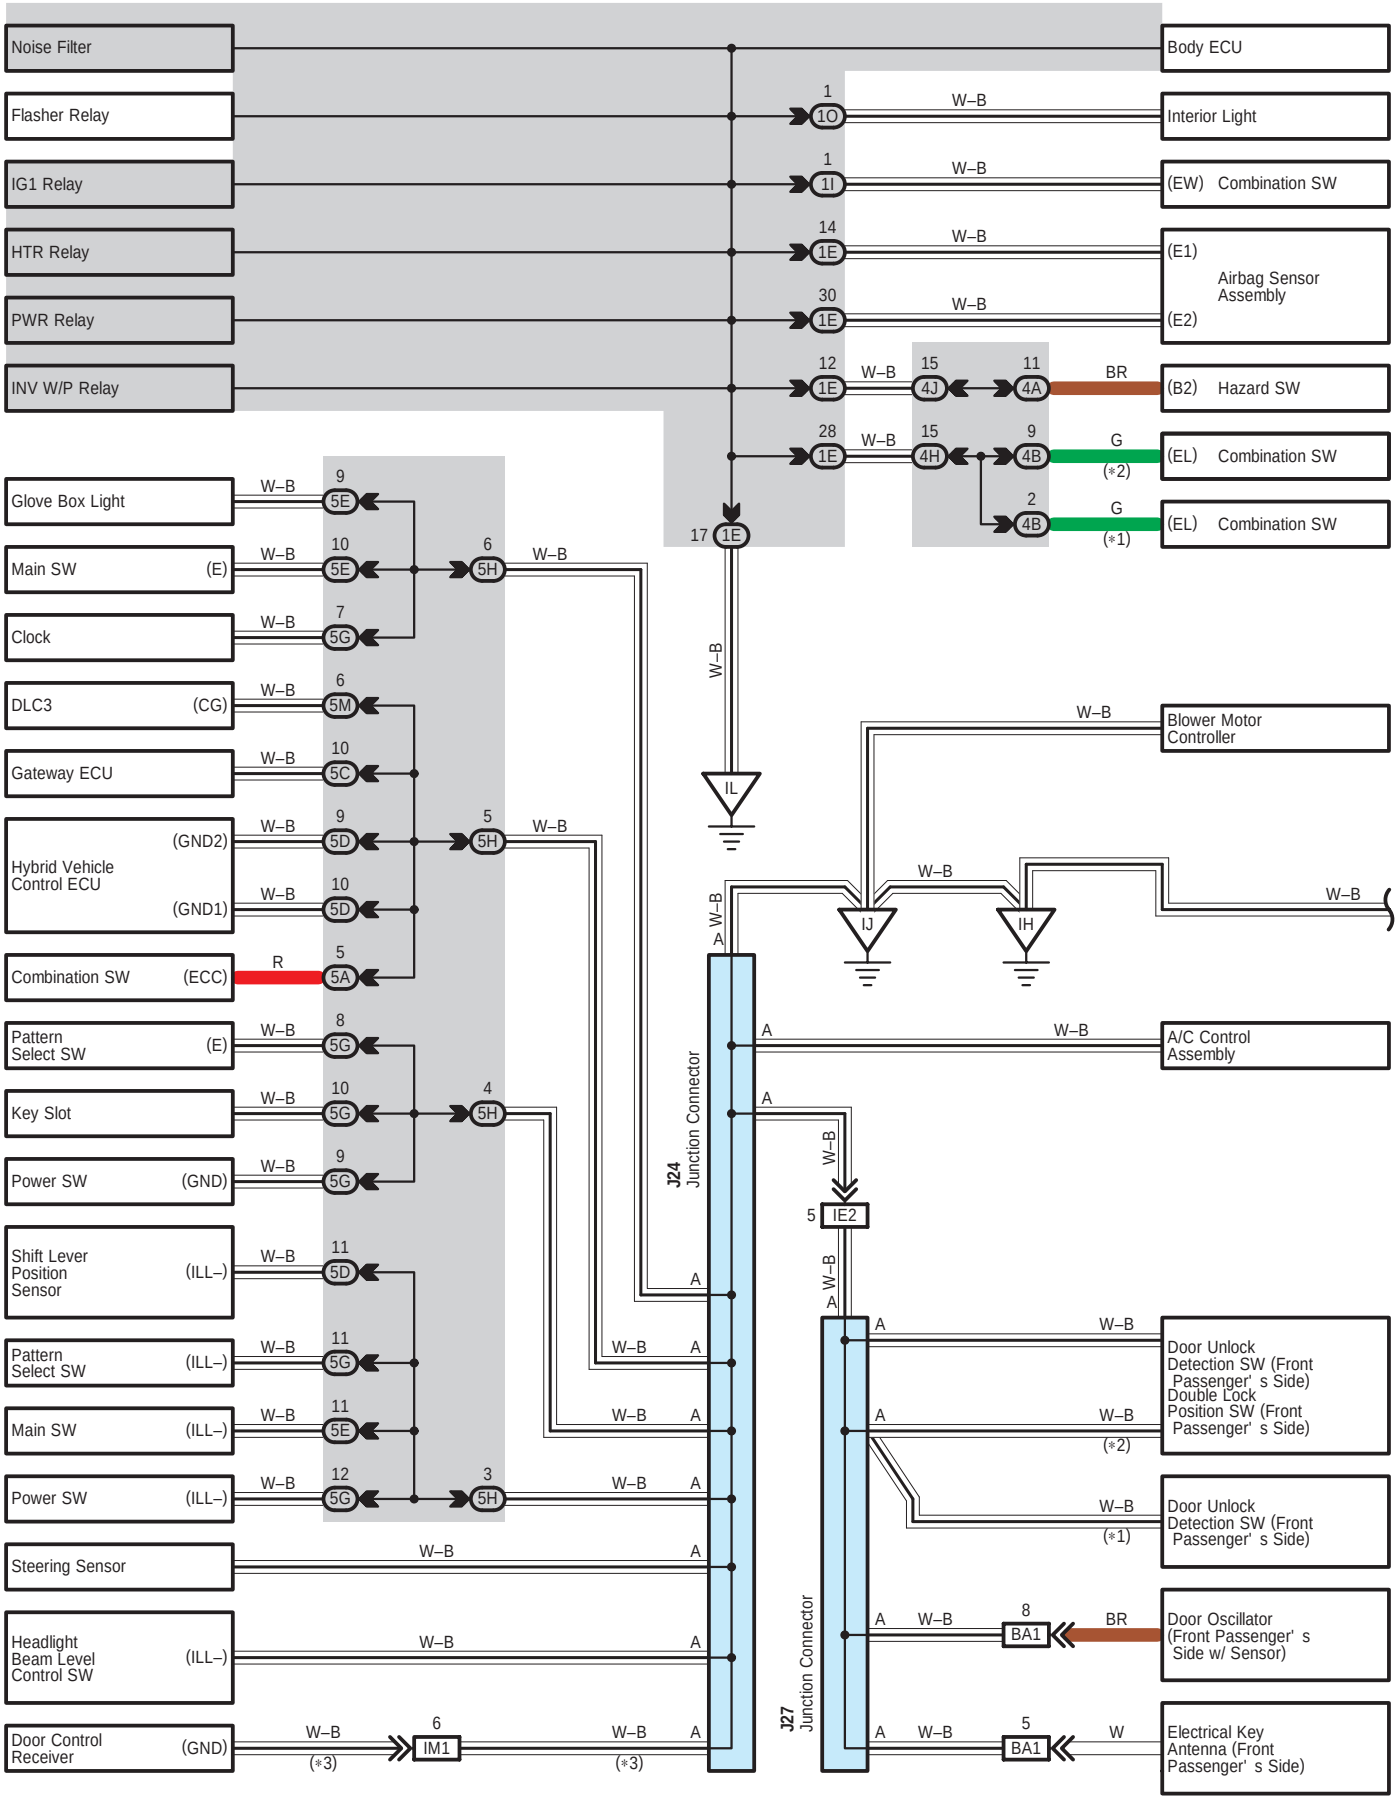

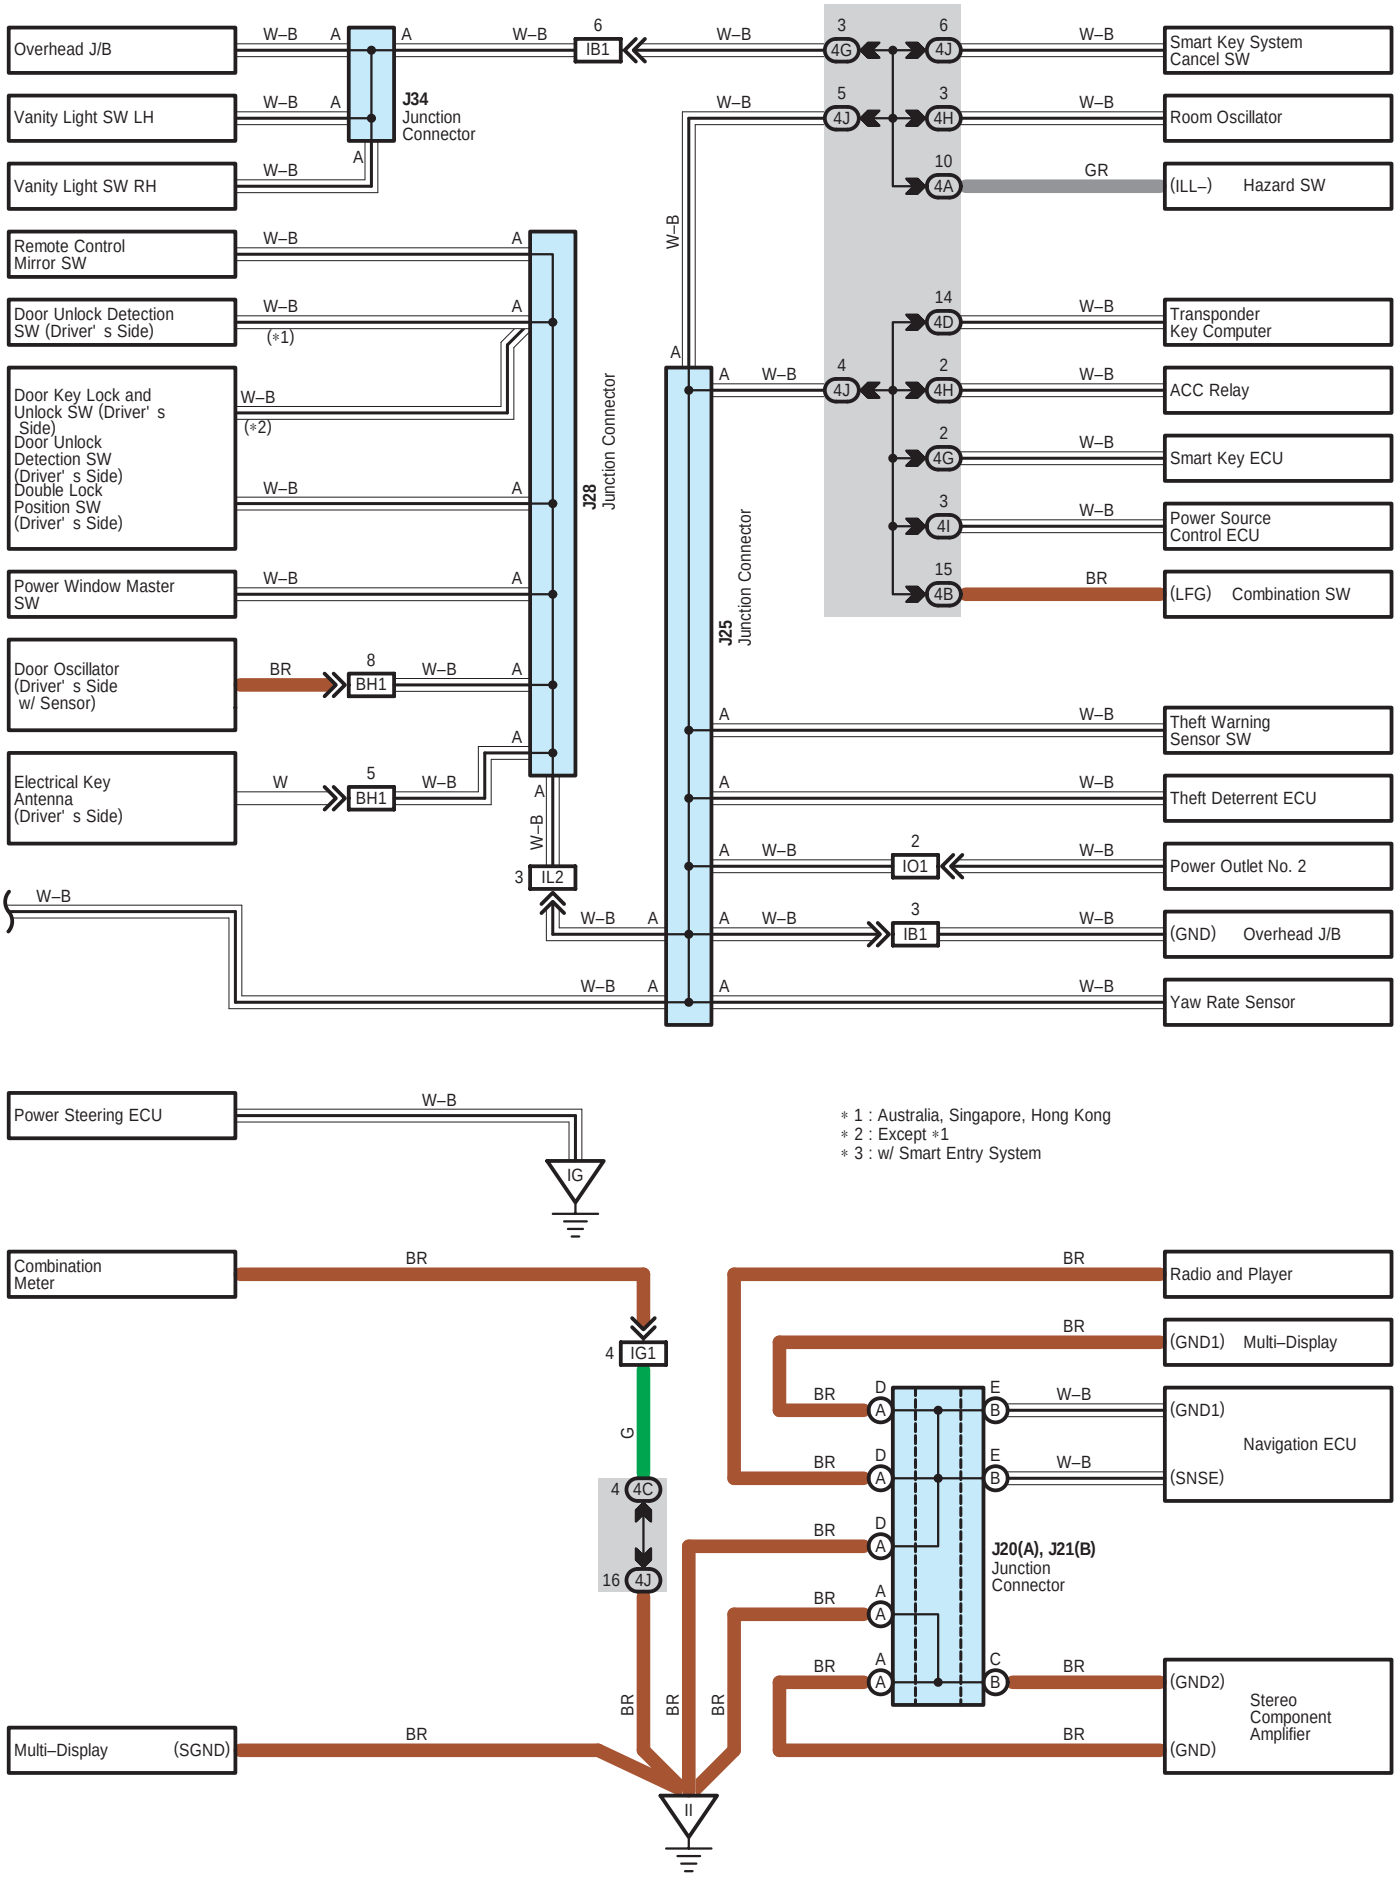

∗ 1 : Australia, Singapore, Hong Kong
∗ 2 : Except ∗1
∗ 3 : w/ Smart Entry System