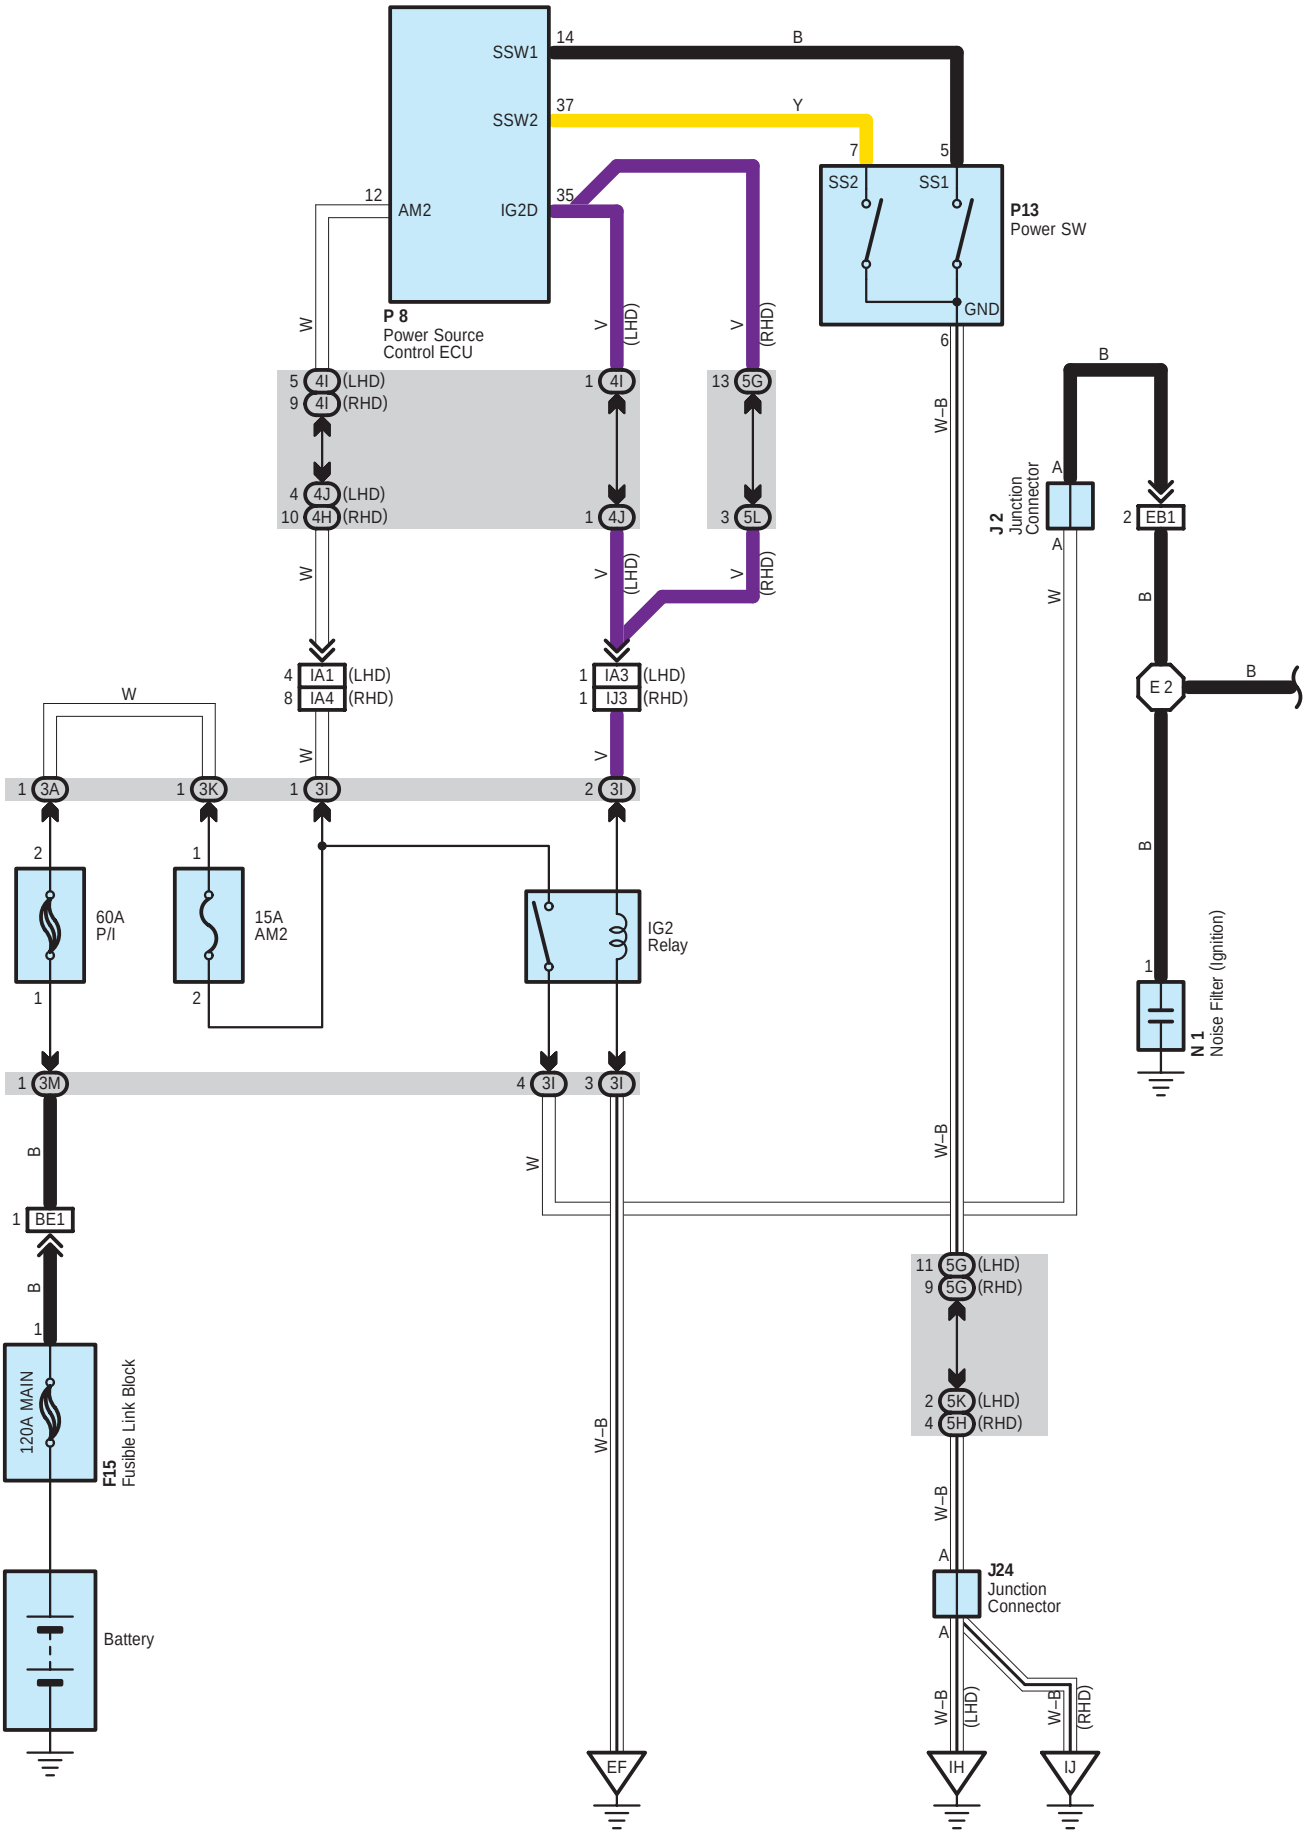
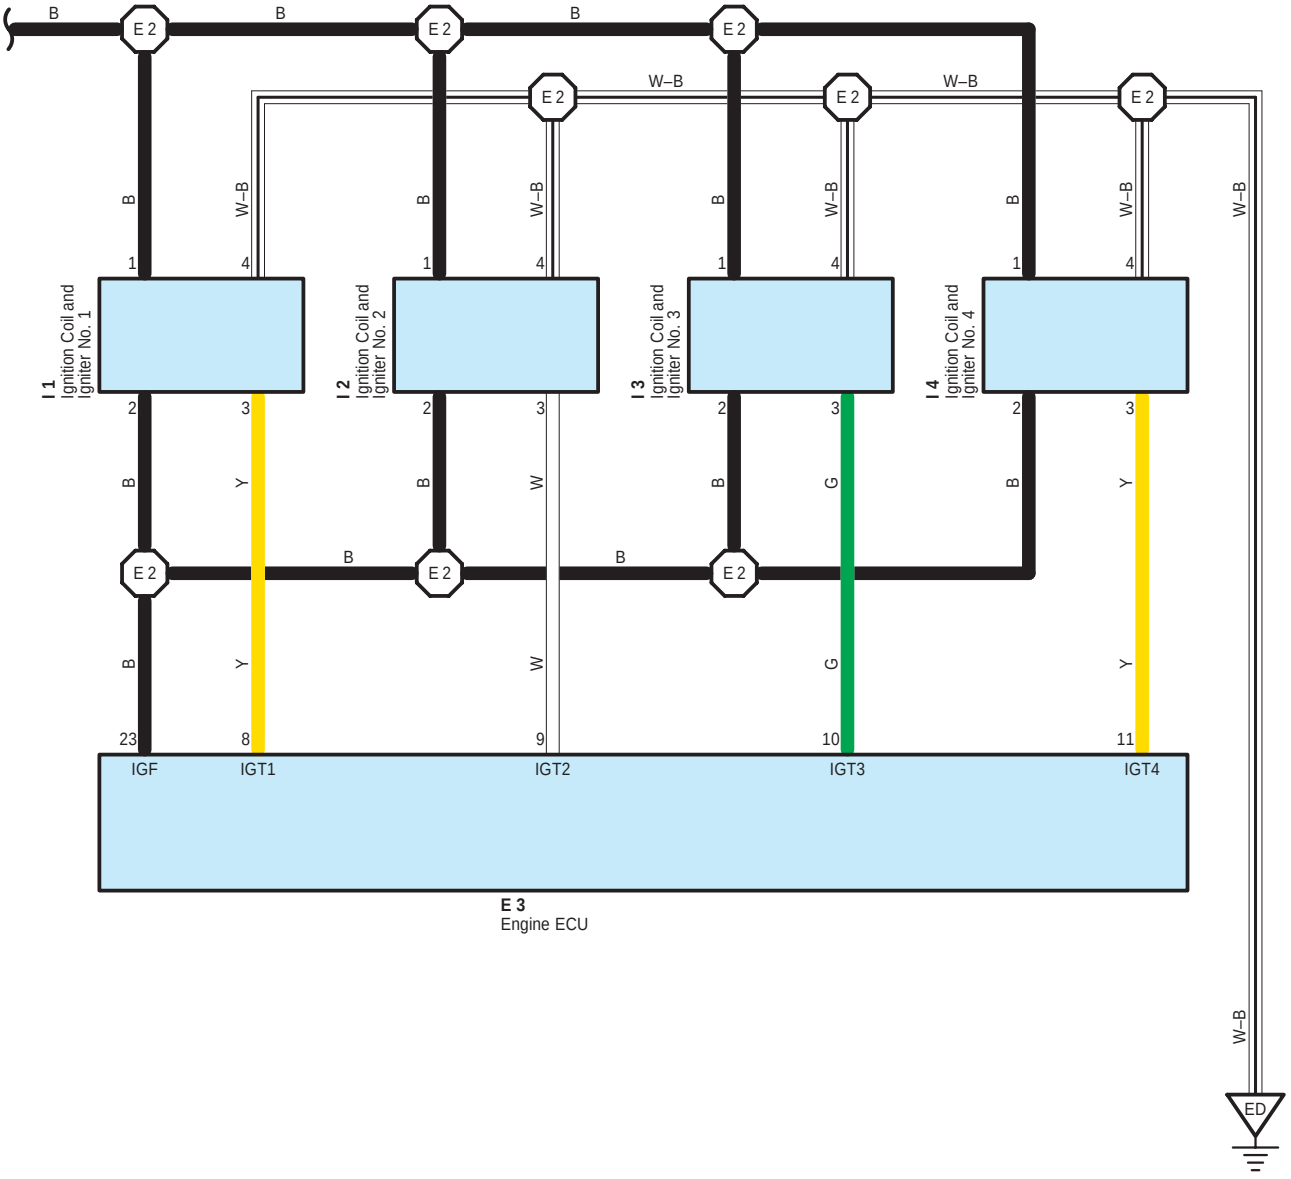

SSW1
SSW2
AM2
IG2D
P 8
Power Source Control ECU
P13
Power SW
SS2
SS1
GND
J 2
Junction Connector
E 2
N 1
Noise Filter (Ignition)
60A P/I
15A AM2
IG2 Relay
F15
Fusible Link Block
120A MAIN
Battery
J24
Junction Connector
EF
IH
IJ
(LHD)
(RHD)
W
B
Y
V
W–B


B
E 2
W–B
I 1
Ignition Coil and Igniter No. 1
I 2
Ignition Coil and Igniter No. 2
I 3
Ignition Coil and Igniter No. 3
I 4
Ignition Coil and Igniter No. 4
Y
W
G
IGF
IGT1
IGT2
IGT3
IGT4
E 3
Engine ECU
ED