



Smart Entry System (RHD) and Wireless Door Lock Control

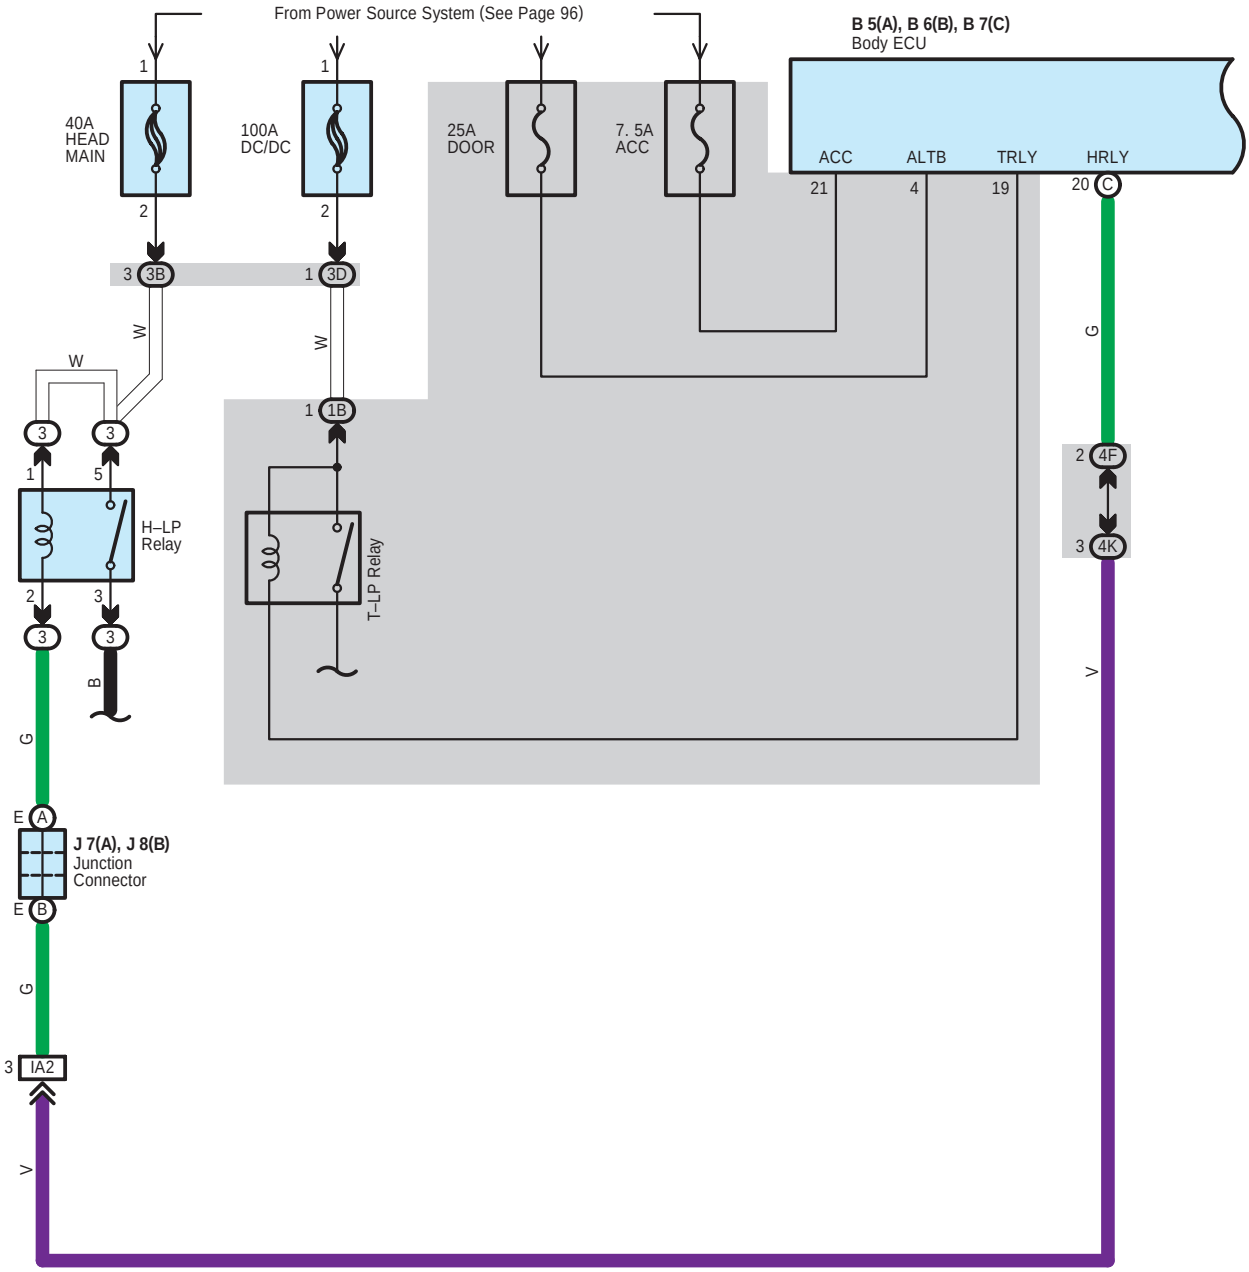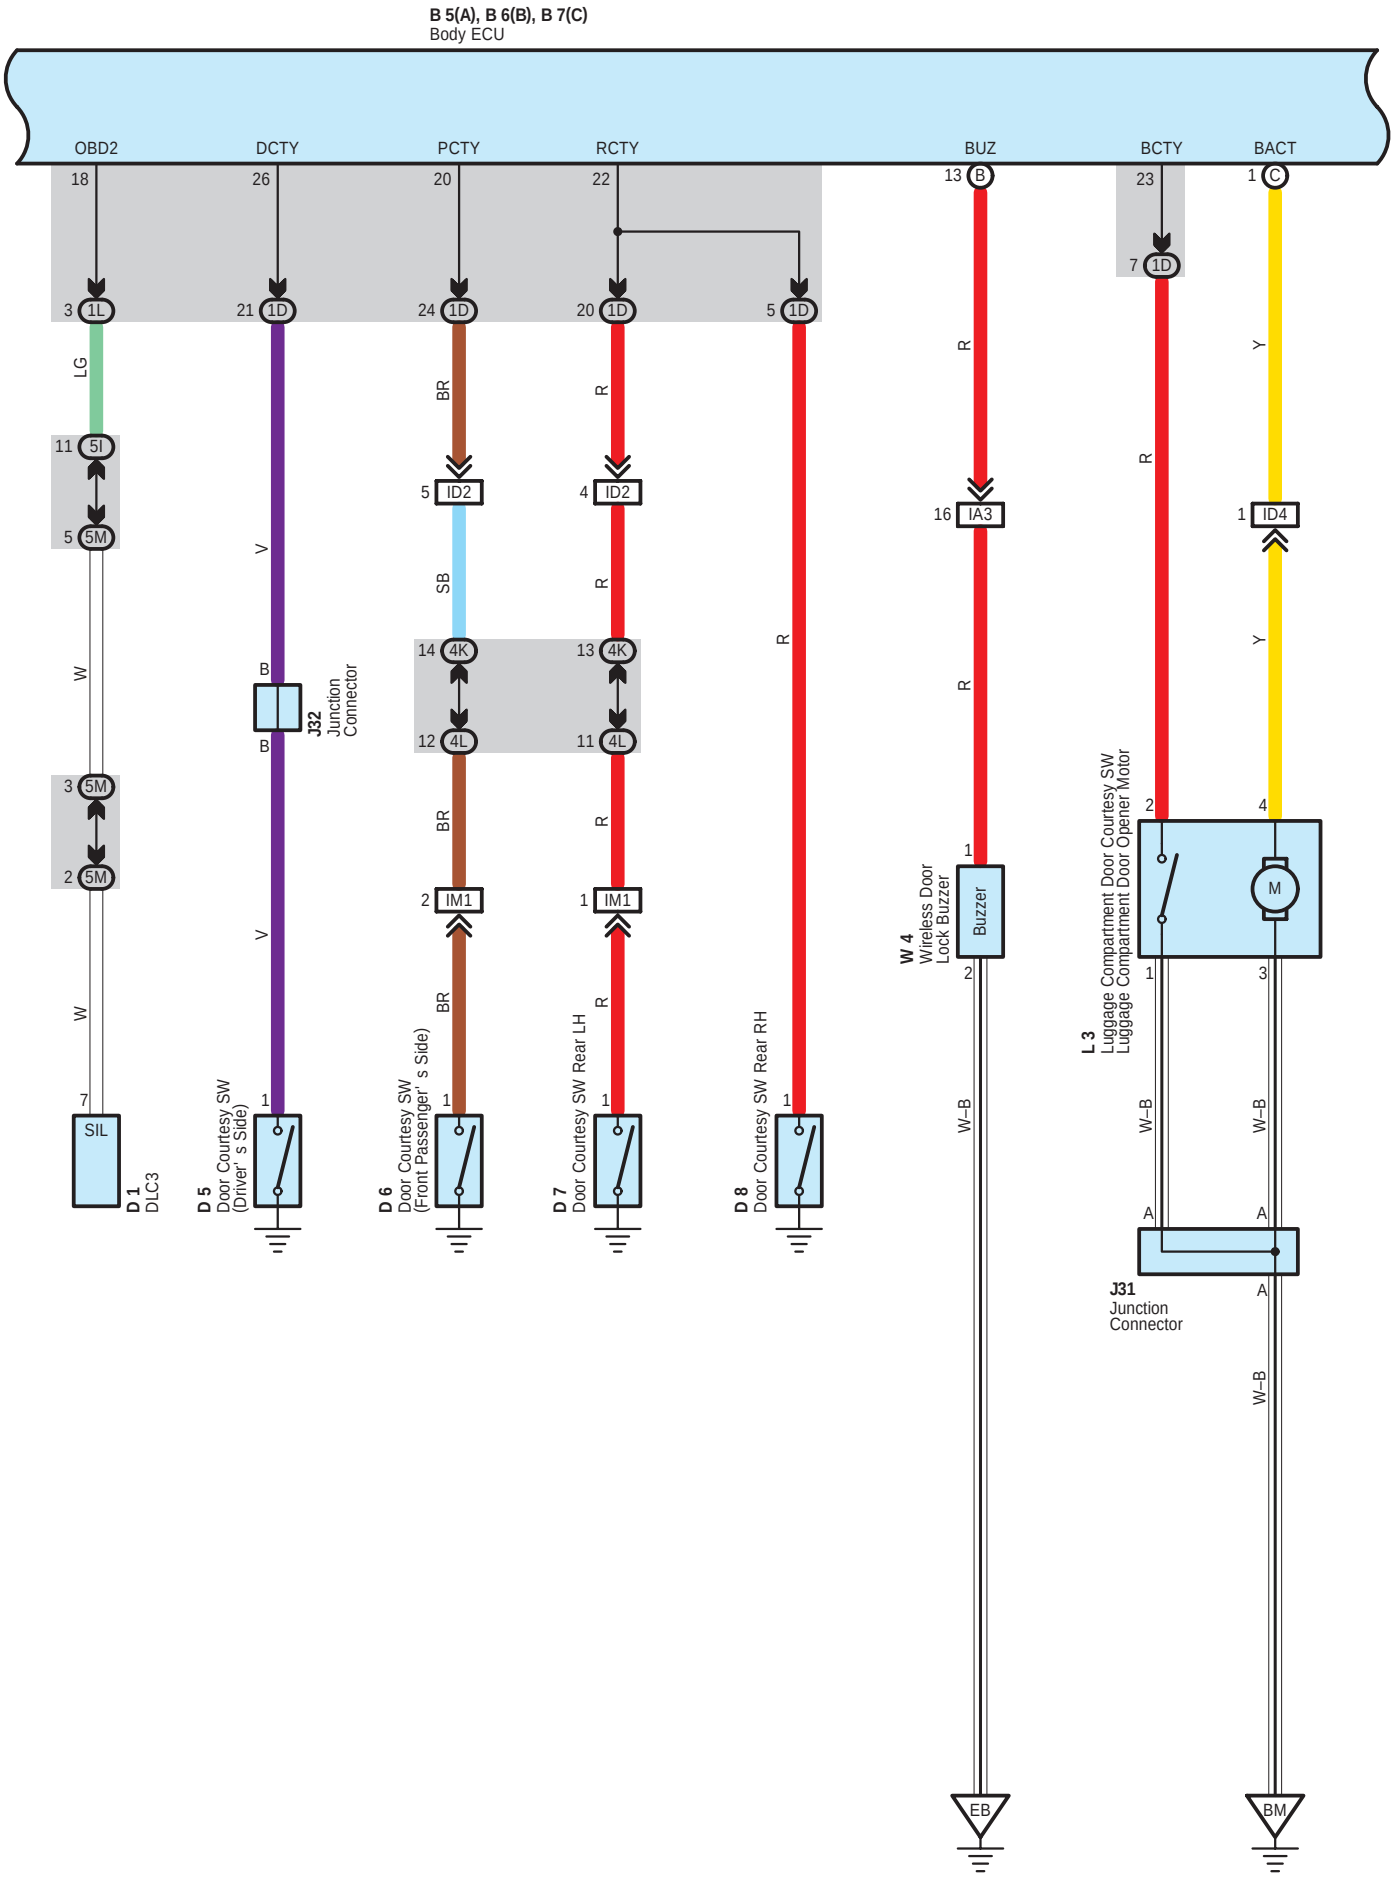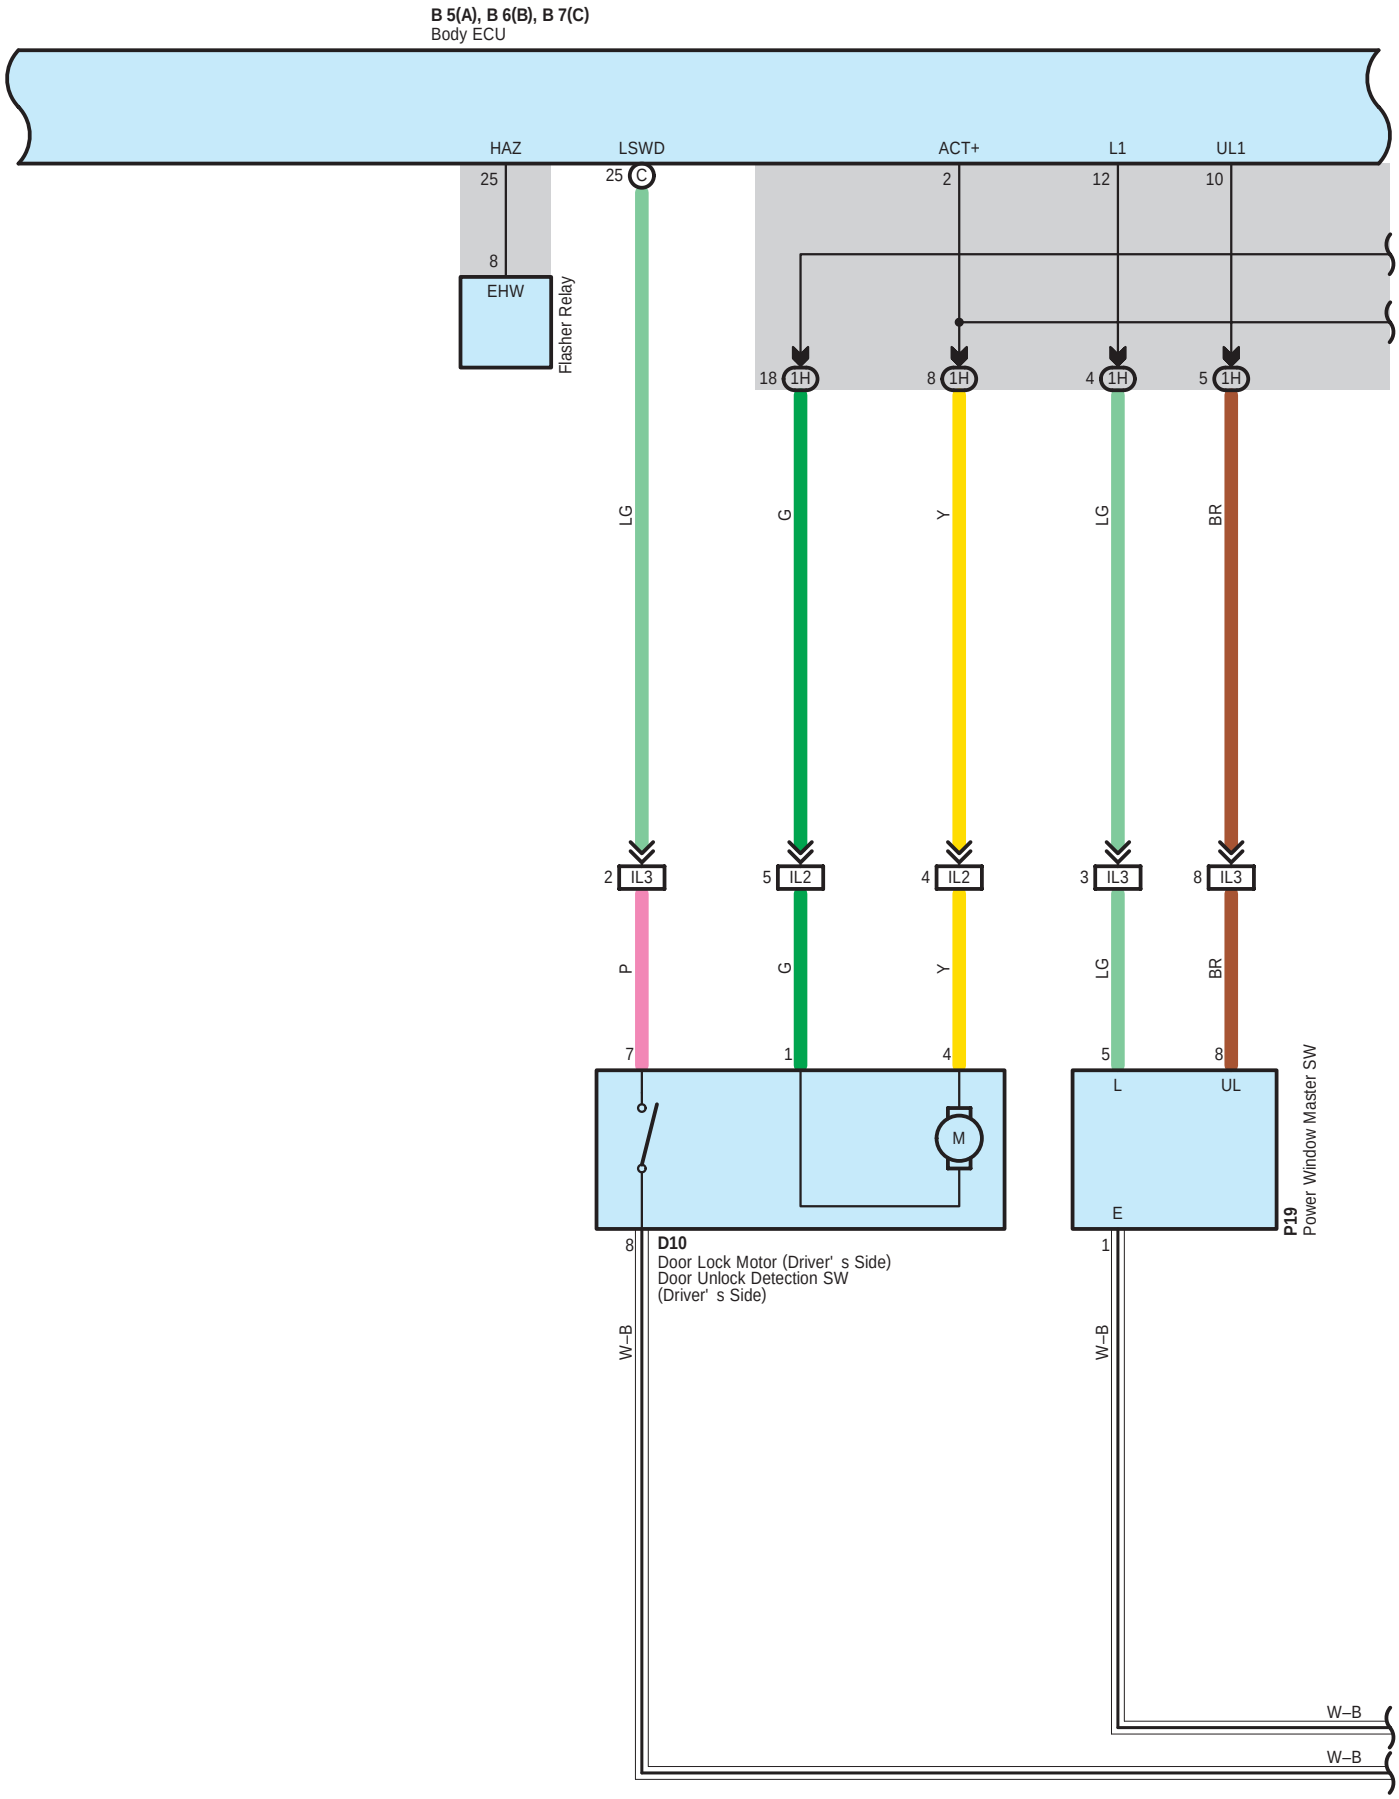


(w/ Smart Entry System) (RHD)

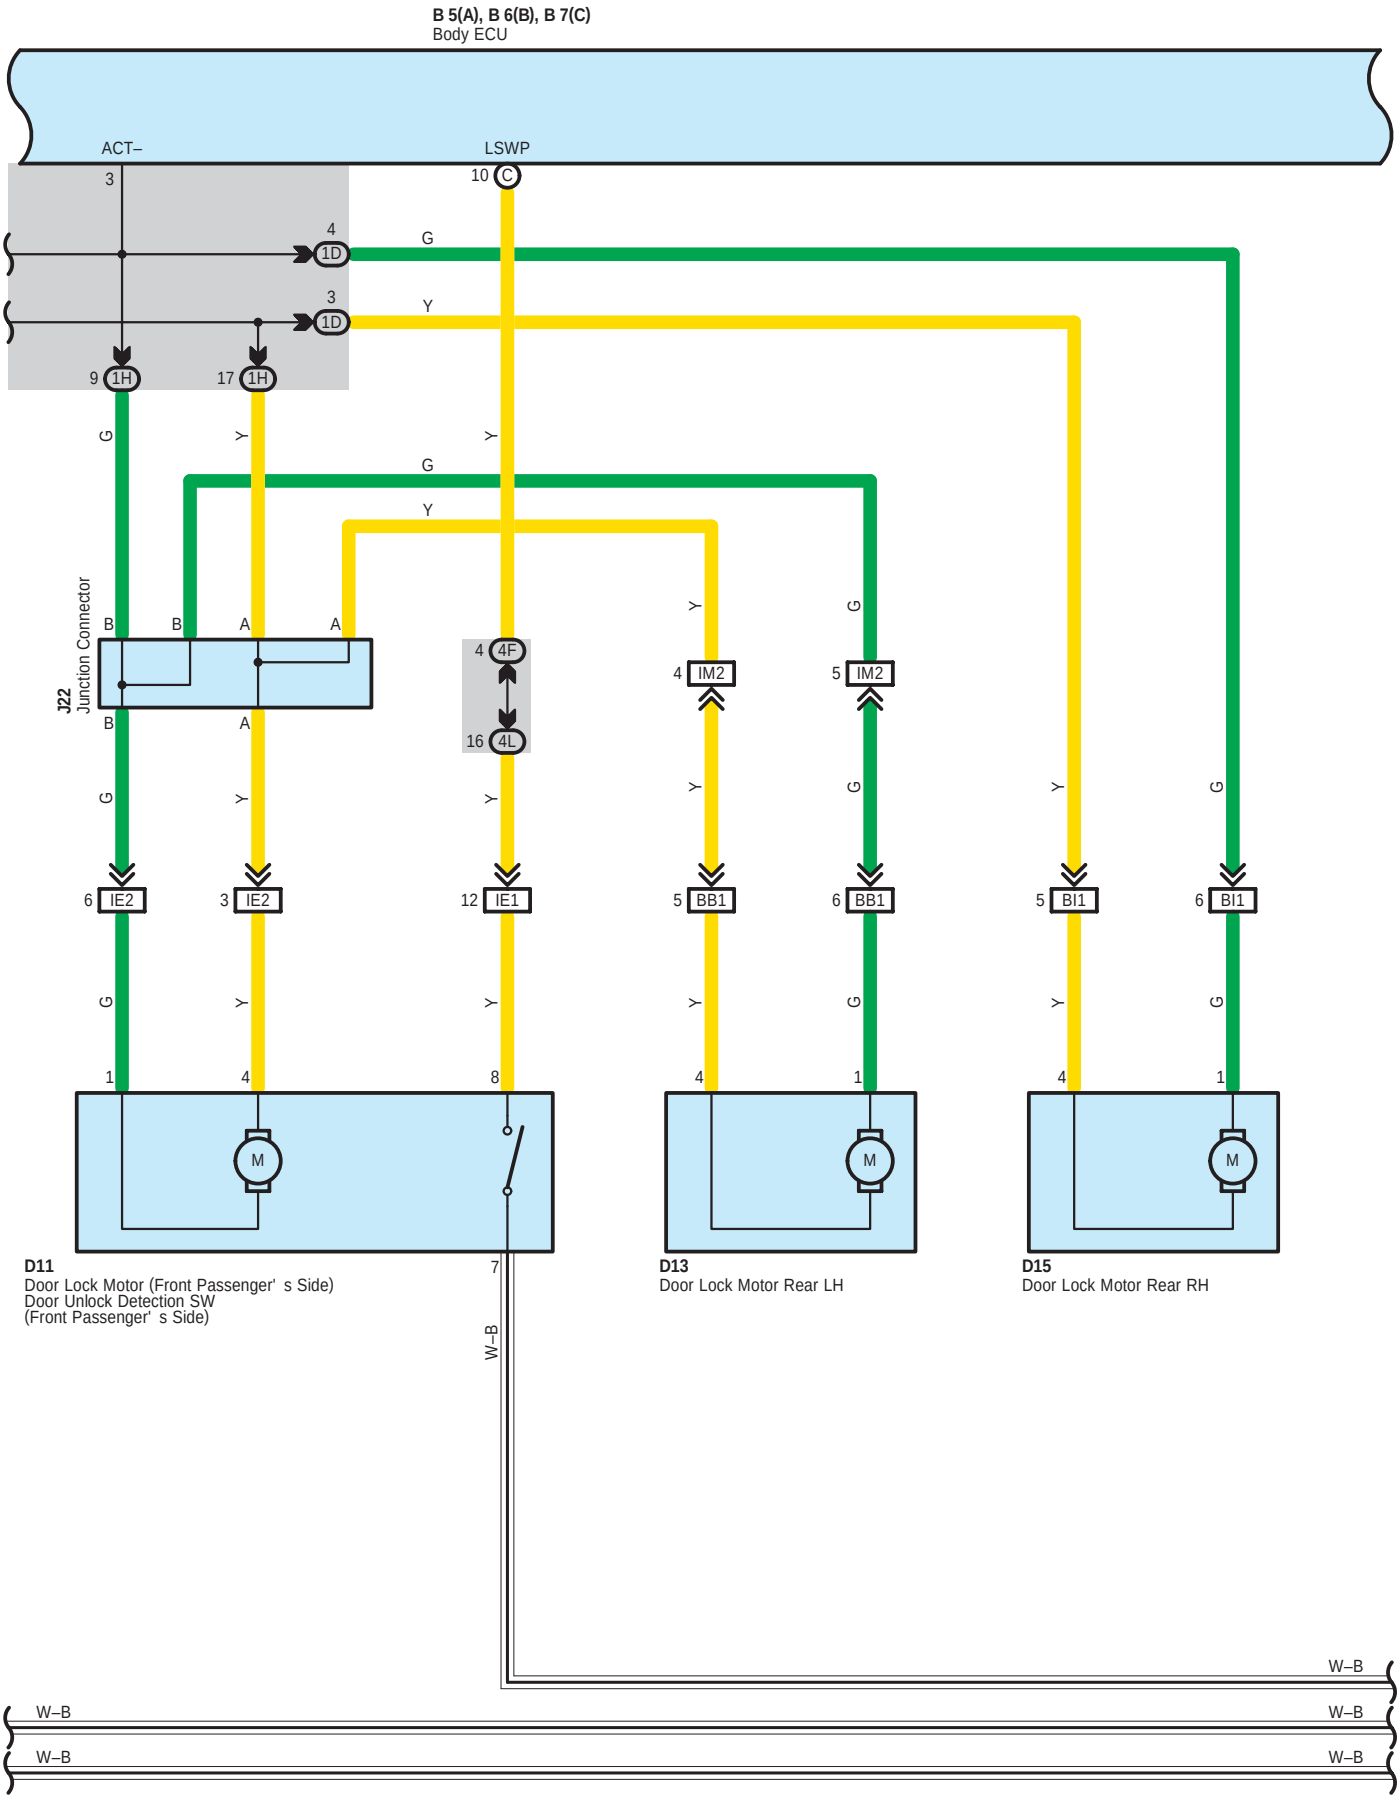



B 5(A), B 6(B), B 7(C)
Body ECU
HAZ
LSWD
ACT+
L1
UL1
25
25 C
2
12
10
8
EHW
Flasher Relay
18 1H
8 1H
4 1H
5 1H
LG
G
Y
LG
BR
2 IL3
5 IL2
4 IL2
3 IL3
8 IL3
P
G
Y
LG
BR
7
1
4
5
8
L
UL
M
E
P19
Power Window Master SW
8
1
D10
Door Lock Motor (Driver' s Side)
Door Unlock Detection SW
(Driver' s Side)
W–B
W–B
W–B
W–B


B 5(A), B 6(B), B 7(C)
Body ECU
ACT–
LSWP
3
10 C
4
1D
G
3
1D
Y
9 1H
17 1H
G
Y
Y
G
Y
J22
Junction Connector
B
B
A
A
B
A
4 4F
16 4L
4 IM2
5 IM2
Y
G
G
Y
Y
G
6 IE2
3 IE2
12 IE1
5 BB1
6 BB1
5 BI1
6 BI1
G
Y
Y
Y
G
Y
G
G
Y
Y
Y
G
1
4
8
4
1
4
1
M
M
M
7
W–B
D11
Door Lock Motor (Front Passenger' s Side)
Door Unlock Detection SW
(Front Passenger' s Side)
D13
Door Lock Motor Rear LH
D15
Door Lock Motor Rear RH
W–B
W–B
W–B
W–B
W–B


Smart Entry System (RHD) and Wireless Door Lock Control

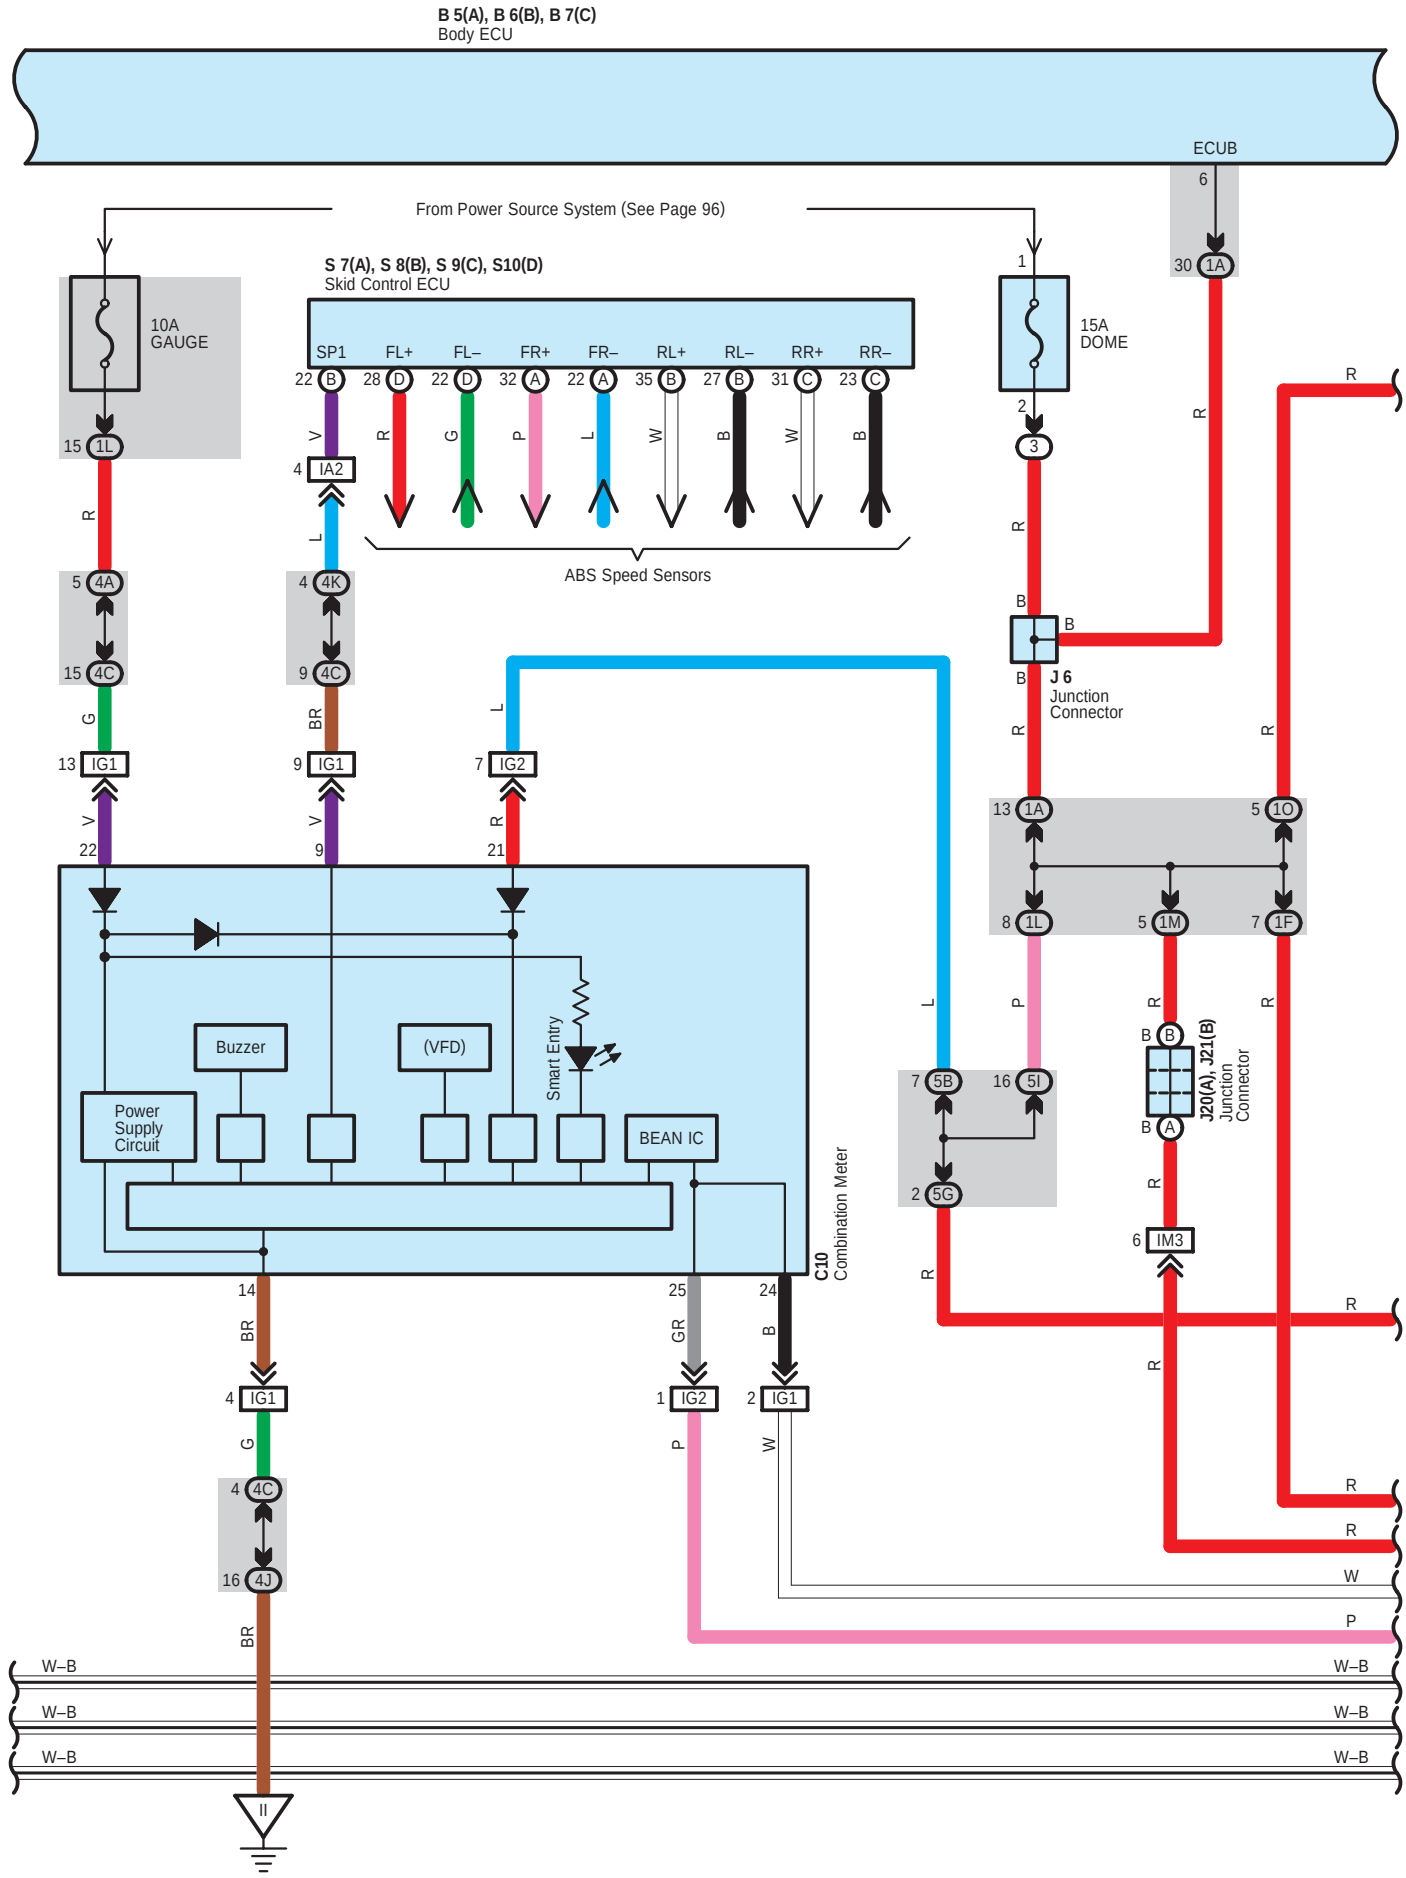


(w/ Smart Entry System) (RHD)

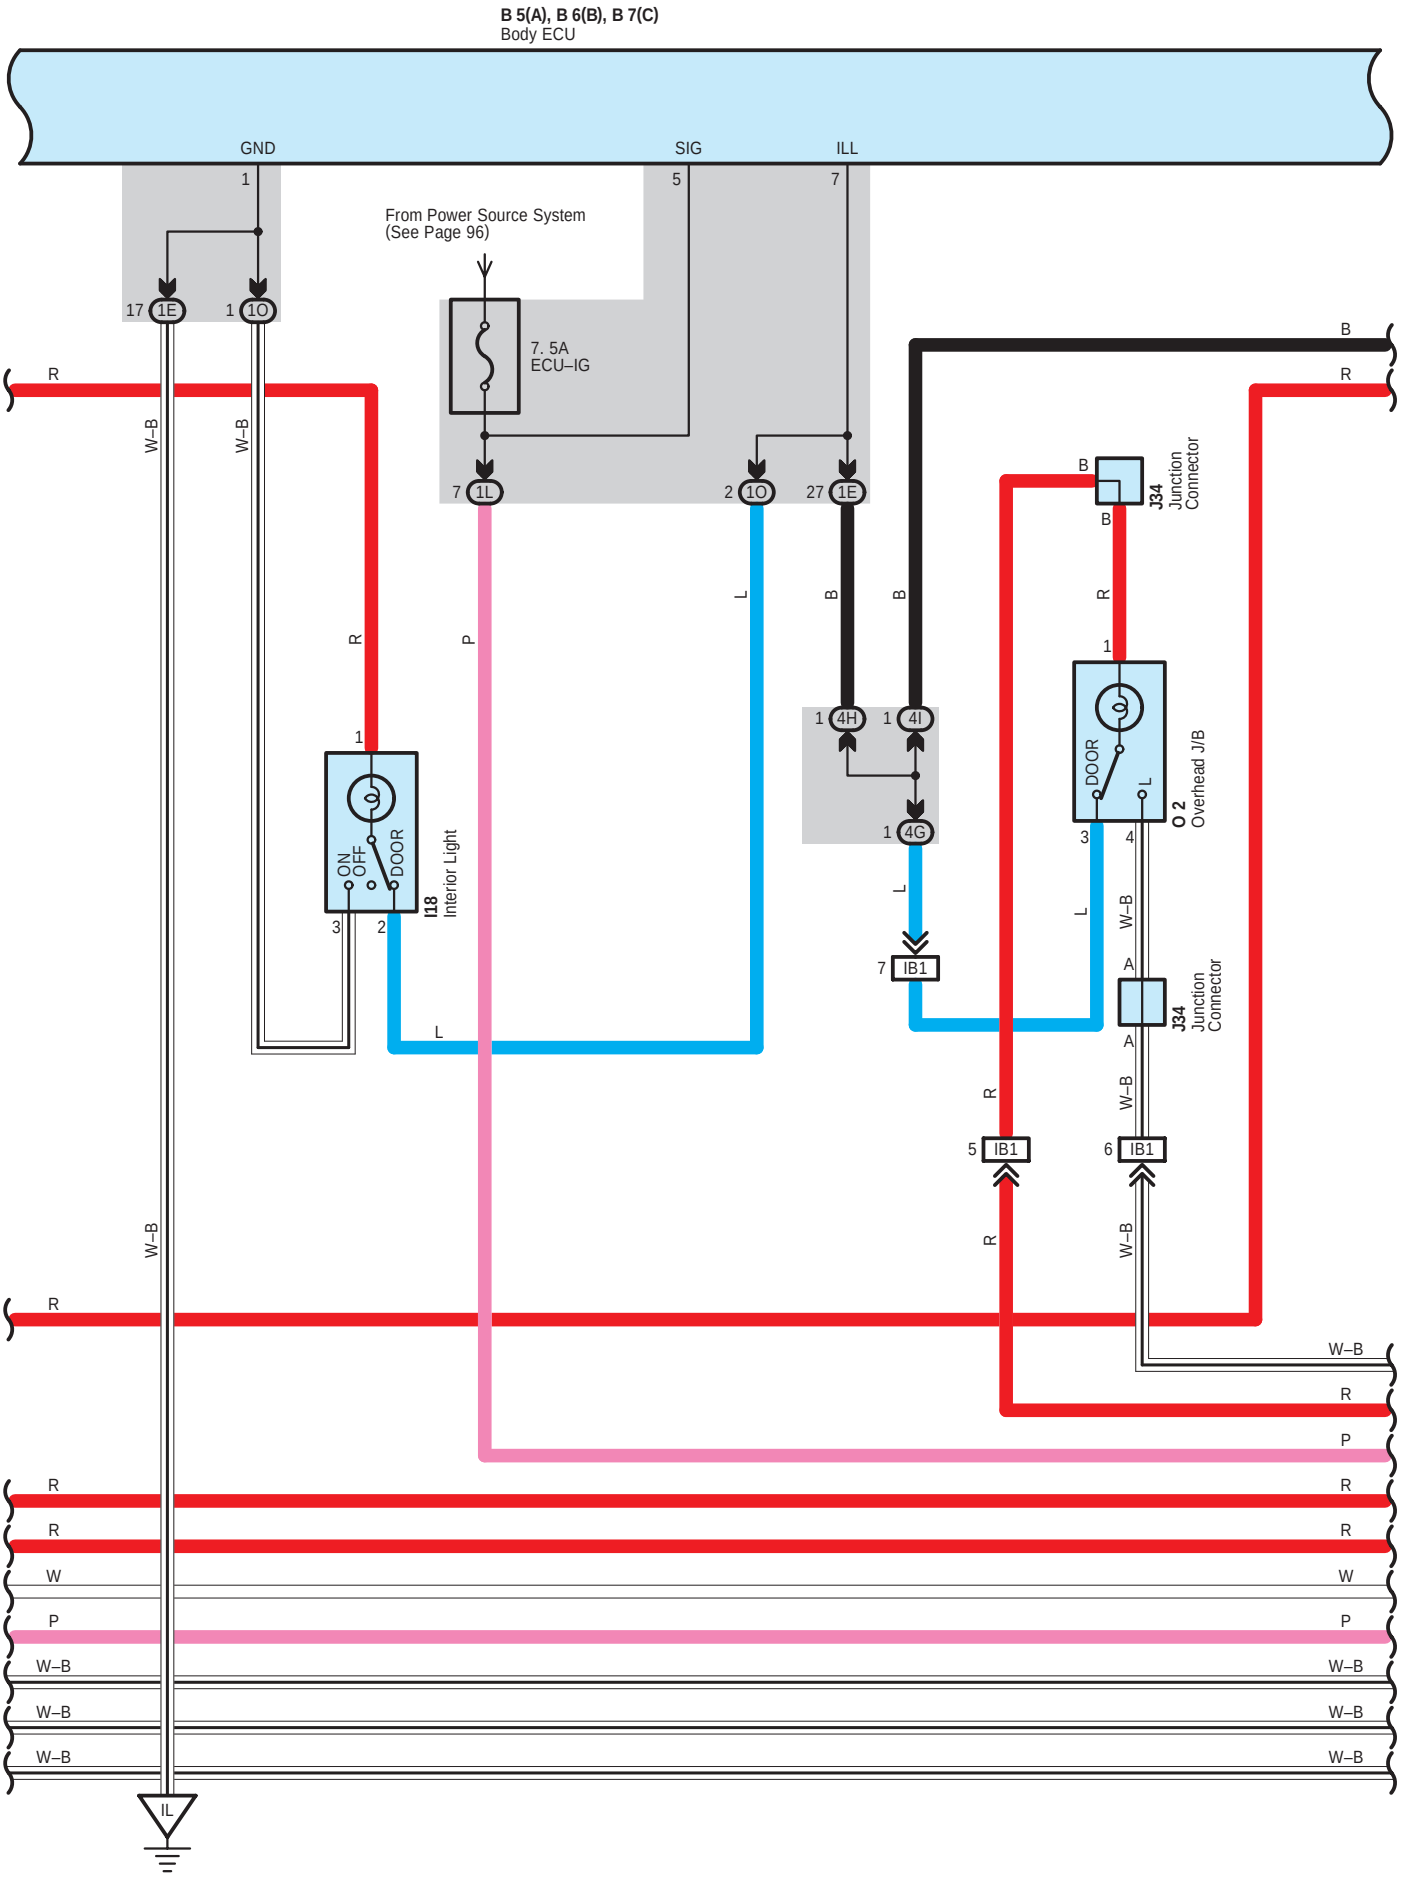


Smart Entry System (RHD) and Wireless Door Lock Control

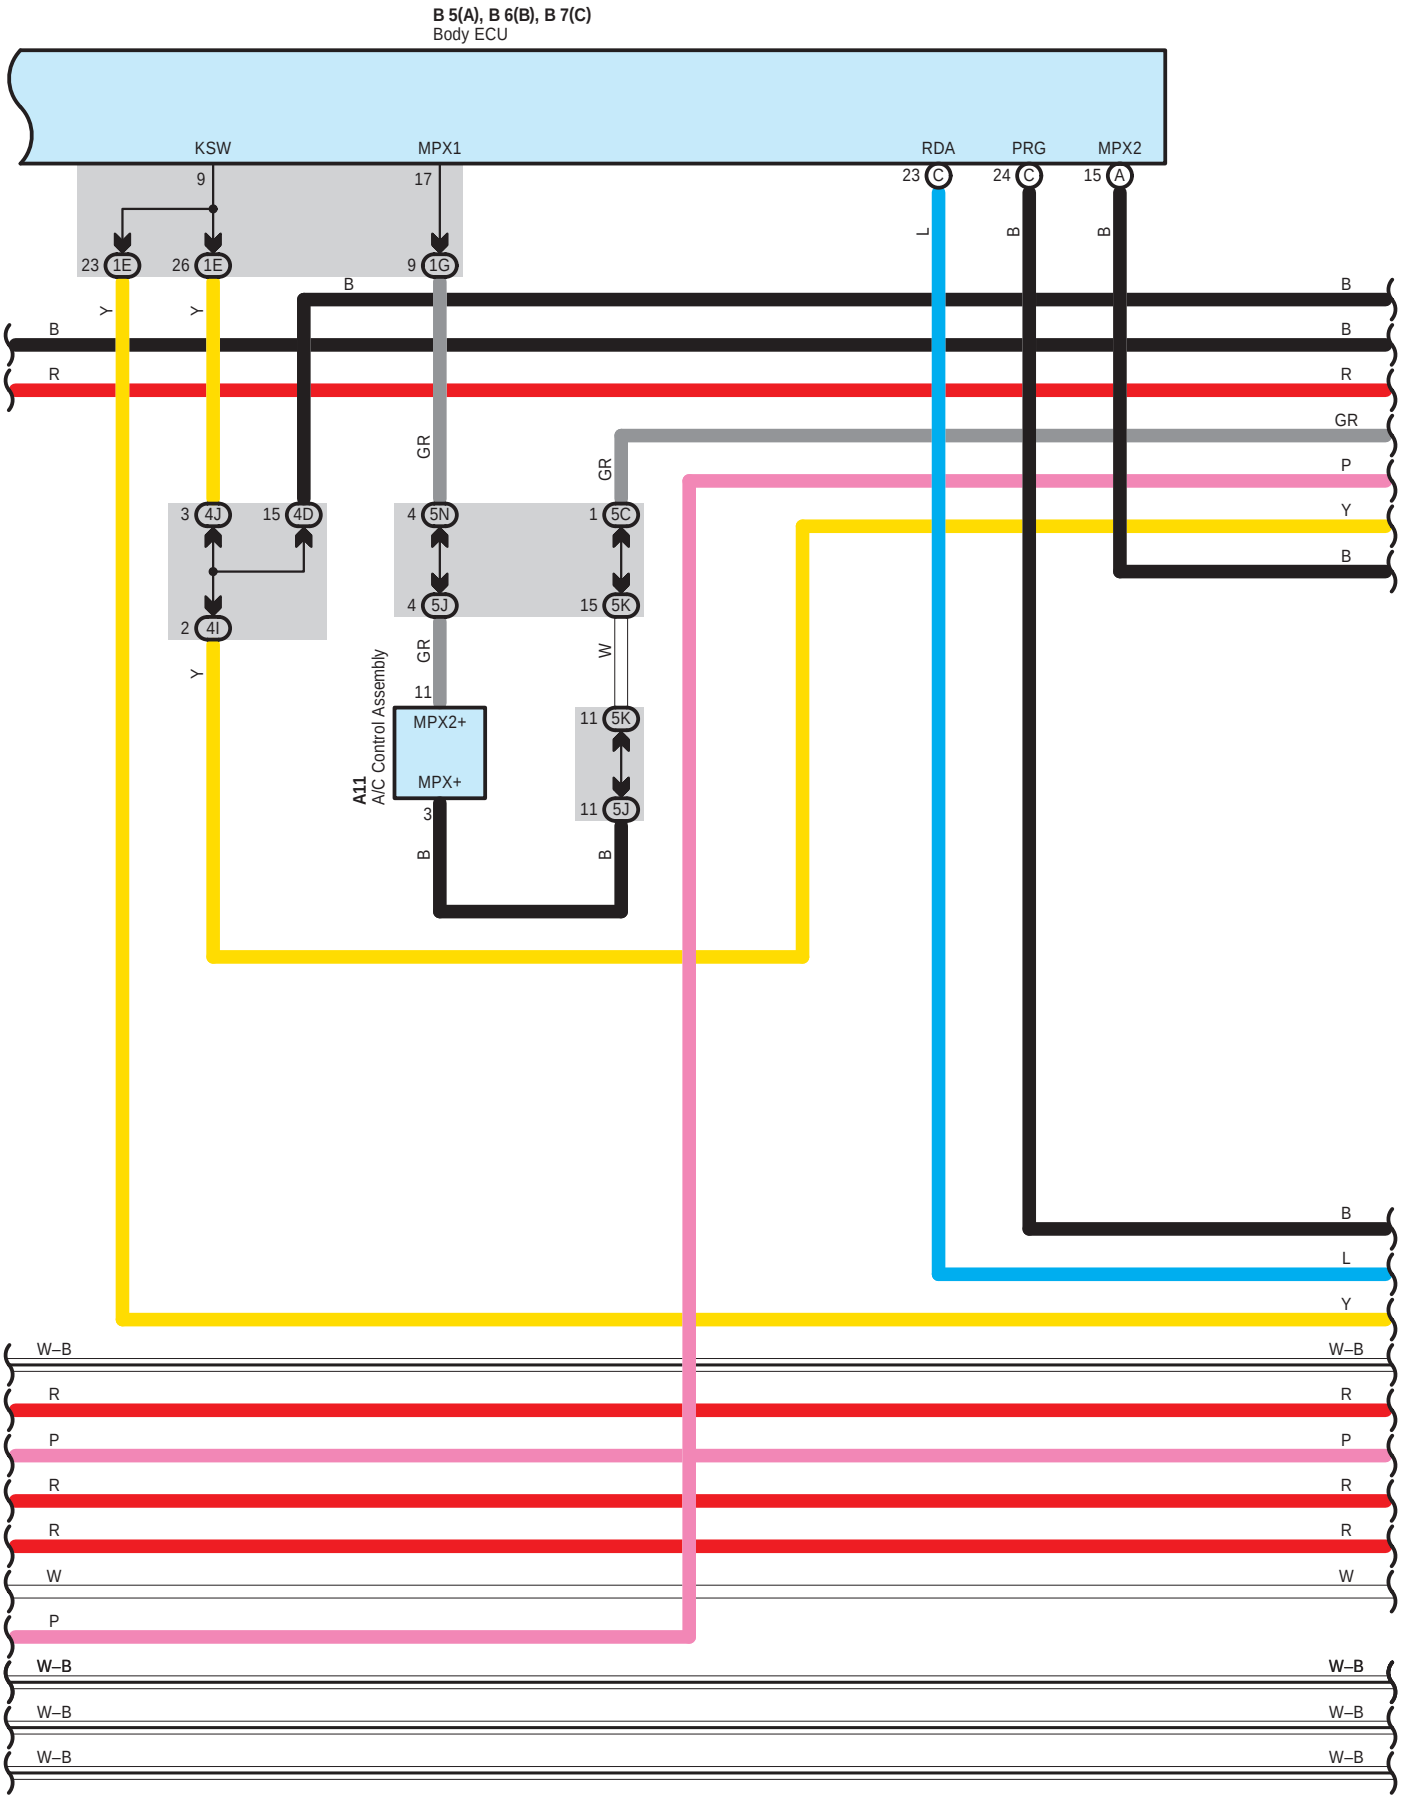


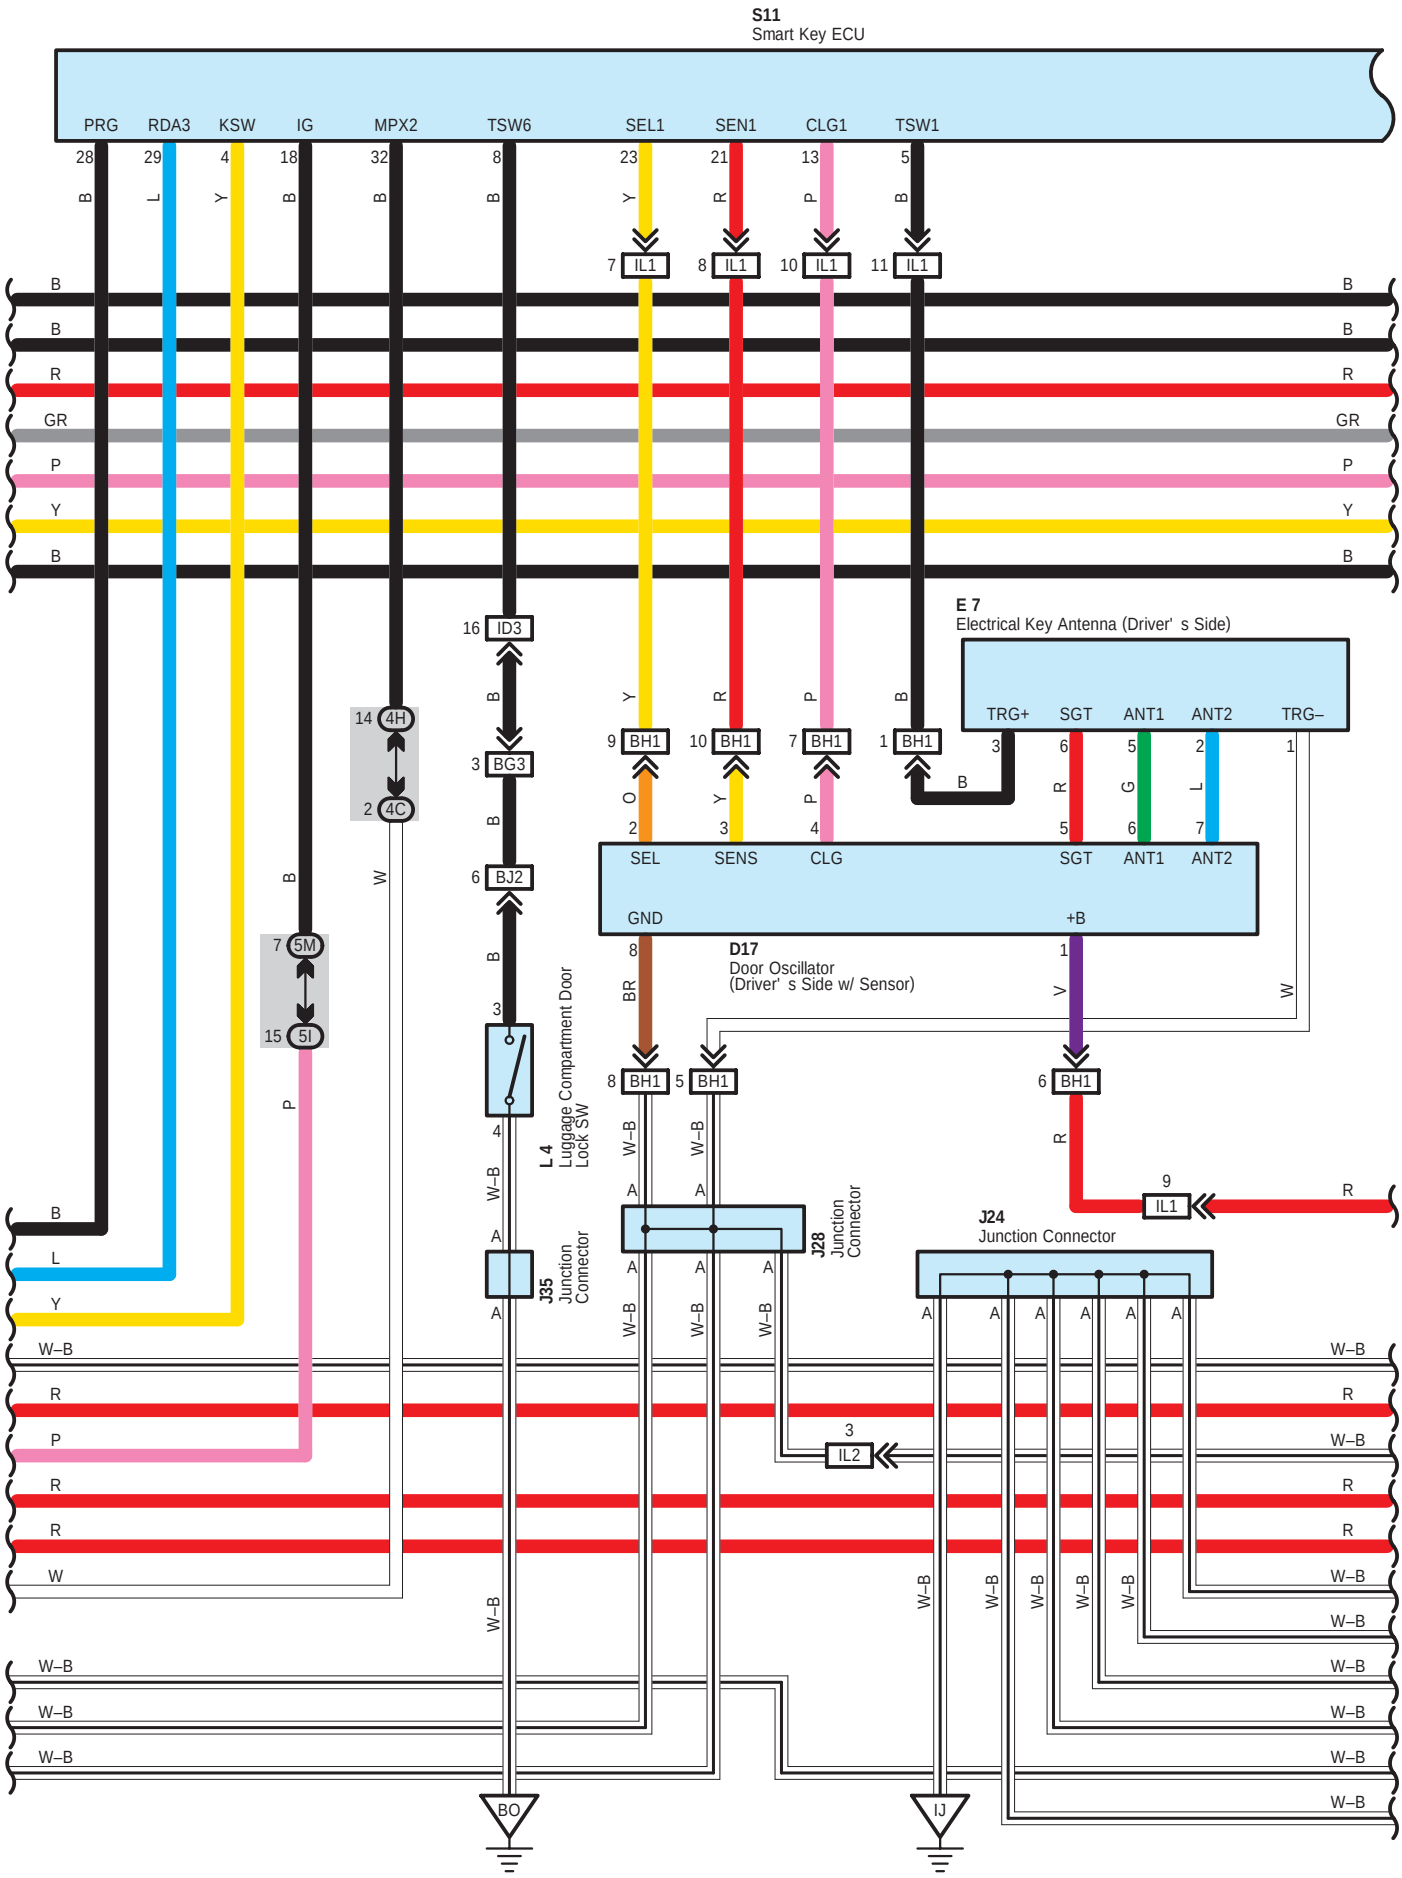
S11
Smart Key ECU
PRG
RDA3
KSW
IG
MPX2
TSW6
SEL1
SEN1
CLG1
TSW1
E 7
Electrical Key Antenna (Driver' s Side)
TRG+
SGT
ANT1
ANT2
TRG–
SEL
SENS
CLG
GND
+B
D17
Door Oscillator
(Driver' s Side w/ Sensor)
L 4
Luggage Compartment Door Lock SW
J35
Junction Connector
J28
Junction Connector
J24
Junction Connector
ID3
BG3
BJ2
4H
4C
5M
5I
BH1
IL1
IL2
BO
IJ

Smart Entry System (RHD) and Wireless Door Lock Control

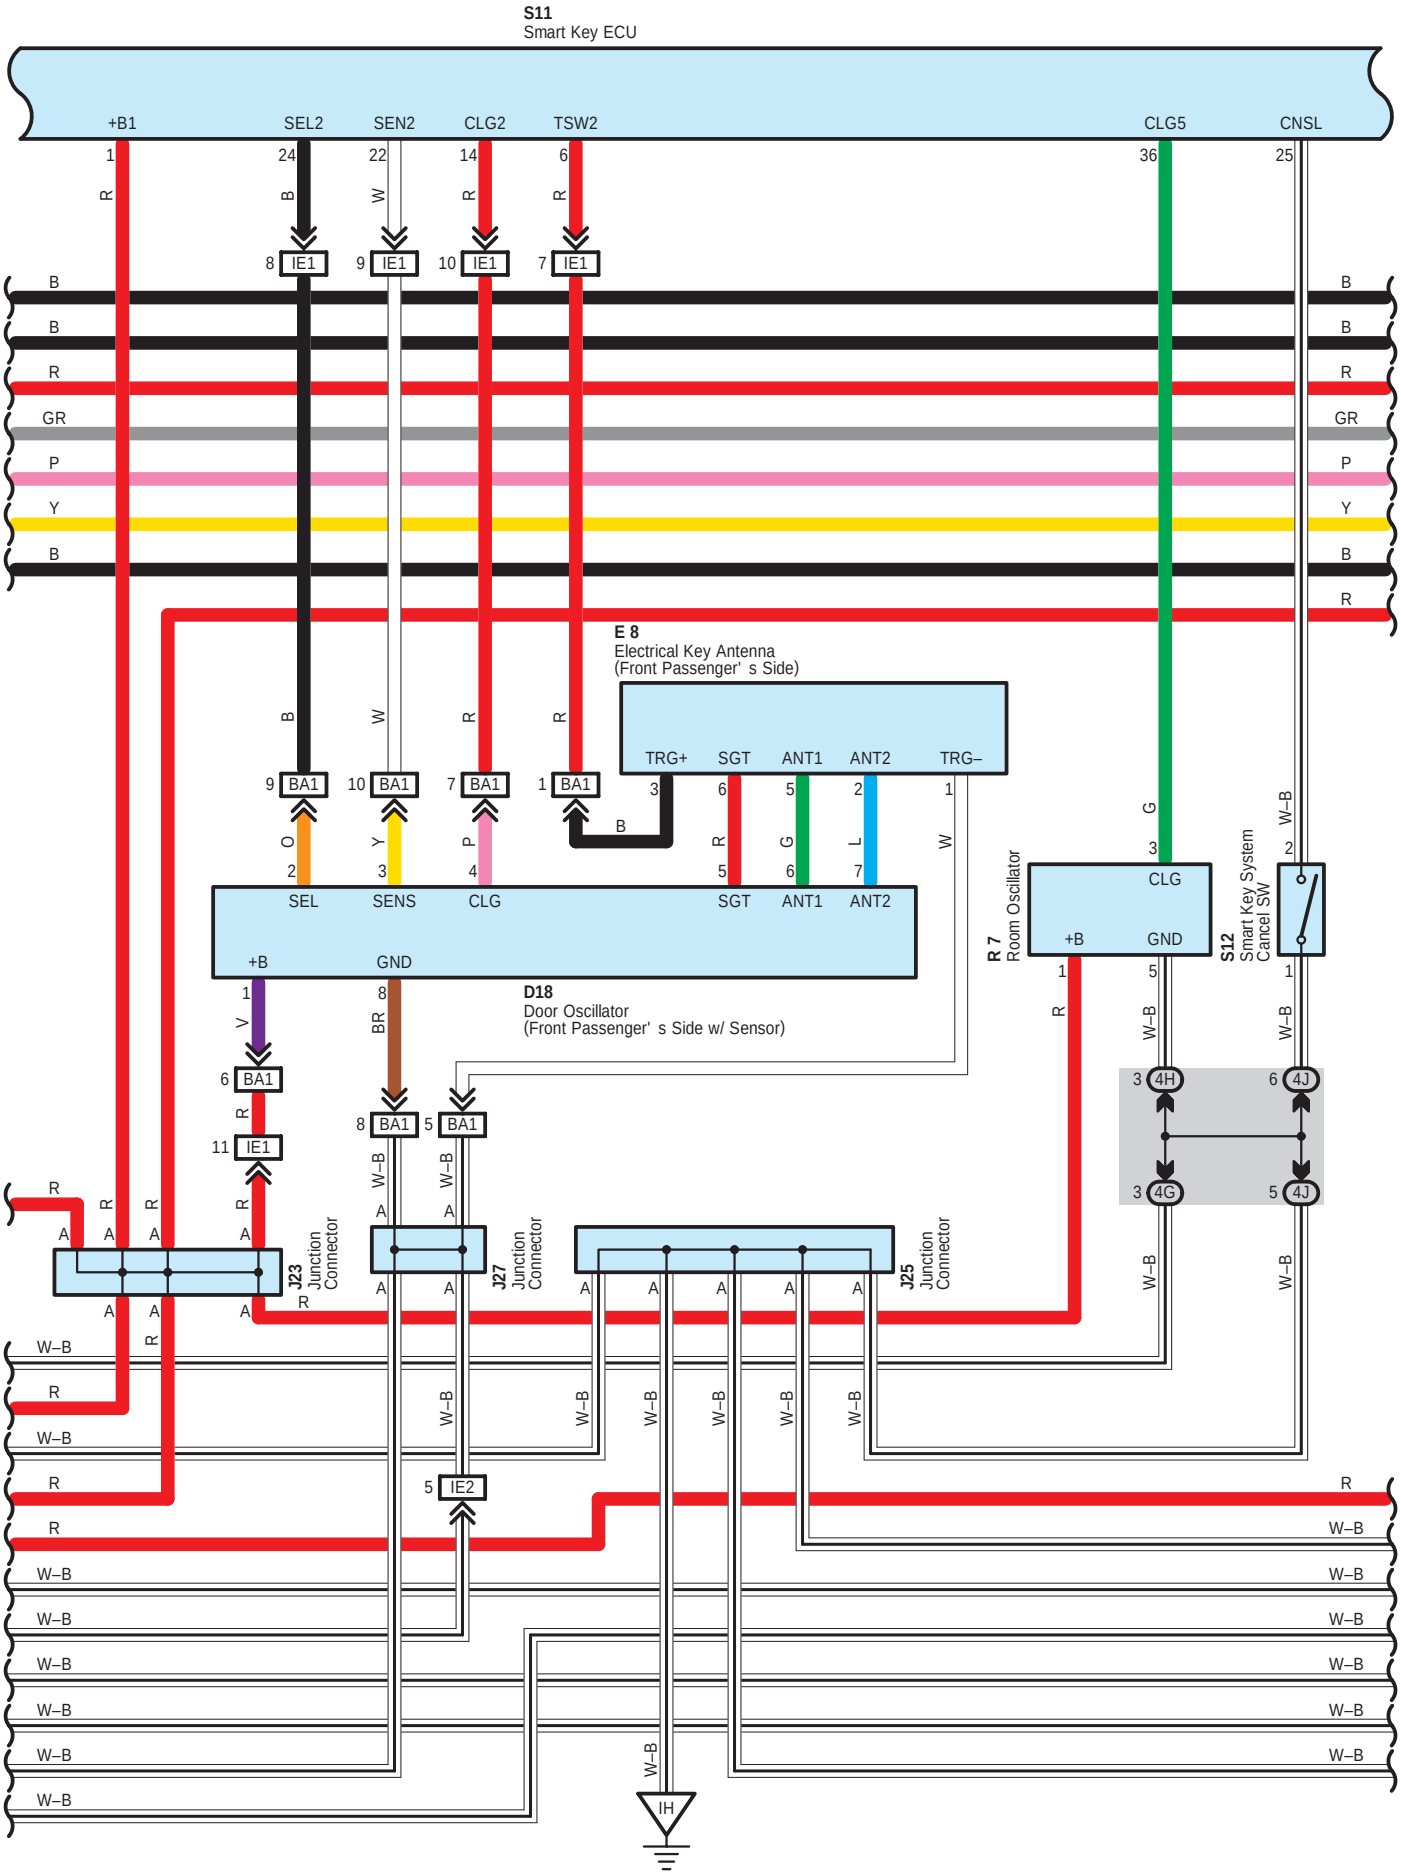


(w/ Smart Entry System) (RHD)

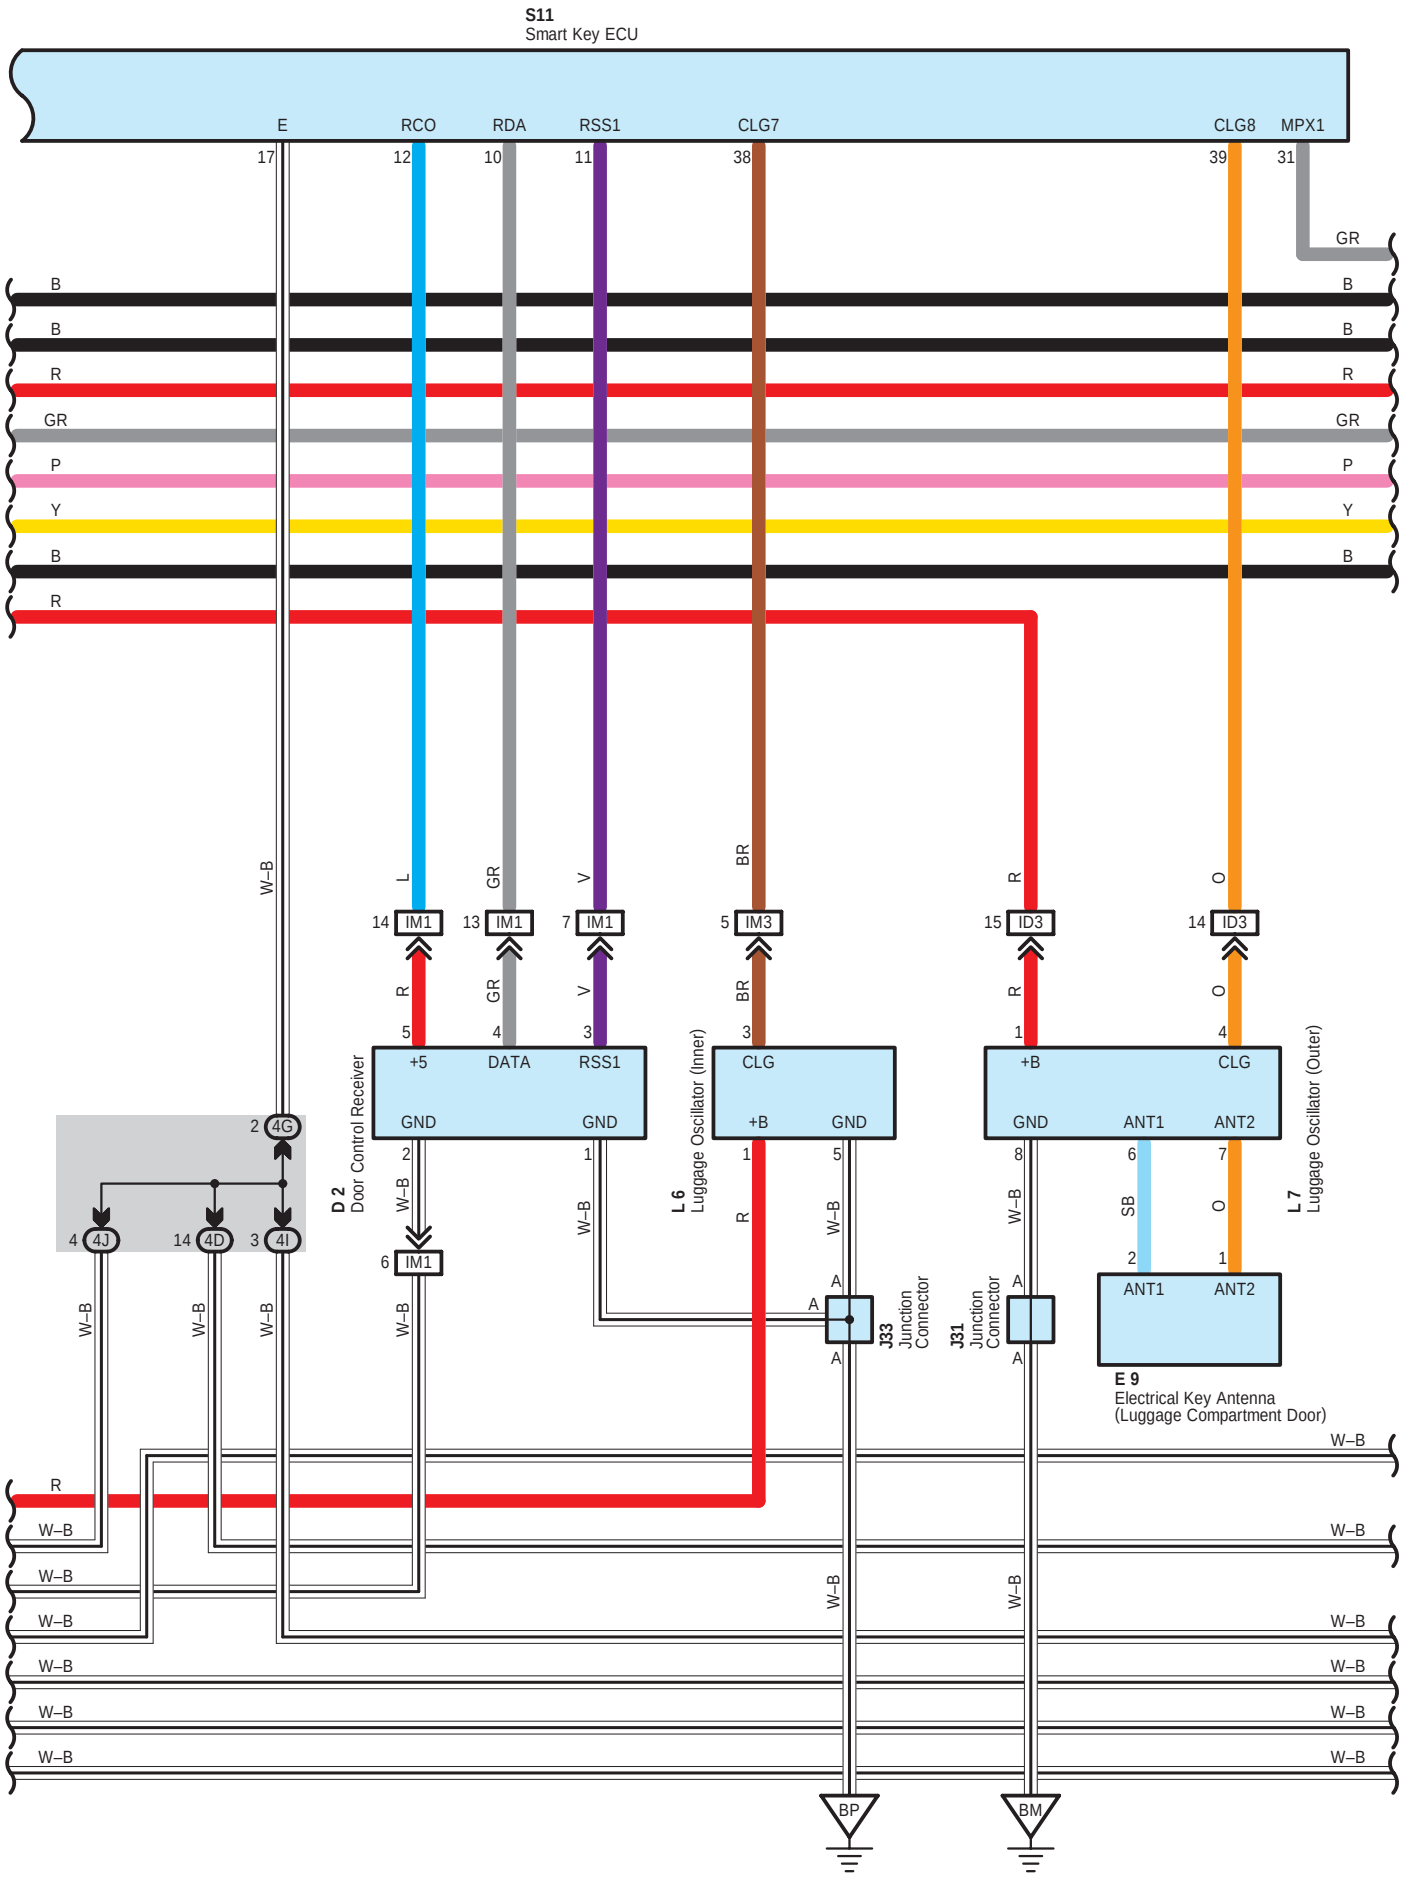


Smart Entry System (RHD) and Wireless Door Lock Control


From Power Source System (See Page 96)

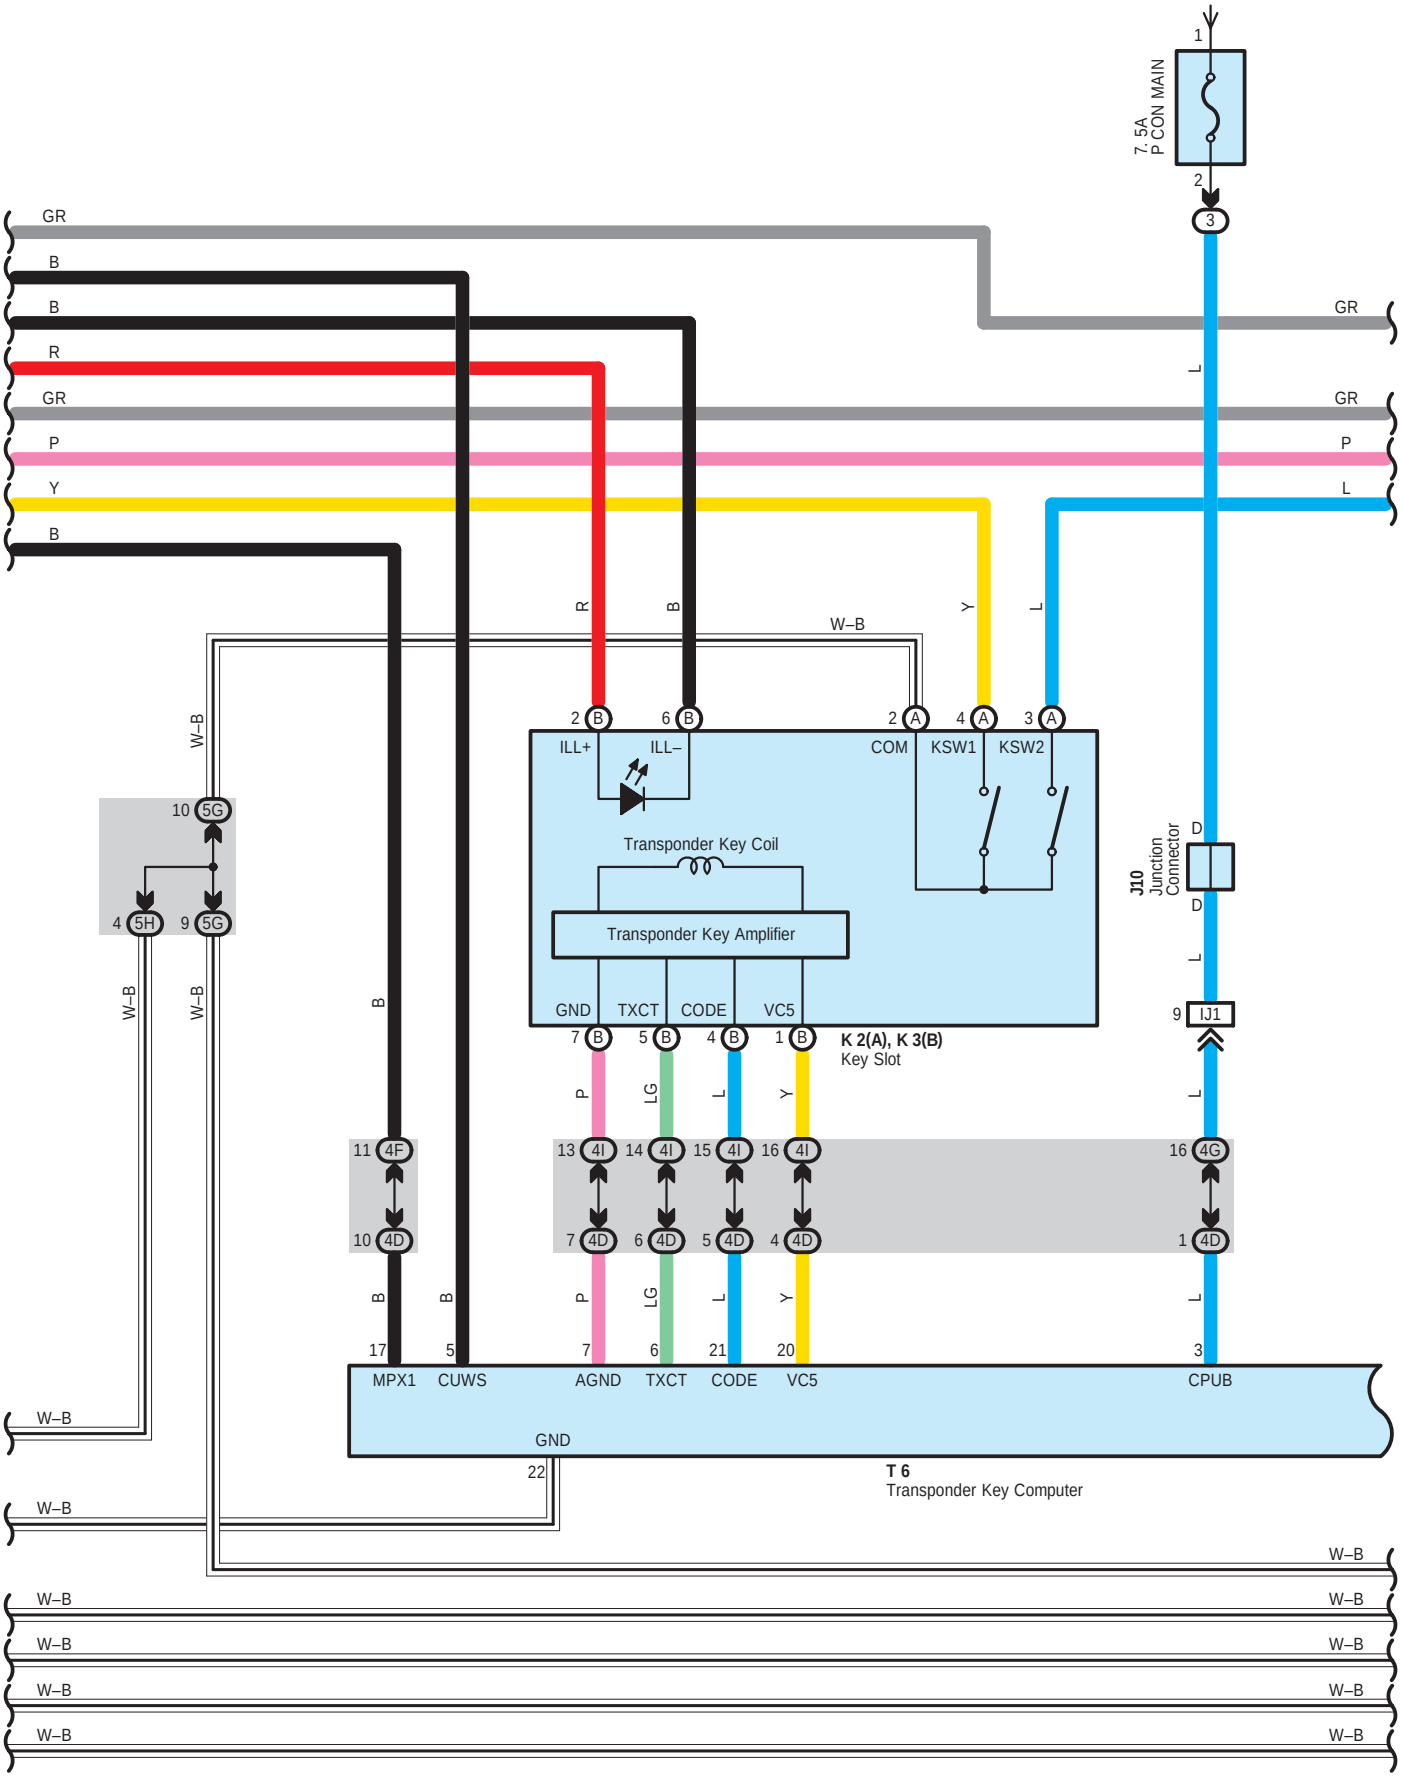

(w/ Smart Entry System) (RHD)

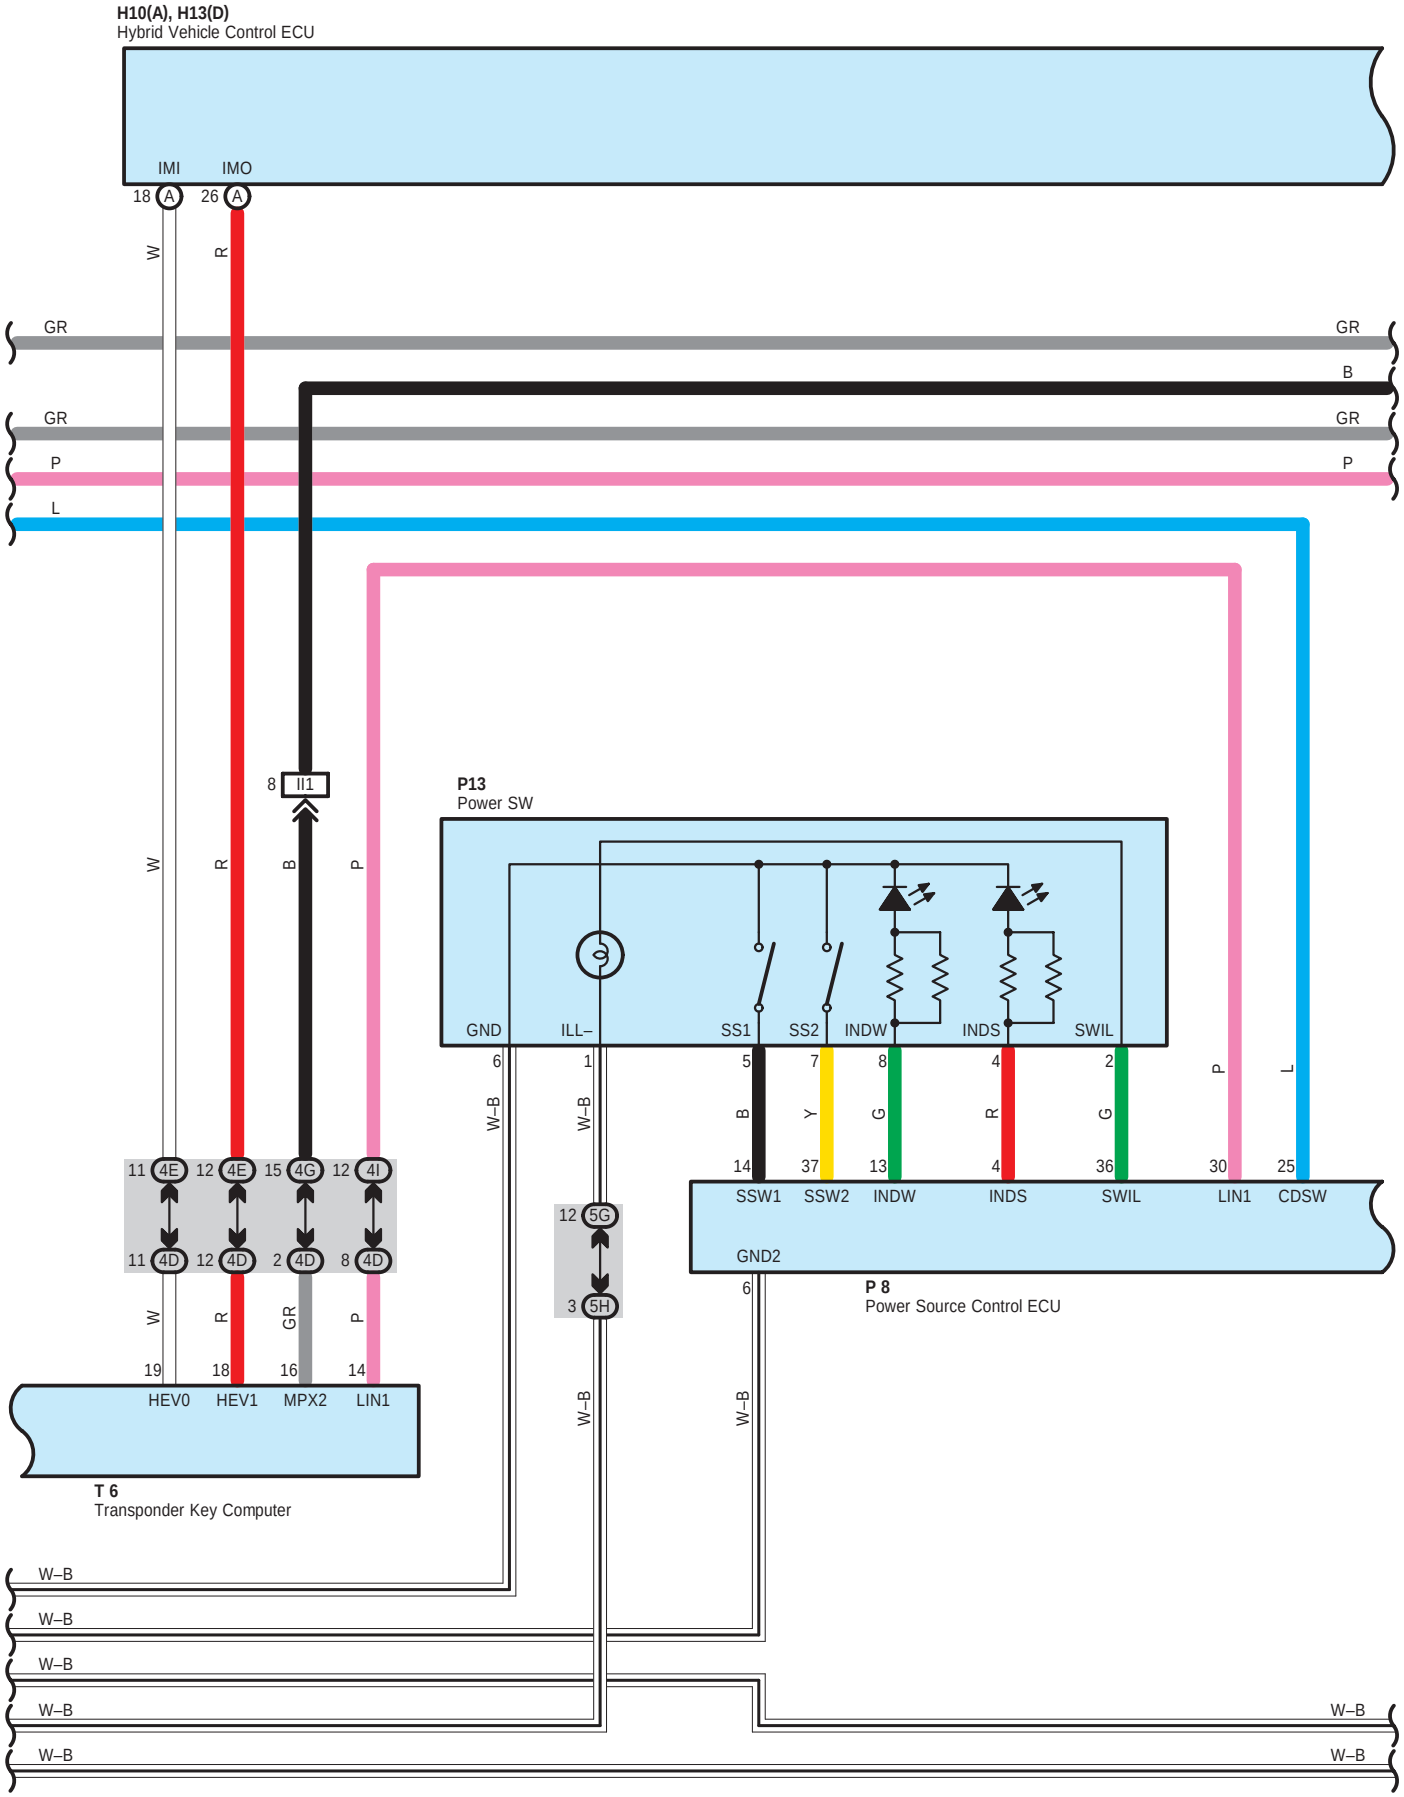

Smart Entry System (RHD) and Wireless Door Lock Control

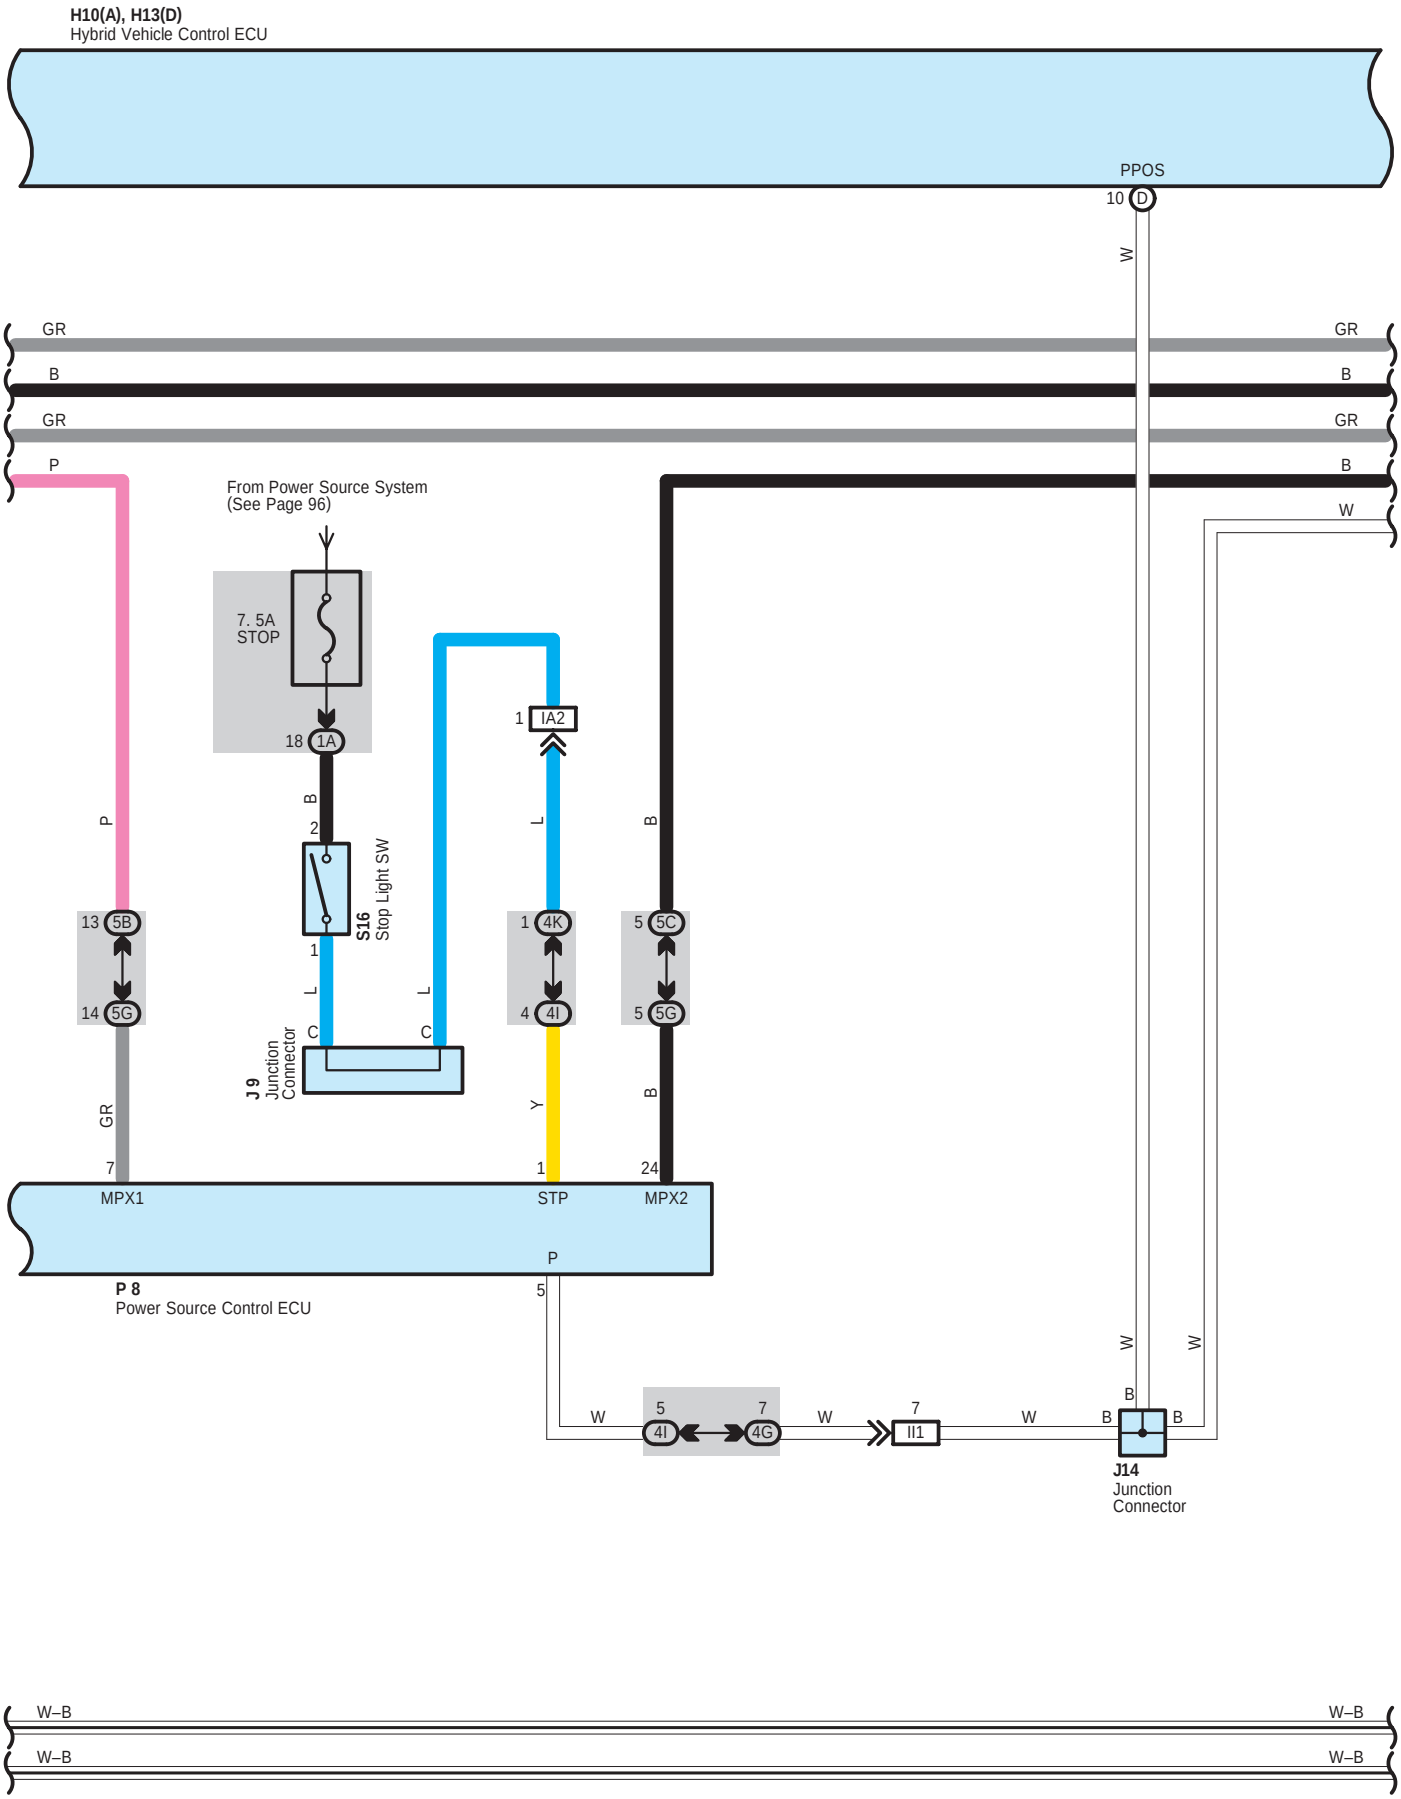

(w/ Smart Entry System) (RHD)

