


From Power Source System (See Page 96)

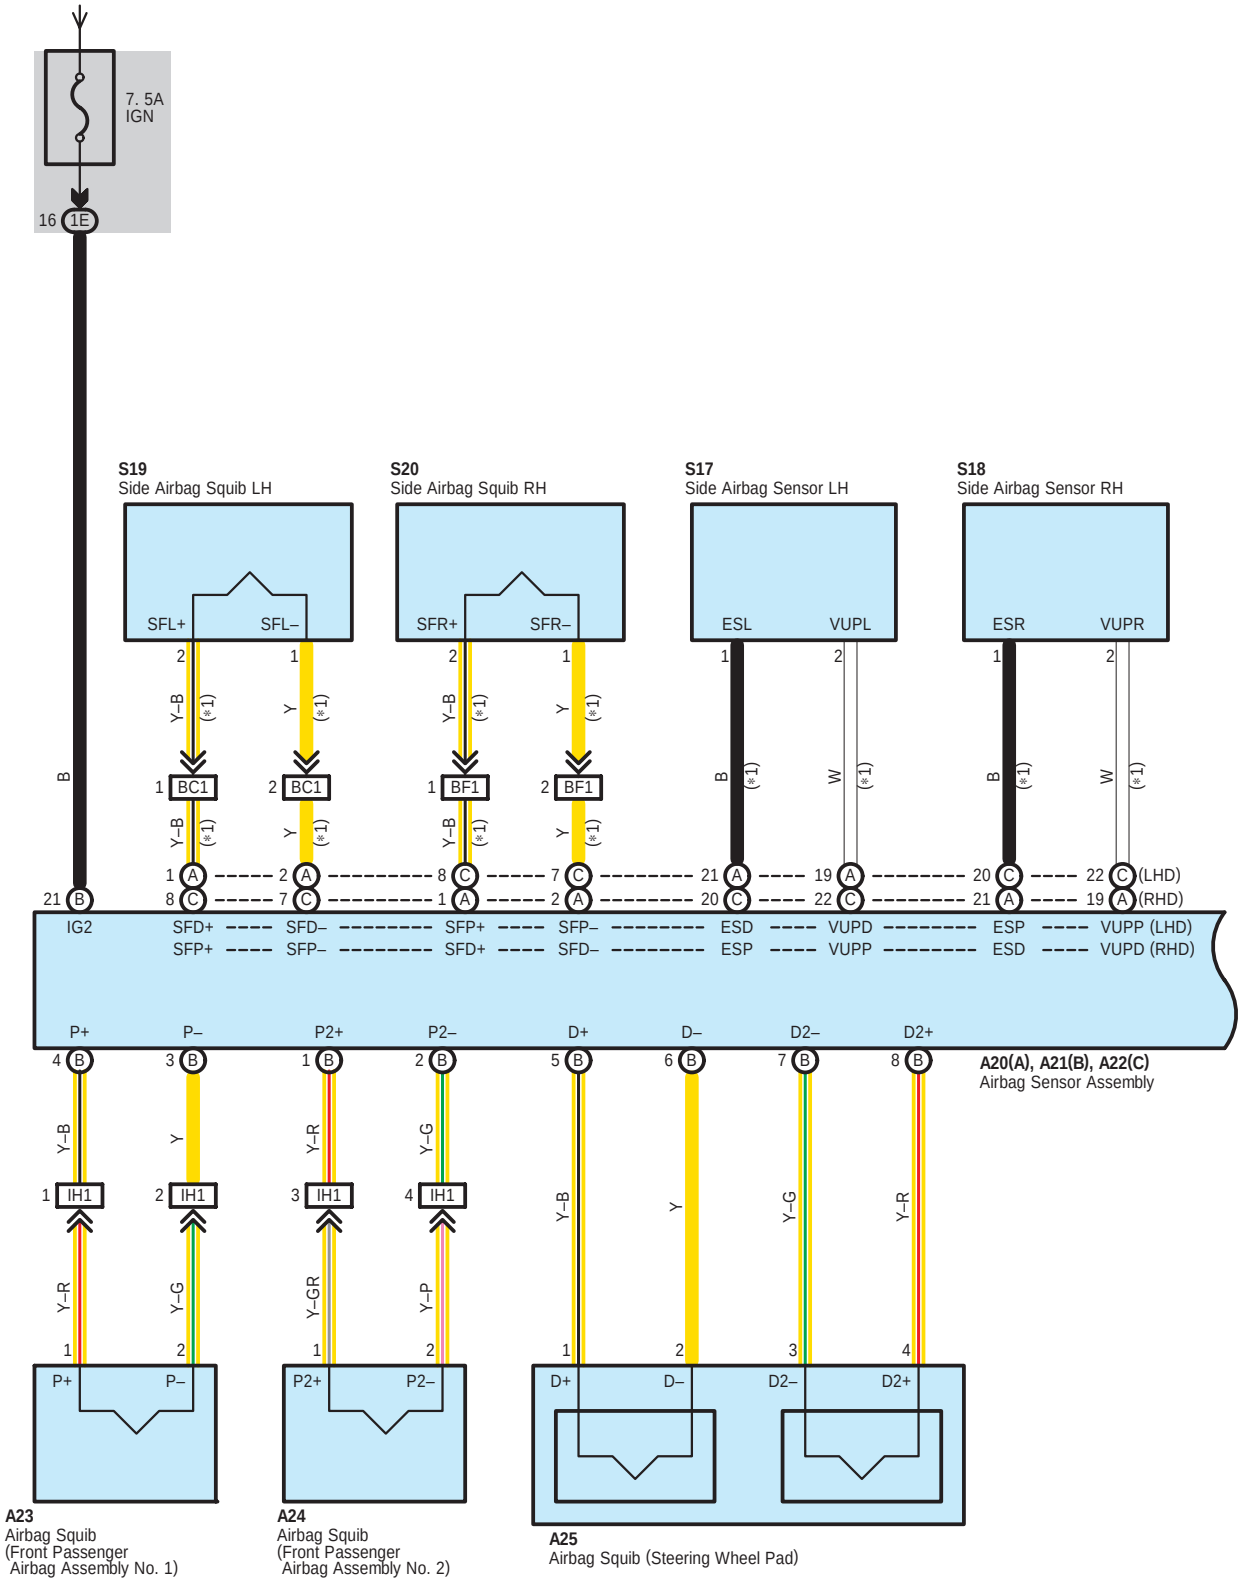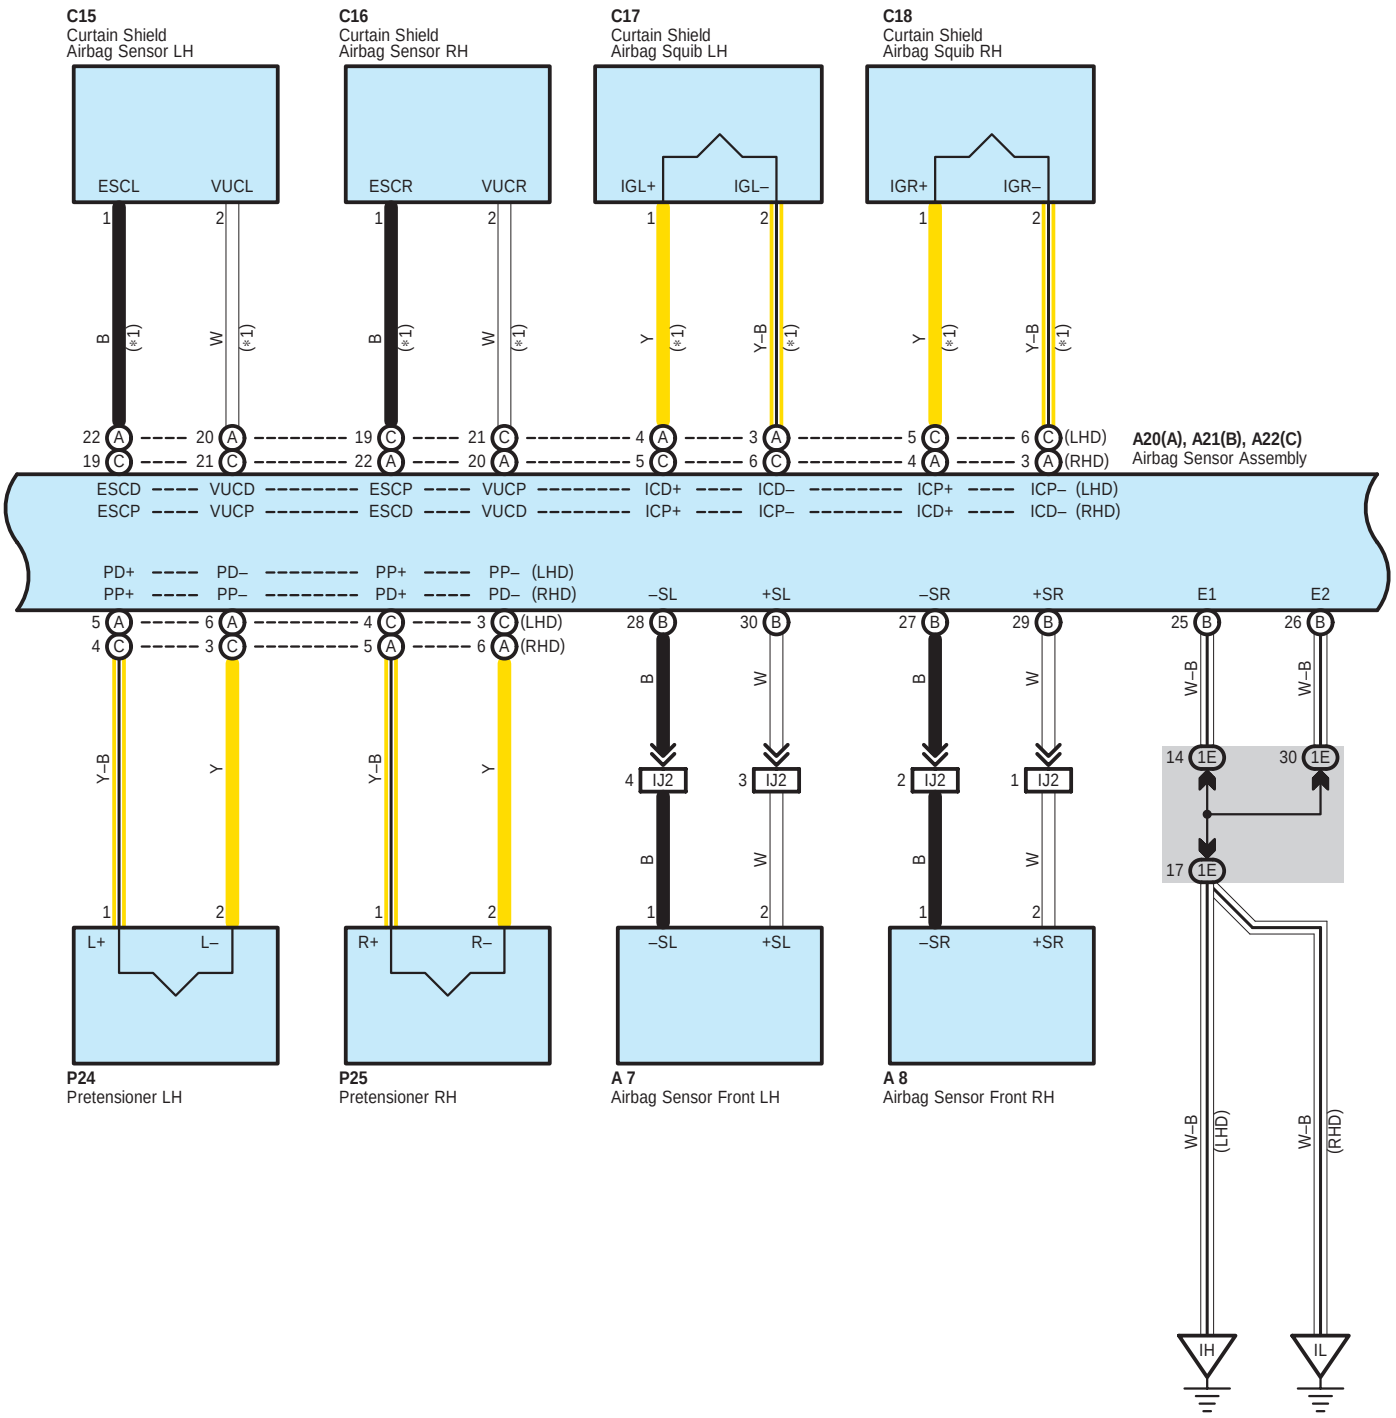

∗ 1 : w/ Side Airbag

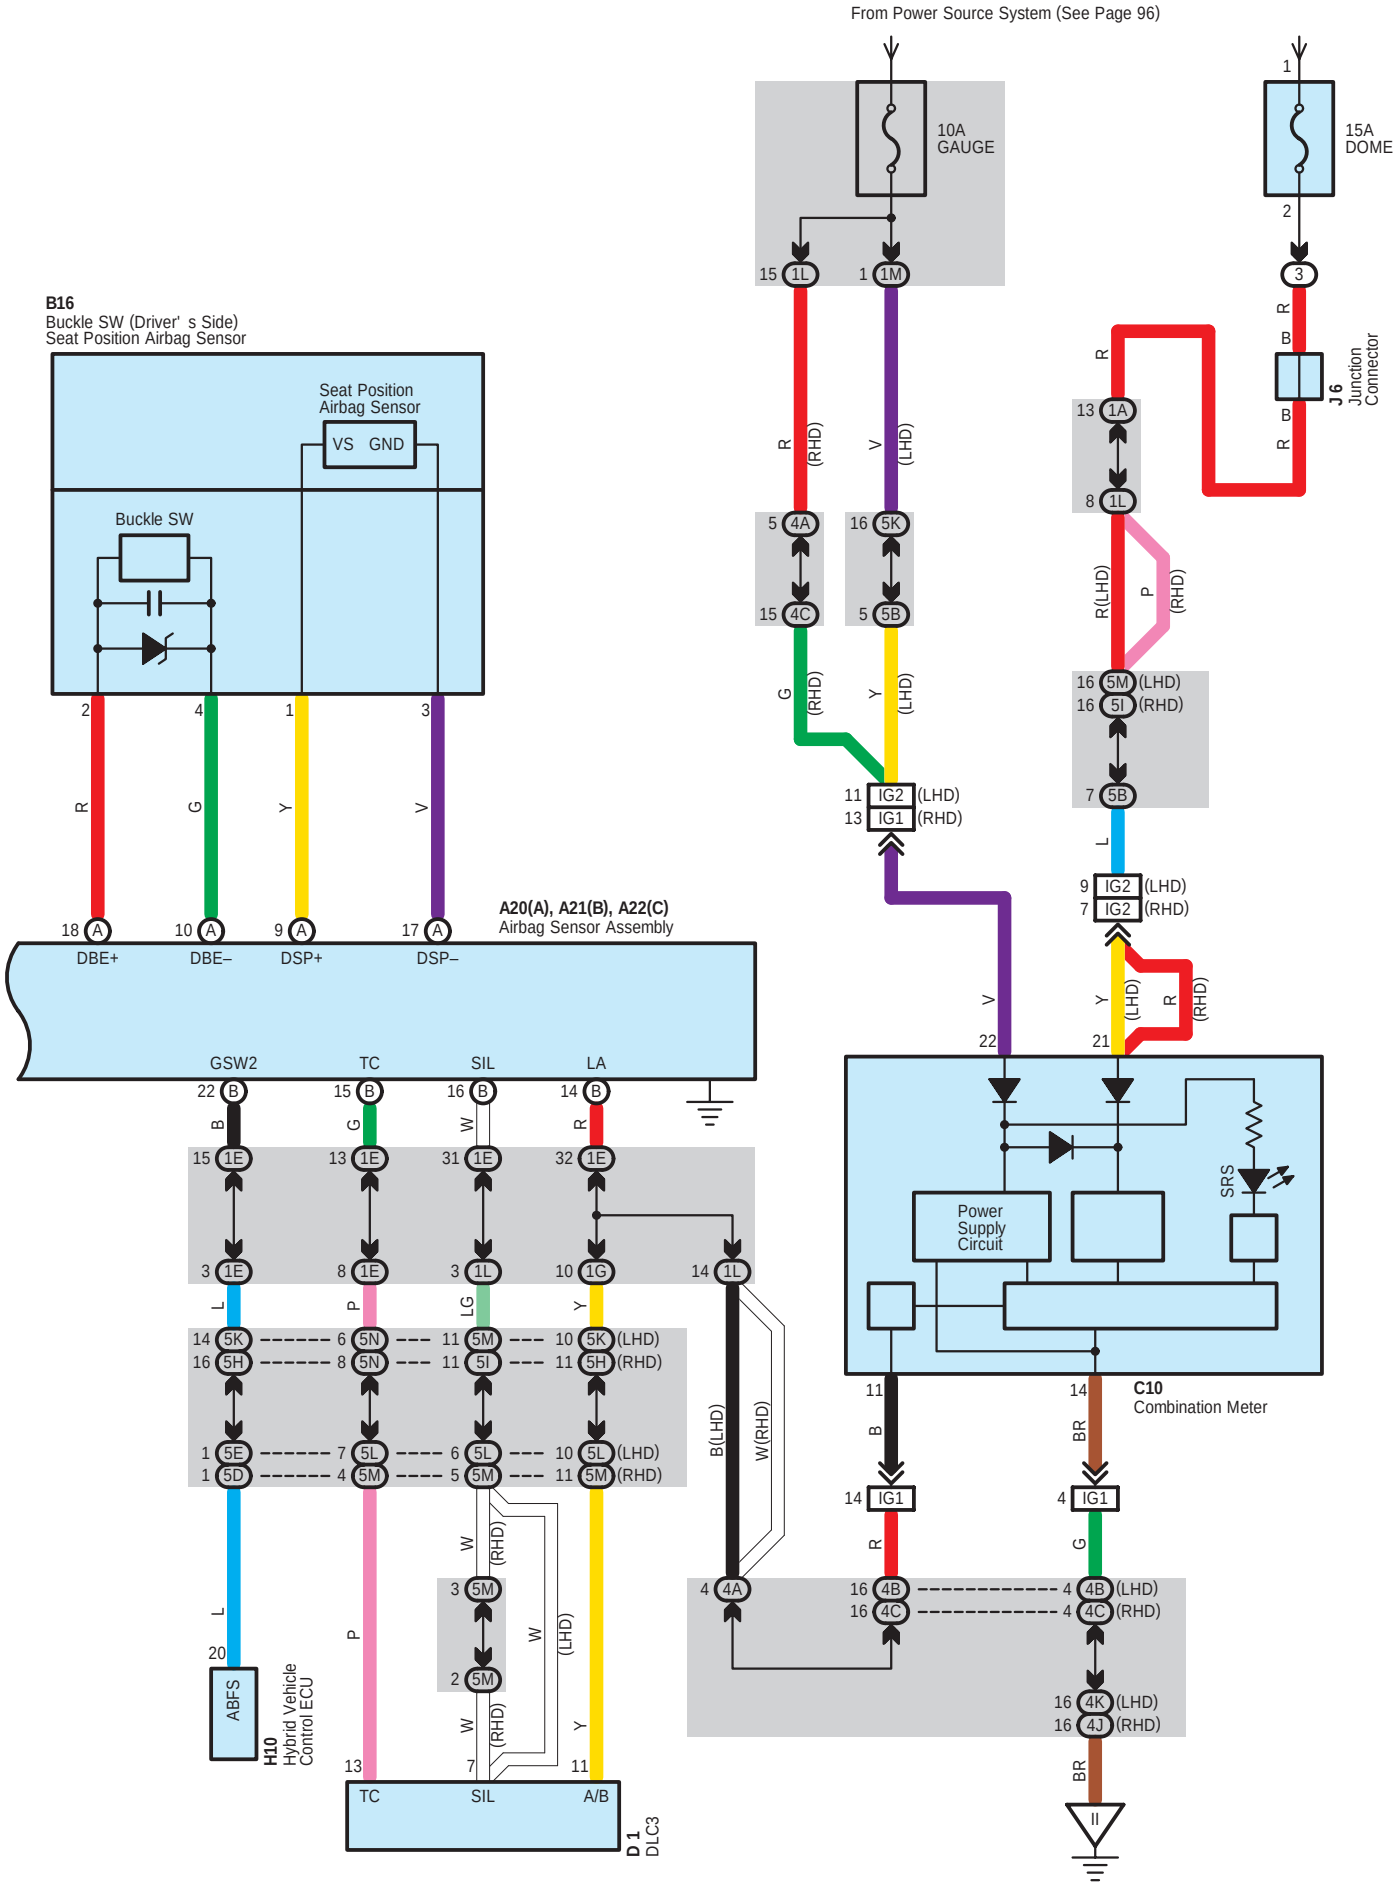


From Power Source System (See Page 96)
10A GAUGE
15A DOME
B16
Buckle SW (Driver' s Side)
Seat Position Airbag Sensor
Seat Position Airbag Sensor
VS GND
Buckle SW
J6 Junction Connector
A20(A), A21(B), A22(C)
Airbag Sensor Assembly
DBE+
DBE–
DSP+
DSP–
GSW2
TC
SIL
LA
Power Supply Circuit
SRS
C10
Combination Meter
H10
Hybrid Vehicle Control ECU
ABFS
D1
DLC3
TC
SIL
A/B
(LHD)
(RHD)