

Wireless Door Lock Control (w/o Smart Entry System)


From Power Source System (See Page 96)

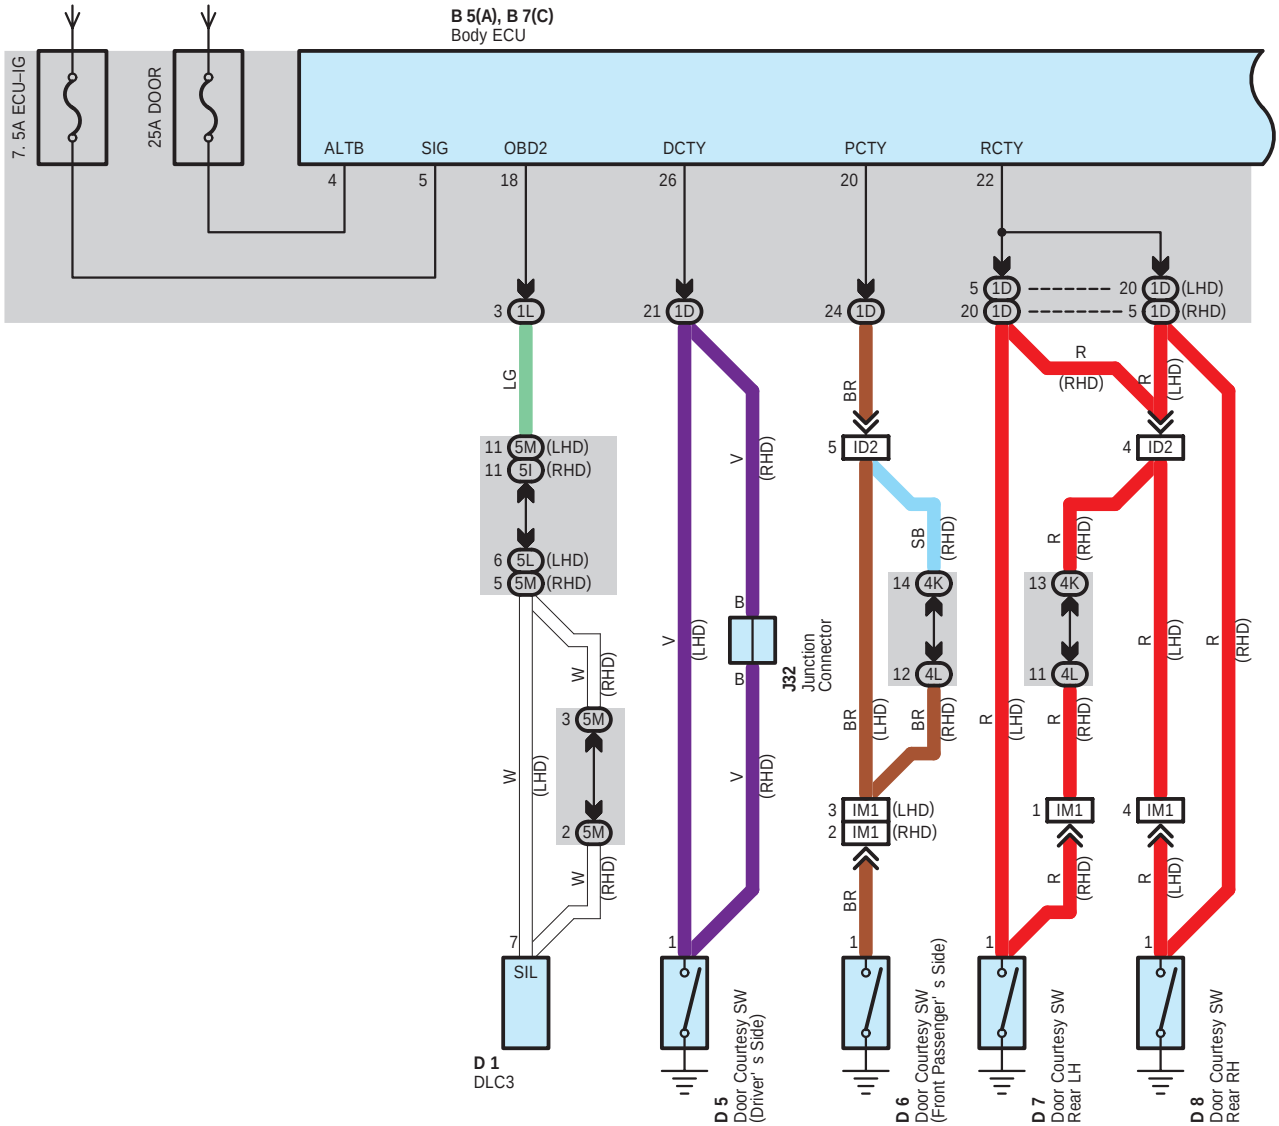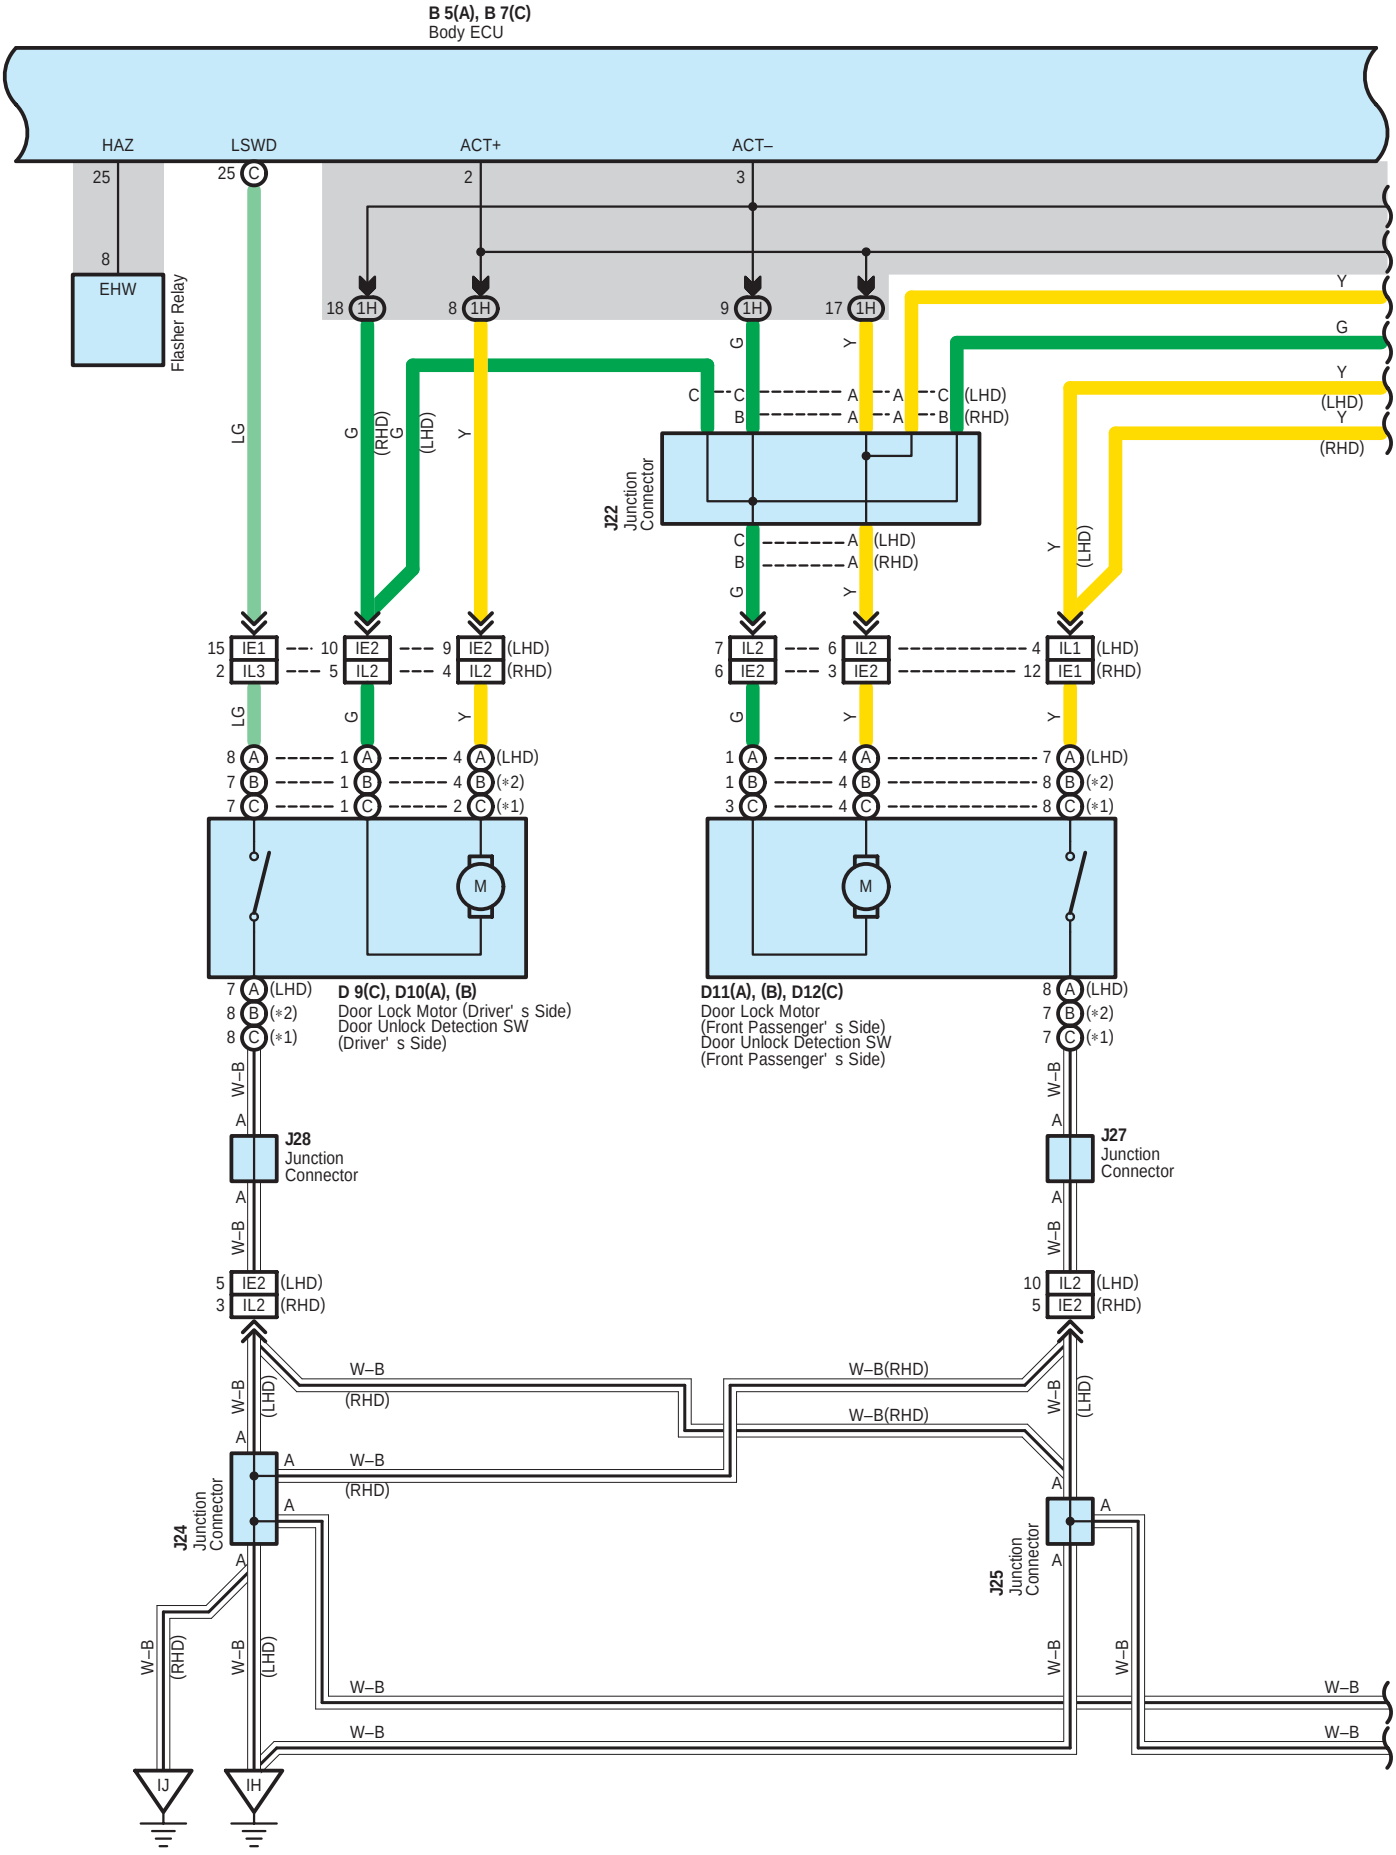


* 1 : RHD Except Australia, Singapore, Hong Kong
* 2 : Australia, Singapore, Hong Kong


B 5(A), B 7(C)
Body ECU
HAZ
LSWD
ACT+
ACT–
EHW
Flasher Relay
J22 Junction Connector
D 9(C), D10(A), (B)
Door Lock Motor (Driver' s Side)
Door Unlock Detection SW (Driver' s Side)
D11(A), (B), D12(C)
Door Lock Motor (Front Passenger' s Side)
Door Unlock Detection SW (Front Passenger' s Side)
J28 Junction Connector
J27 Junction Connector
J24 Junction Connector
J25 Junction Connector
W–B(RHD)
IJ
IH

Wireless Door Lock Control (w/o Smart Entry System)

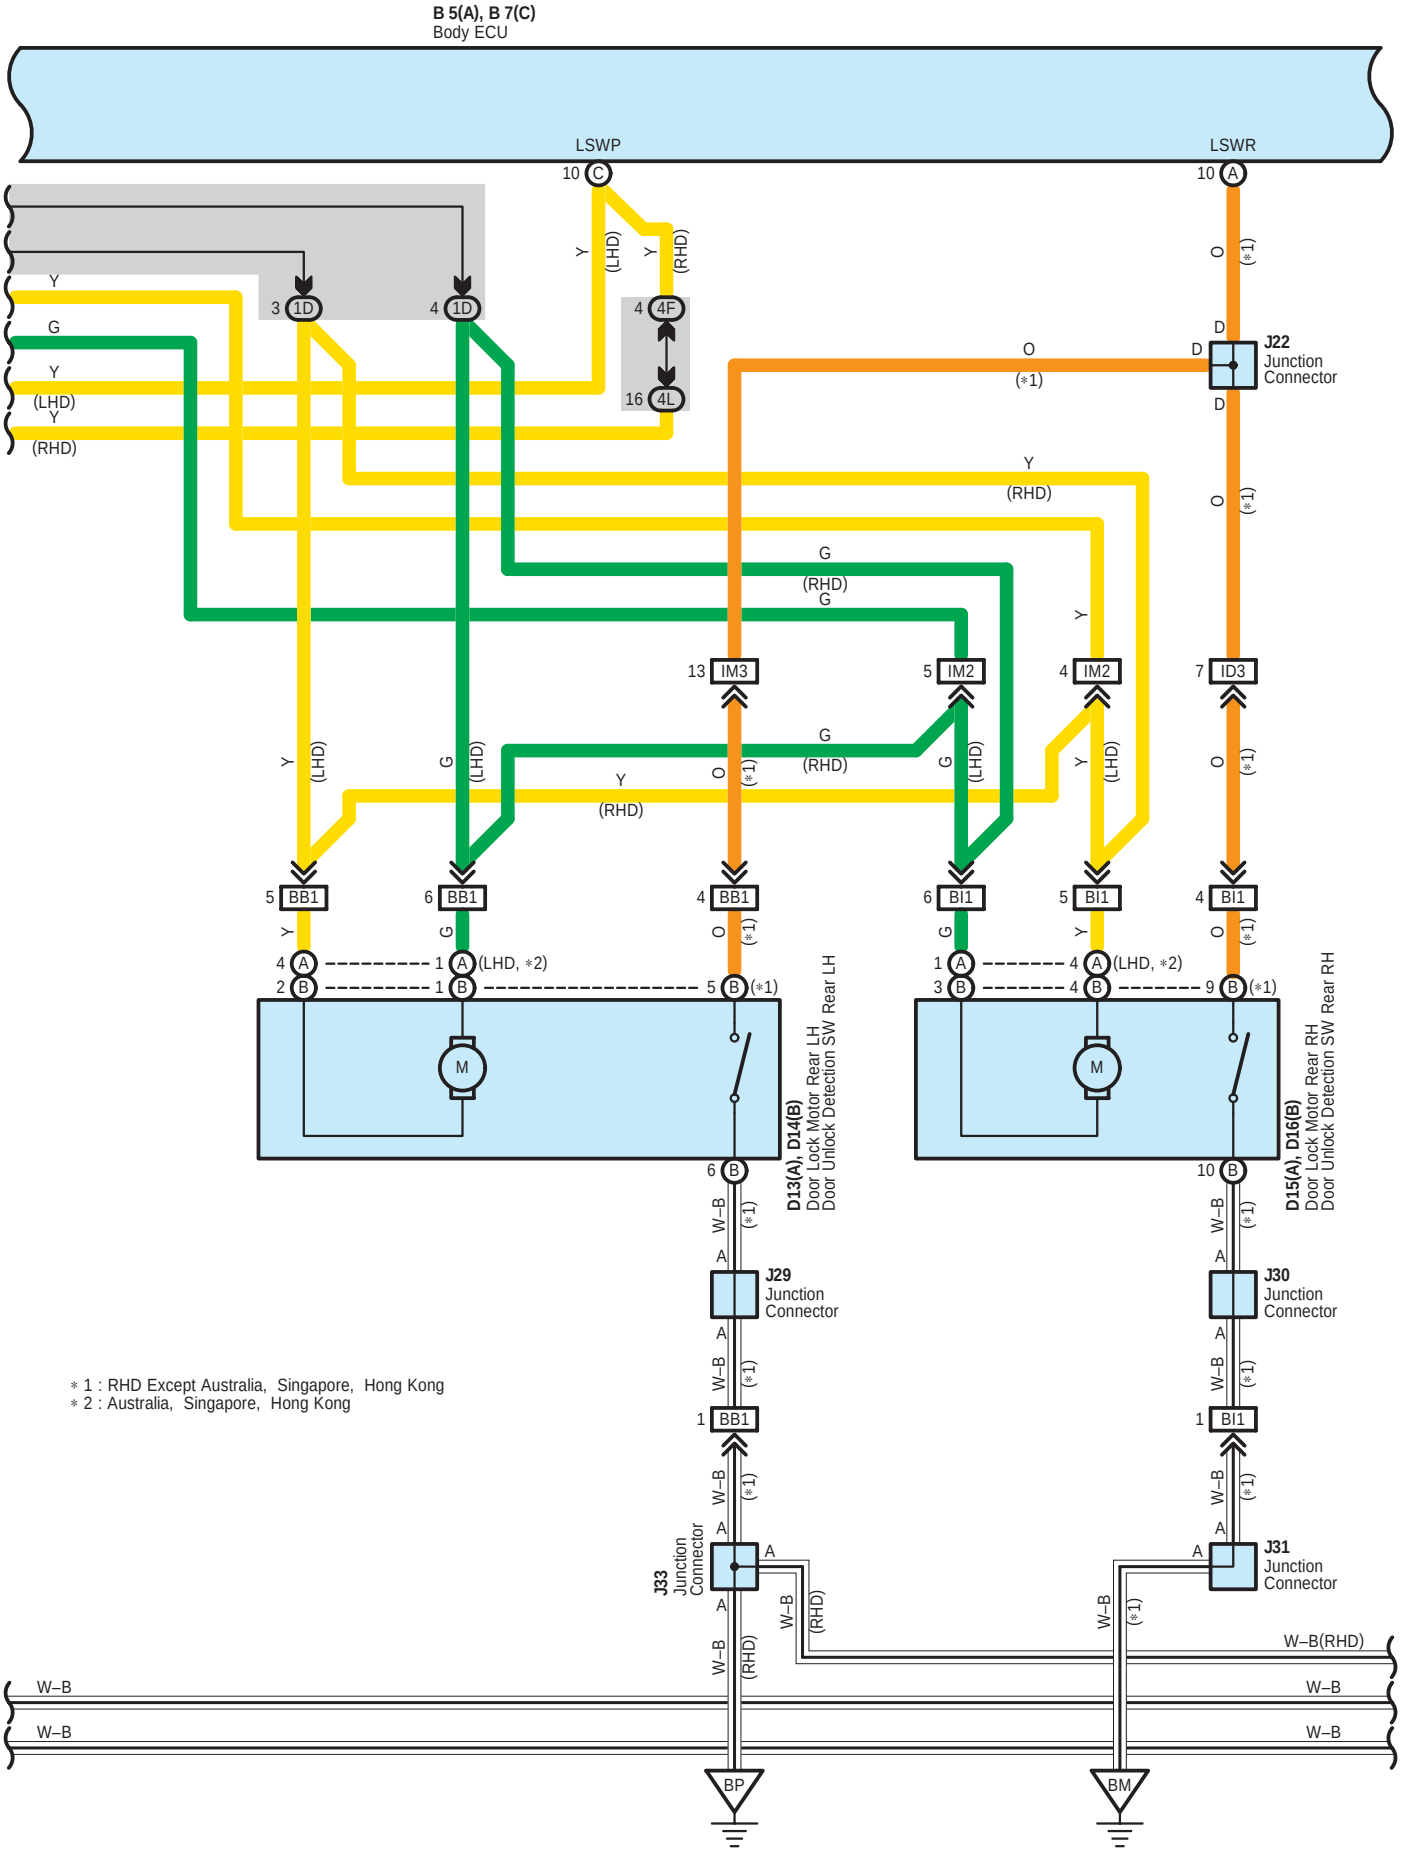

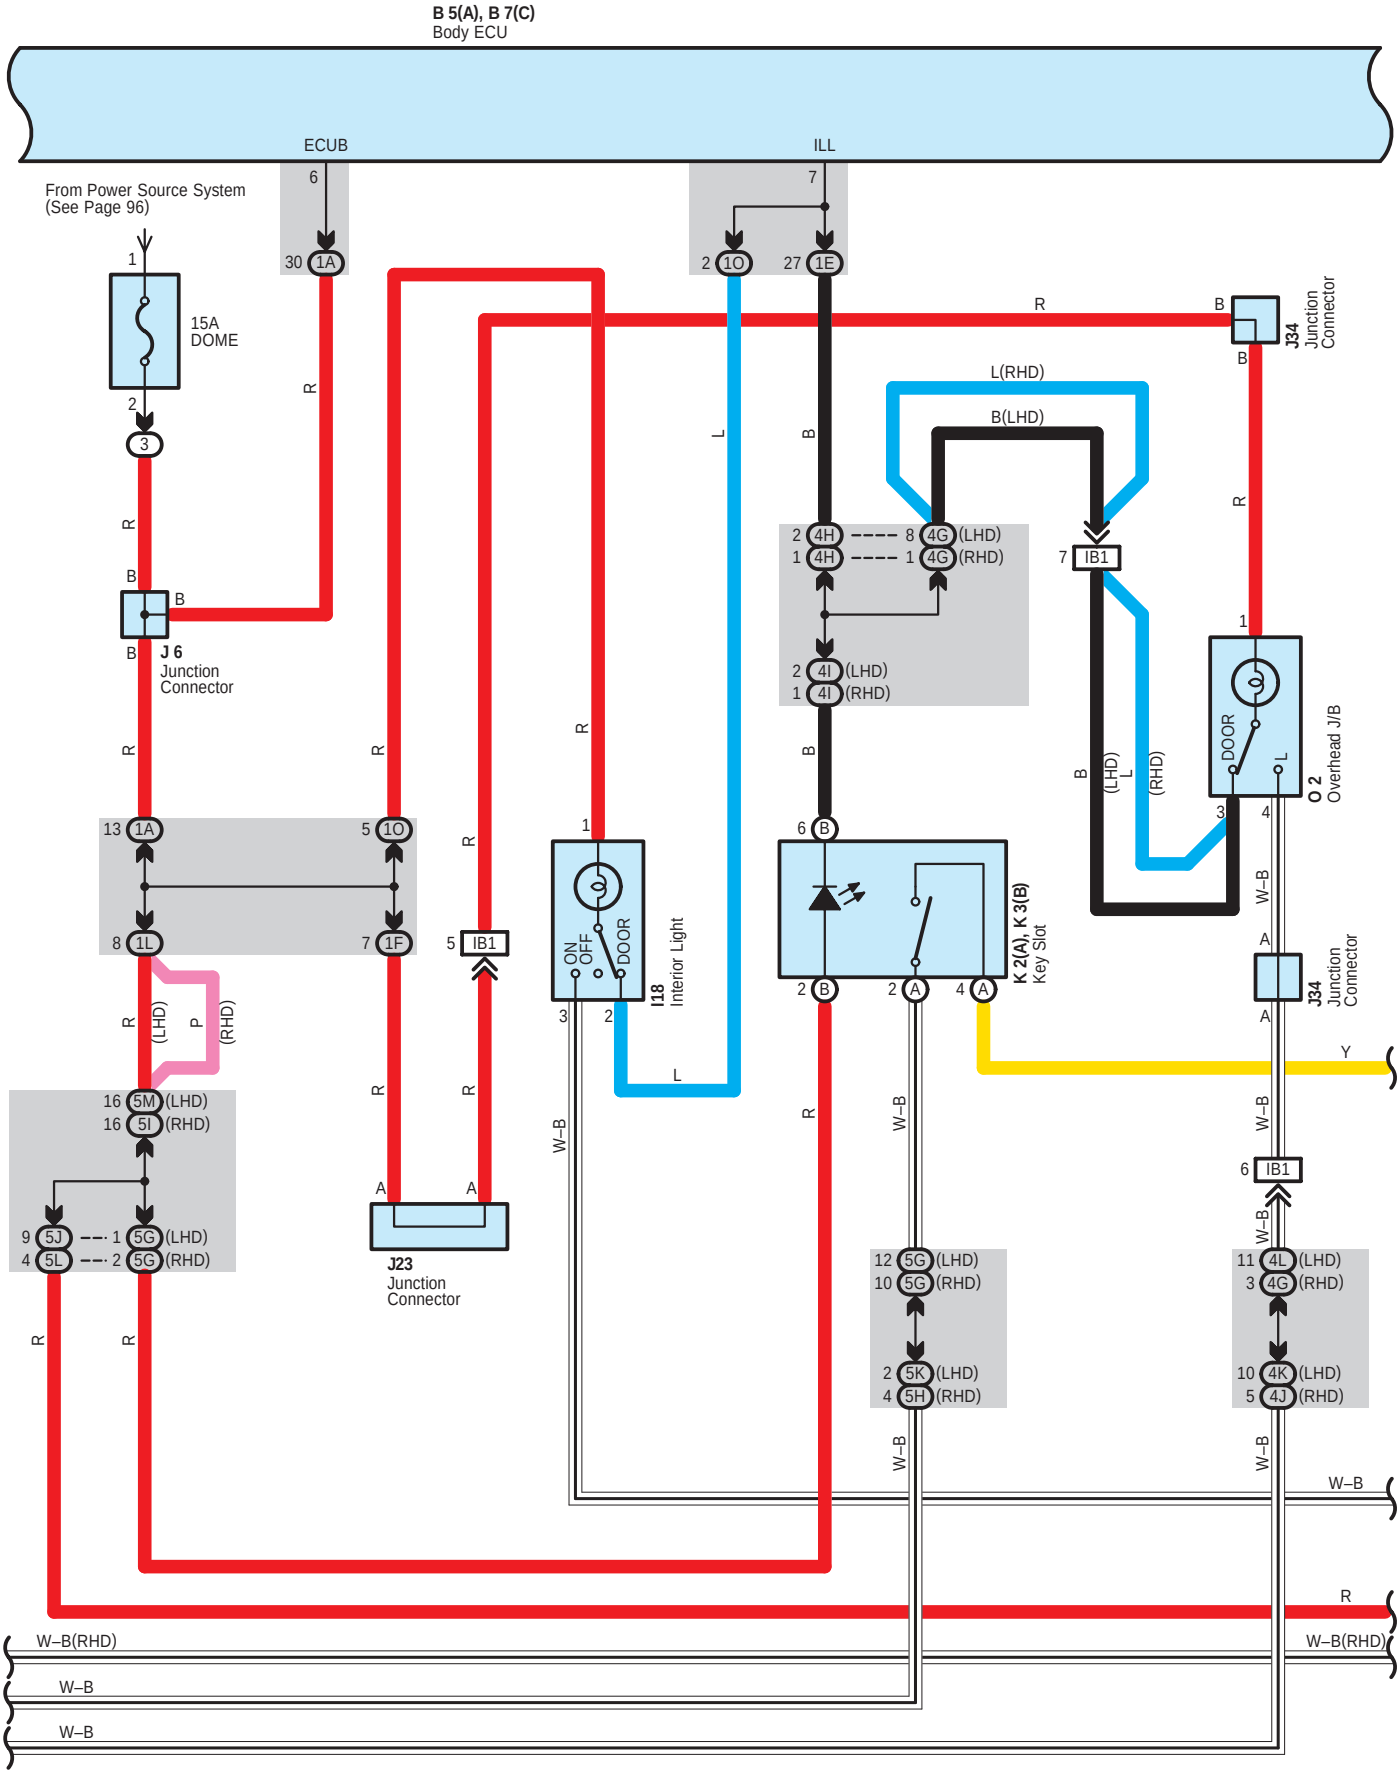
B 5(A), B 7(C)
Body ECU
ECUB
ILL
From Power Source System
(See Page 96)
15A
DOME
J 6
Junction
Connector
J23
Junction
Connector
I18
Interior Light
K 2(A), K 3(B)
Key Slot
J34
Junction
Connector
O 2
Overhead J/B
(LHD)
(RHD)
W–B(RHD)
W–B
W–B

Wireless Door Lock Control (w/o Smart Entry System)

