

J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

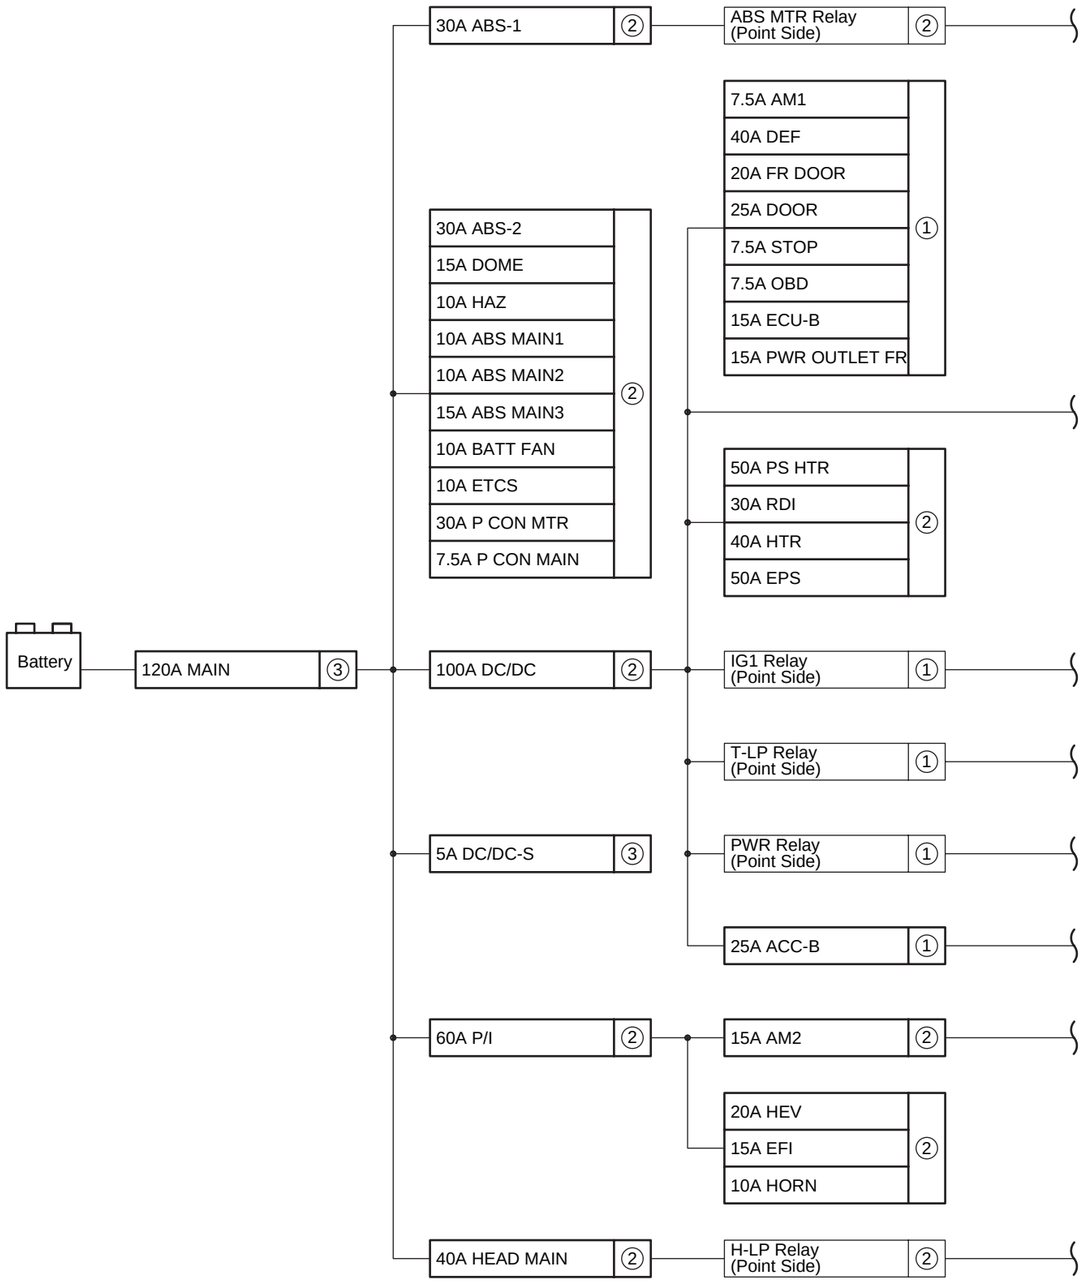

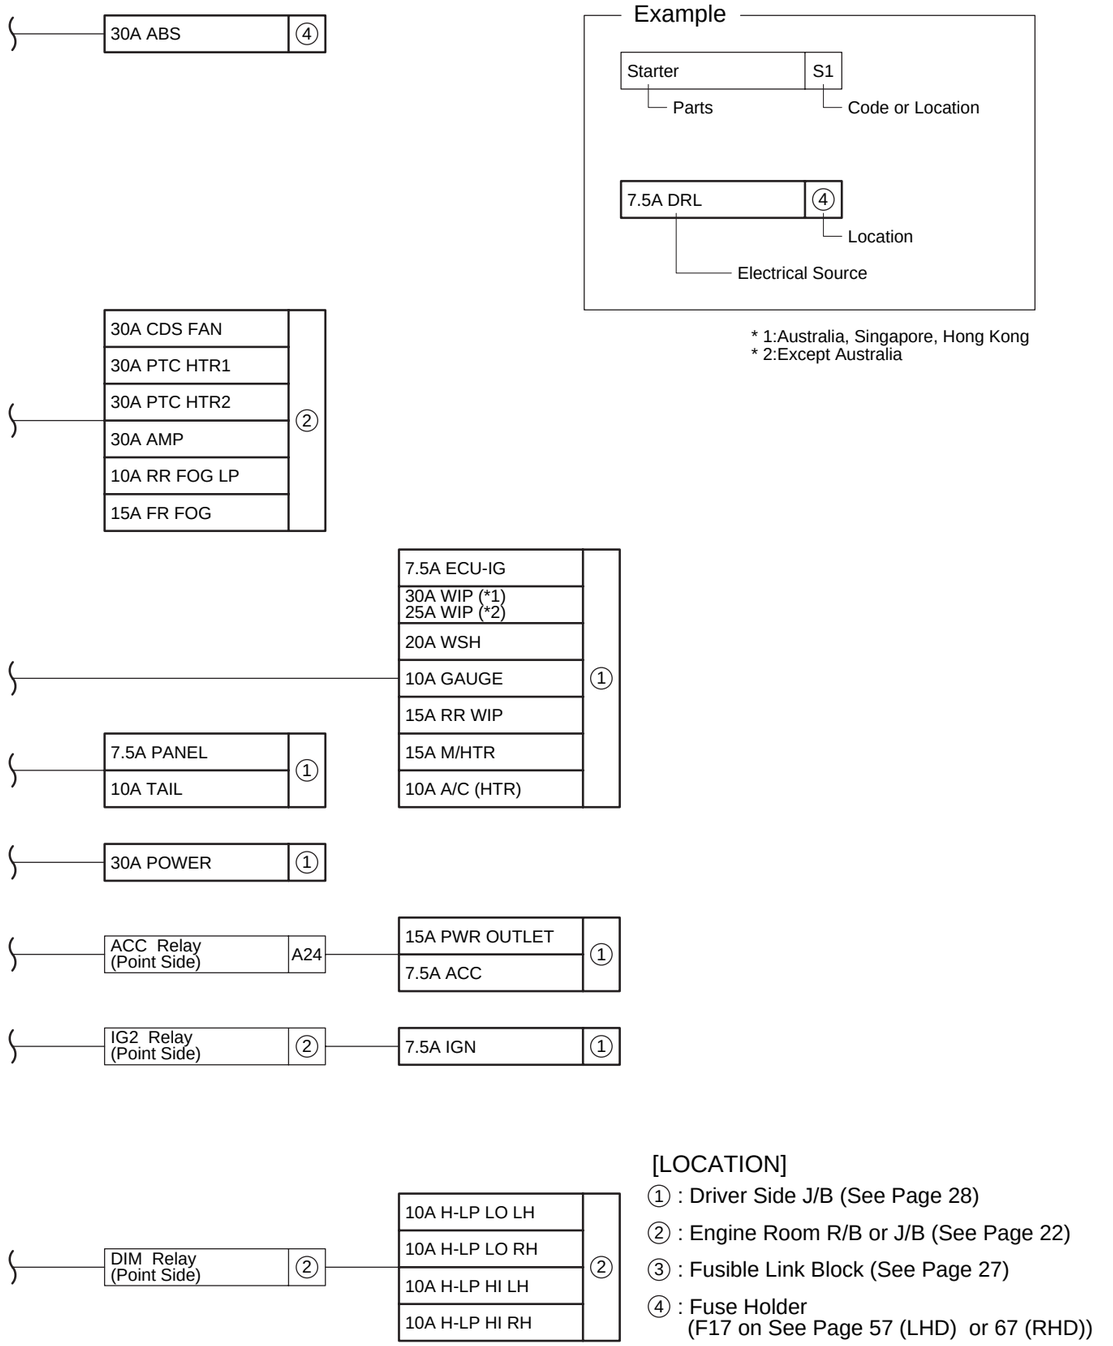

Example

* 1:Australia, Singapore, Hong Kong
* 2:Except Australia

[LOCATION]

① : Driver Side J/B (See Page 28)

② : Engine Room R/B or J/B (See Page 22)

③ : Fusible Link Block (See Page 27)

④ : Fuse Holder
(F17 on See Page 57 (LHD) or 67 (RHD))