

(Cont. next page)

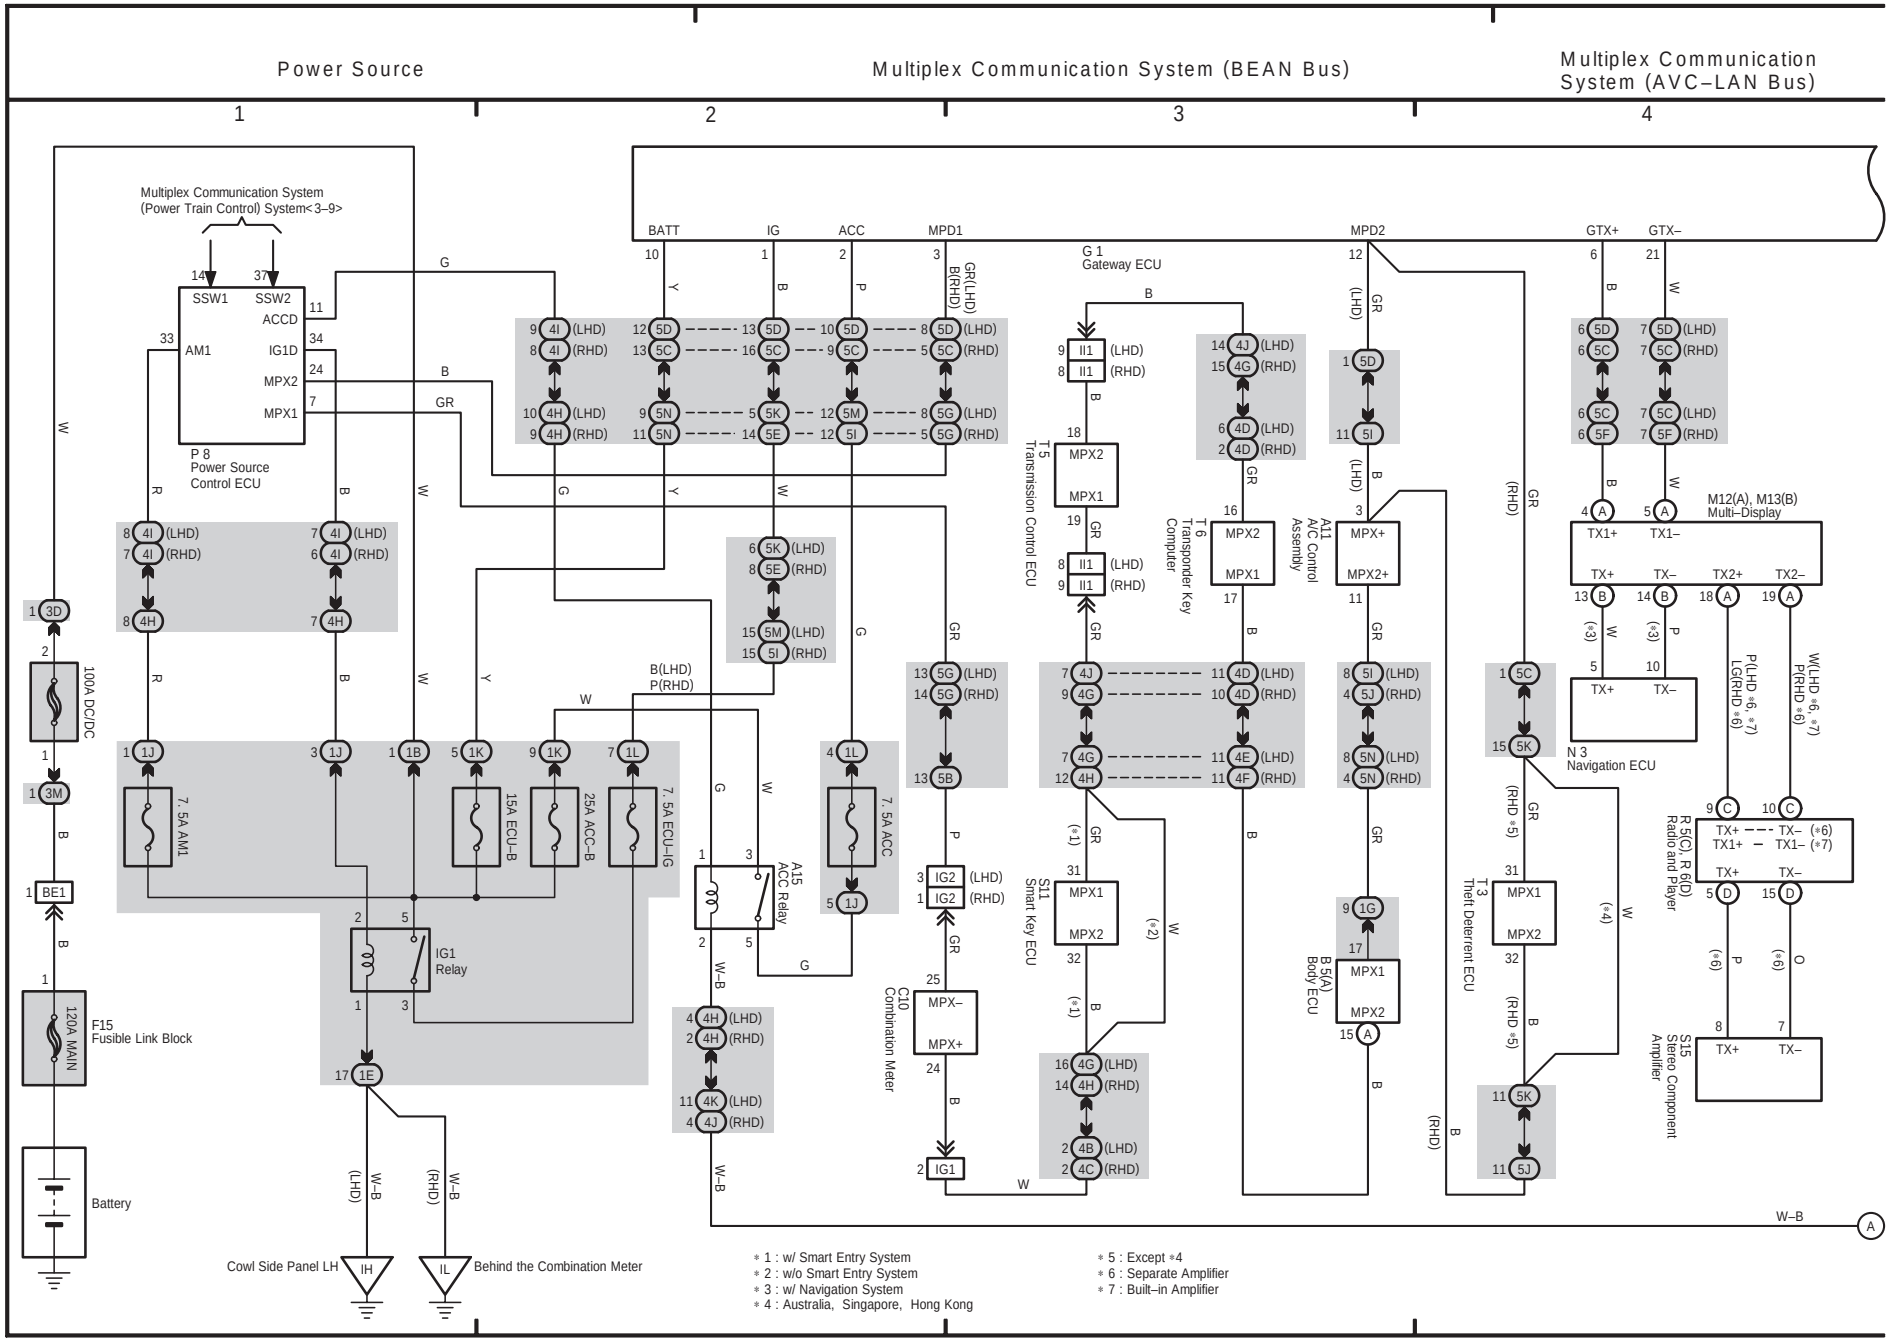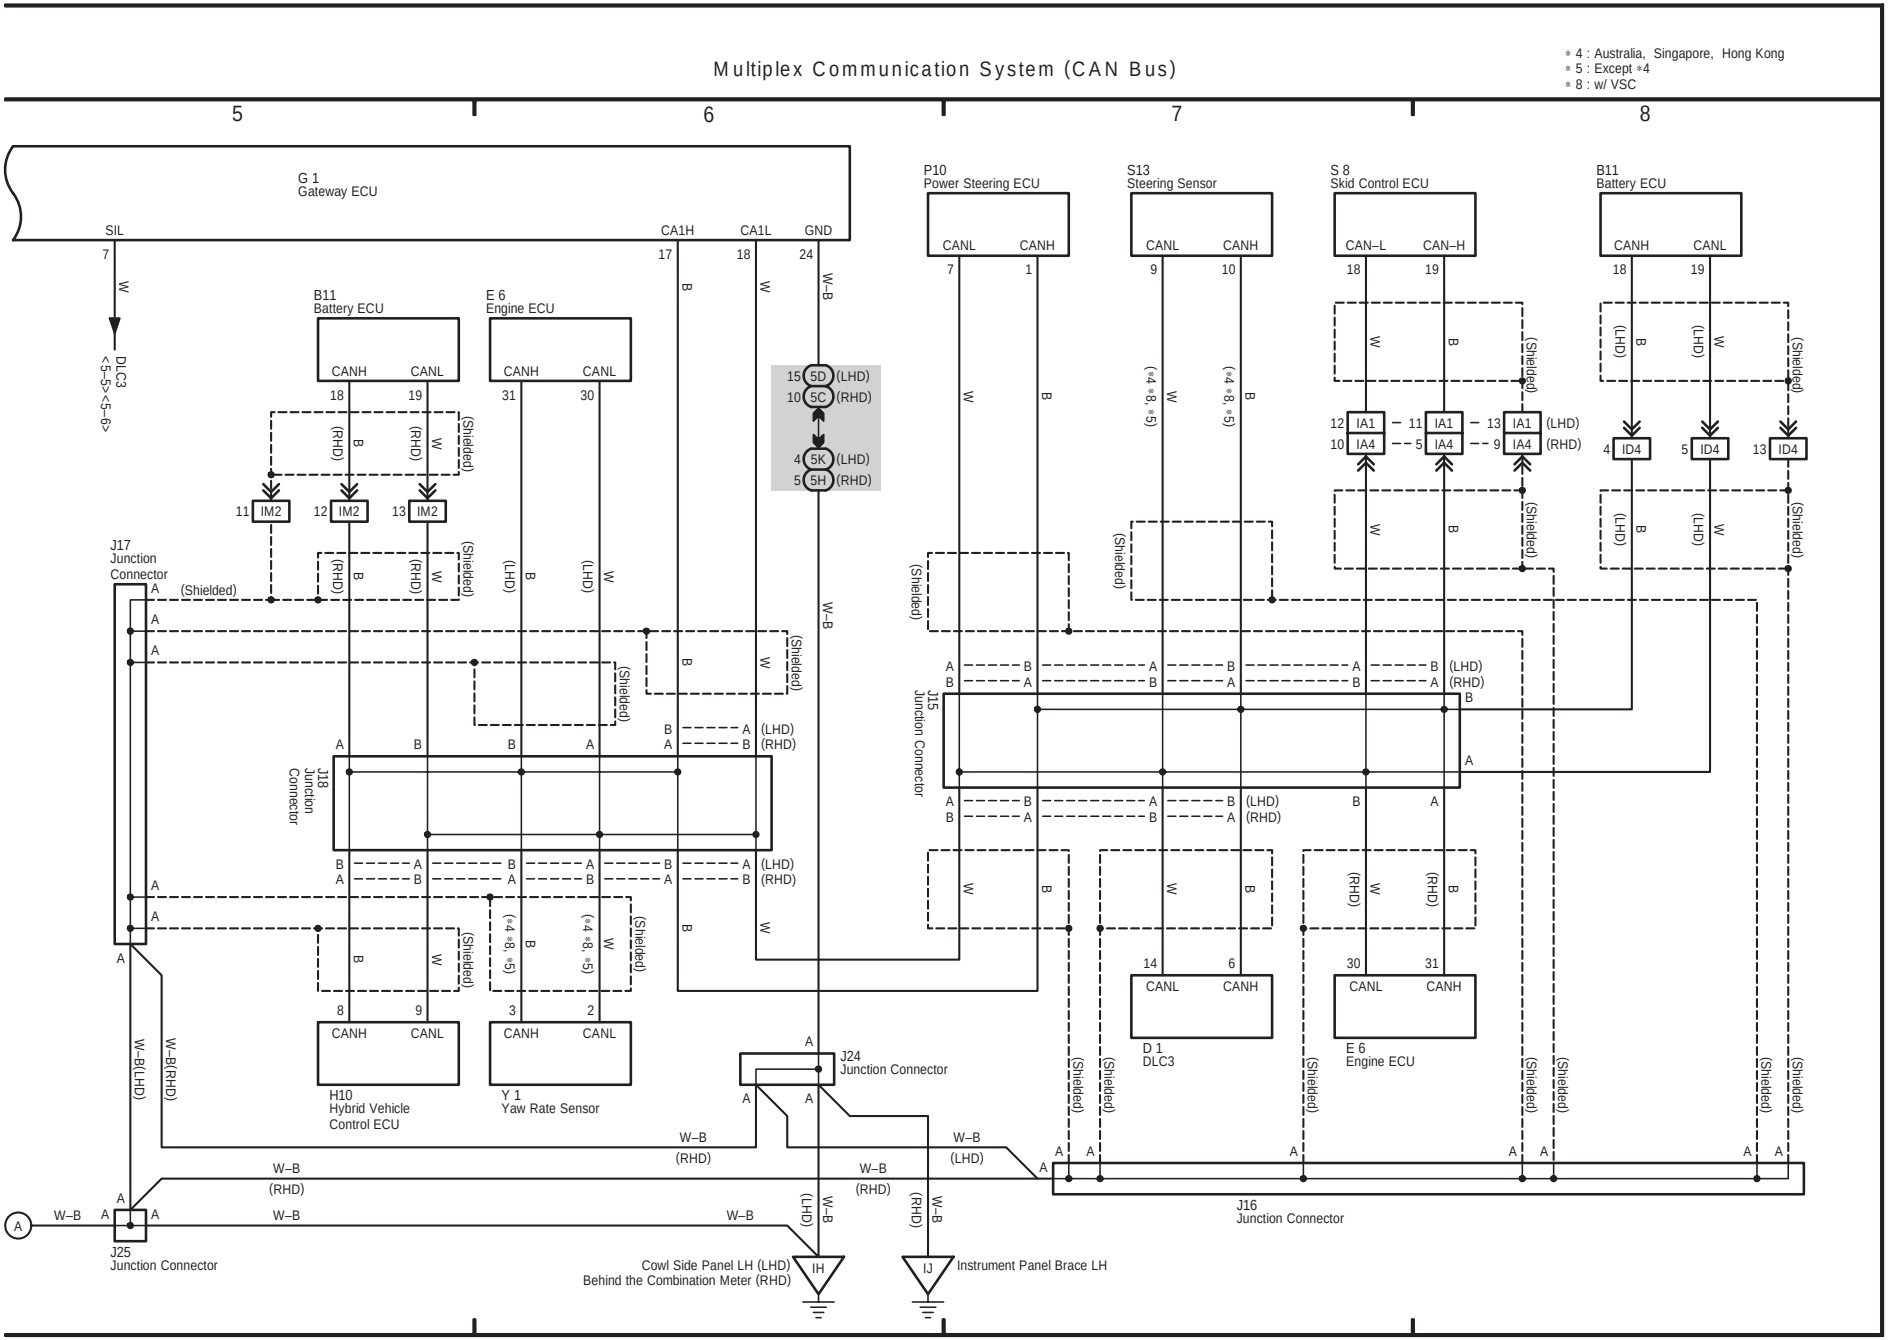


Multiplex Communication System (CAN Bus)
* 4 : Australia, Singapore, Hong Kong
* 5 : Except *4
* 8 : w/ VSC
5
6
7
8
G 1
Gateway ECU
SIL
CA1H
CA1L
GND
DLC3
<5-5><5-6>
B11
Battery ECU
E 6
Engine ECU
CANH
CANL
(LHD)
(RHD)
(Shielded)
IM2
J17
Junction
Connector
J18
Junction
Connector
J15
Junction Connector
J24
Junction Connector
J25
Junction Connector
J16
Junction Connector
H10
Hybrid Vehicle
Control ECU
Y 1
Yaw Rate Sensor
P10
Power Steering ECU
S13
Steering Sensor
S 8
Skid Control ECU
CAN–L
CAN–H
B11
Battery ECU
IA1
IA4
ID4
D 1
DLC3
E 6
Engine ECU
W–B
W–B(LHD)
W–B(RHD)
Cowl Side Panel LH (LHD)
Behind the Combination Meter (RHD)
IH
IJ
Instrument Panel Brace LH