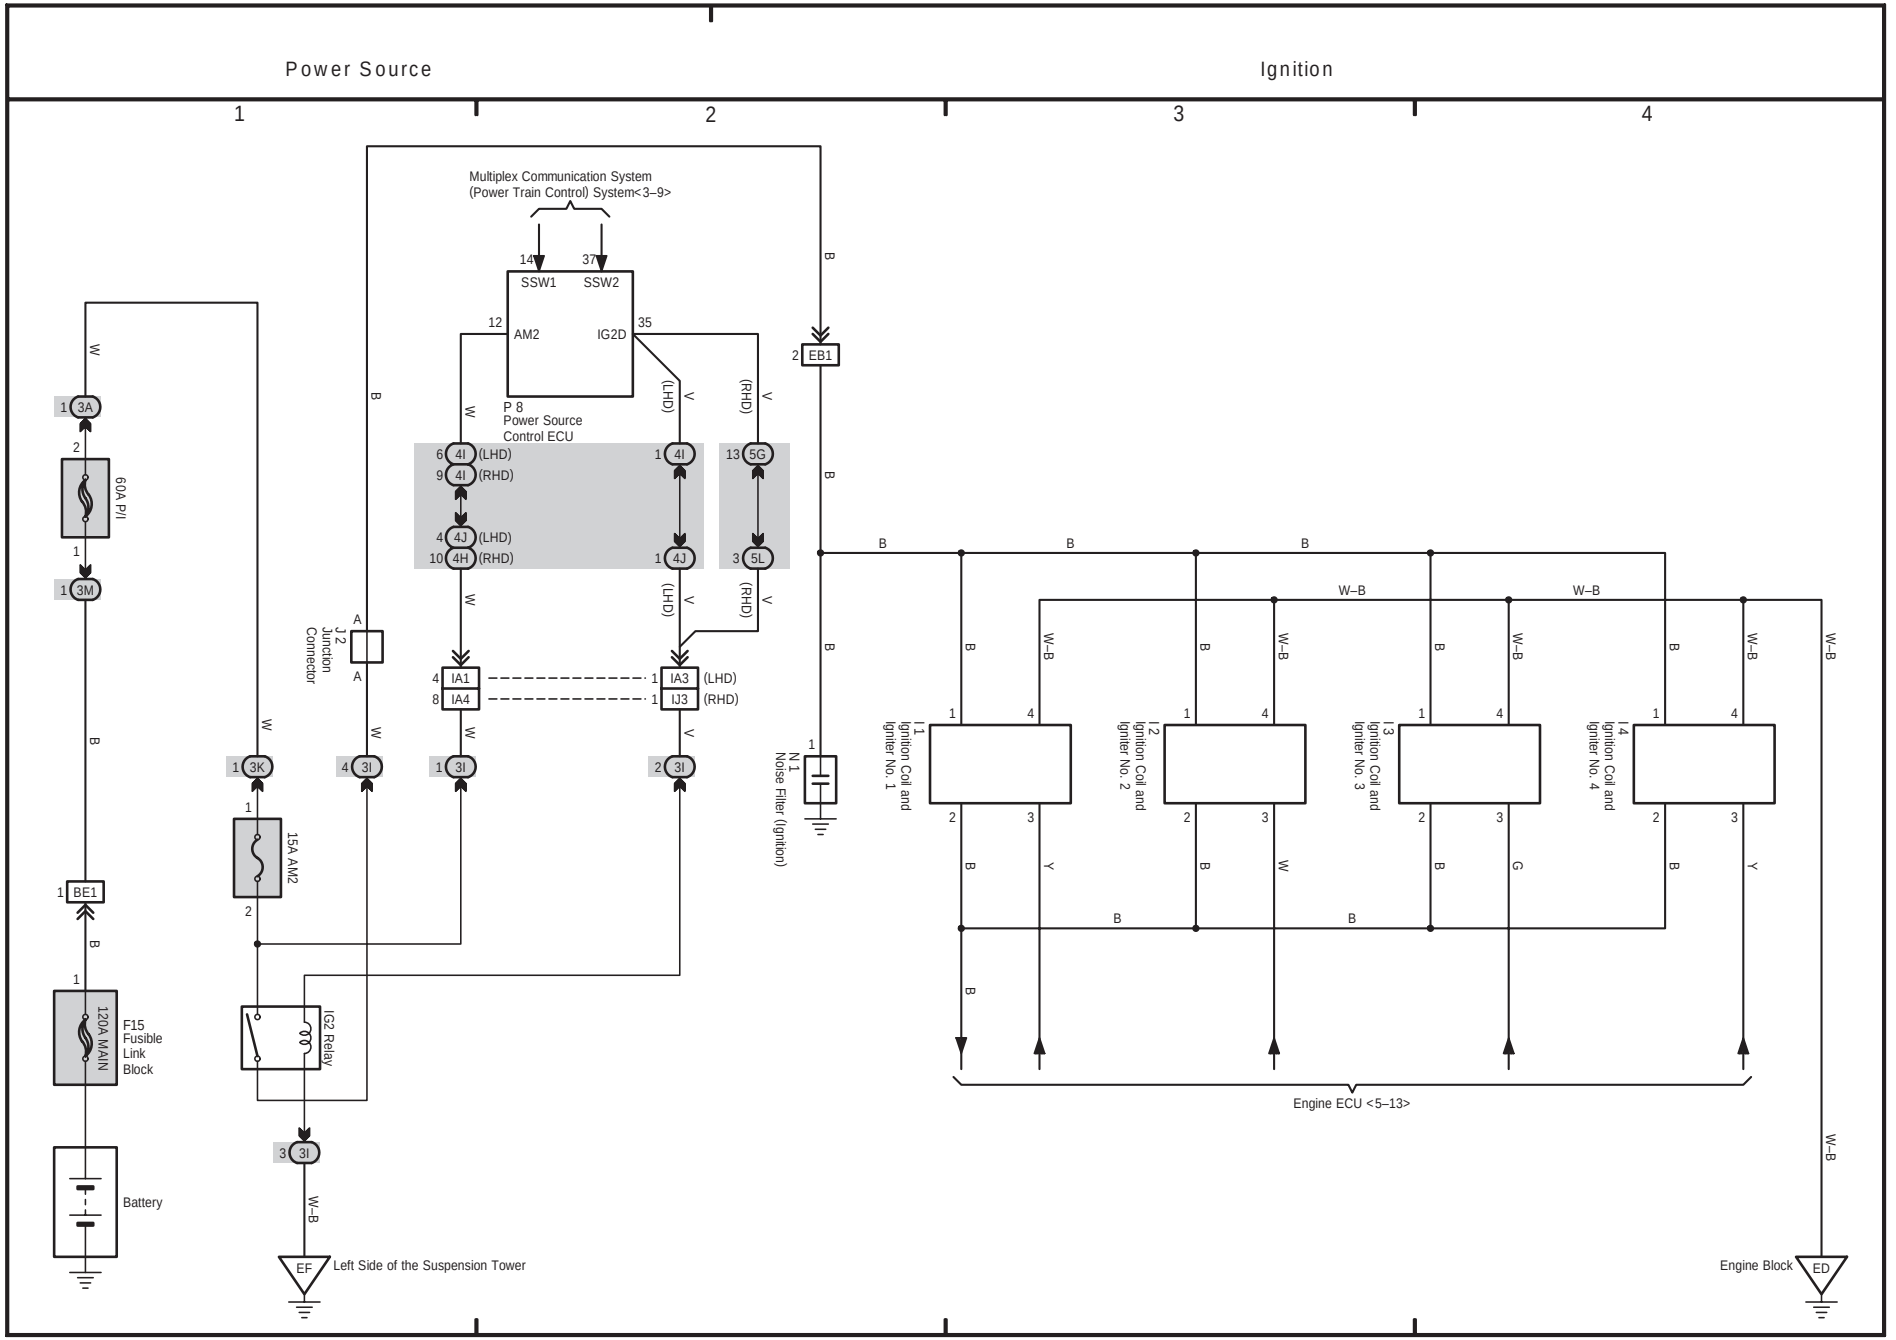

Power Source
Ignition
1
2
3
4
Multiplex Communication System
(Power Train Control) System<3–9>
SSW1
SSW2
AM2
IG2D
P 8
Power Source
Control ECU
(LHD)
(RHD)
EB1
3A
60A P/I
3M
BE1
120A MAIN
F15
Fusible
Link
Block
Battery
3K
15A AM2
IG2 Relay
3I
J2
Junction
Connector
IA1
IA4
IA3
IJ3
N 1
Noise Filter (Ignition)
I1
Ignition Coil and
Igniter No. 1
I2
Ignition Coil and
Igniter No. 2
I3
Ignition Coil and
Igniter No. 3
I4
Ignition Coil and
Igniter No. 4
Engine ECU <5–13>
EF
Left Side of the Suspension Tower
ED
Engine Block
W–B