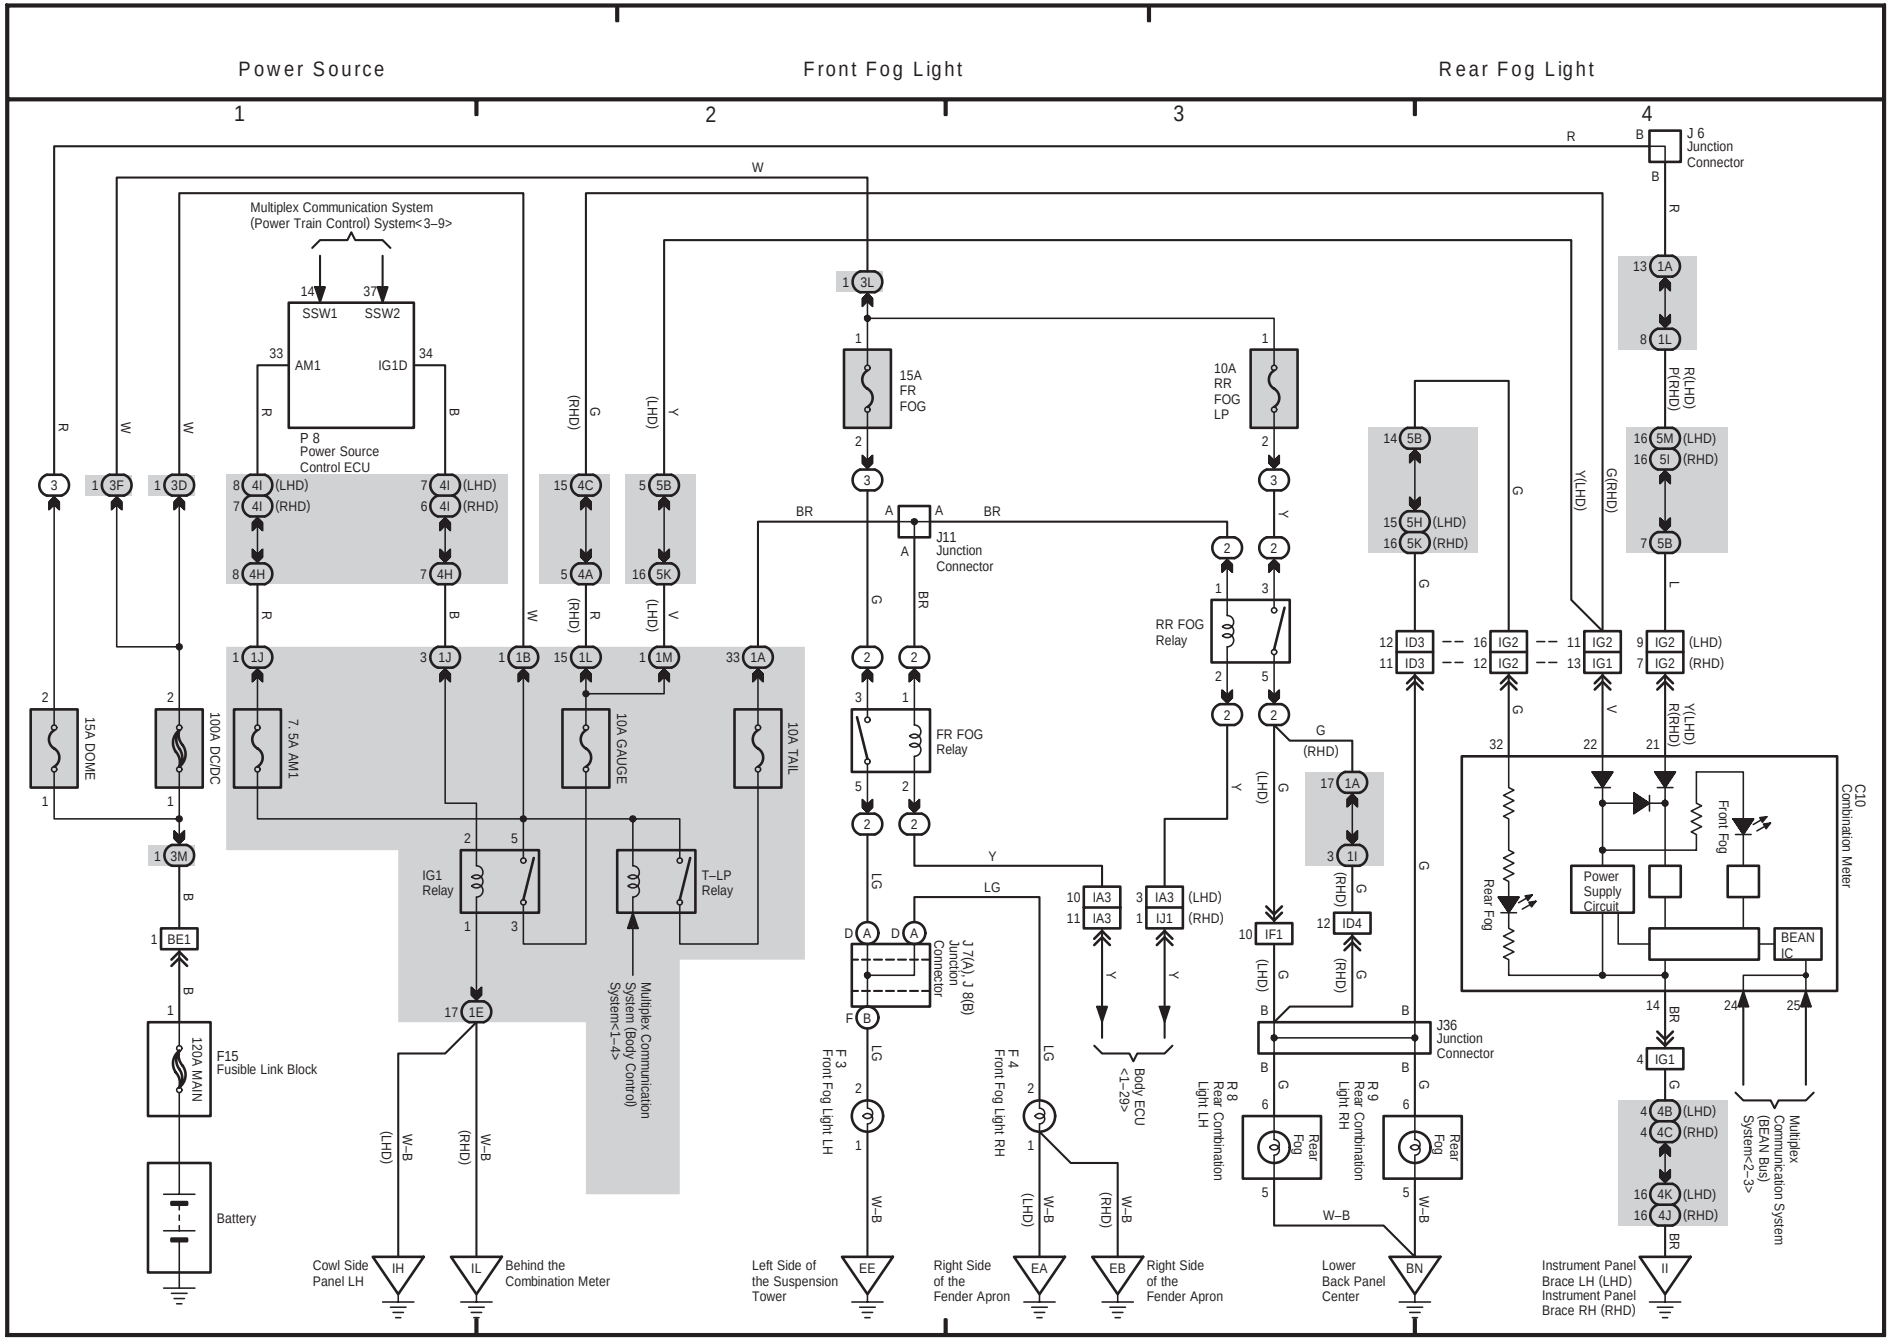

Power Source
Front Fog Light
Rear Fog Light
1
2
3
4
Multiplex Communication System (Power Train Control) System<3–9>
SSW1
SSW2
AM1
IG1D
P 8 Power Source Control ECU
15A DOME
100A DC/DC
7. 5A AM1
10A GAUGE
10A TAIL
IG1 Relay
T–LP Relay
120A MAIN
F15 Fusible Link Block
Battery
Multiplex Communication System (Body Control) System<1–4>
15A FR FOG
FR FOG Relay
J11 Junction Connector
J 7(A), J 8(B) Junction Connector
F 3 Front Fog Light LH
F 4 Front Fog Light RH
Body ECU <1–29>
10A RR FOG LP
RR FOG Relay
R 8 Rear Combination Light LH
R 9 Rear Combination Light RH
J36 Junction Connector
Rear Fog
J 6 Junction Connector
C10 Combination Meter
Front Fog
Power Supply Circuit
BEAN IC
Multiplex Communication System (BEAN Bus) System<2–3>
Cowl Side Panel LH
Behind the Combination Meter
Left Side of the Suspension Tower
Right Side of the Fender Apron
Lower Back Panel Center
Instrument Panel Brace LH (LHD) Instrument Panel Brace RH (RHD)