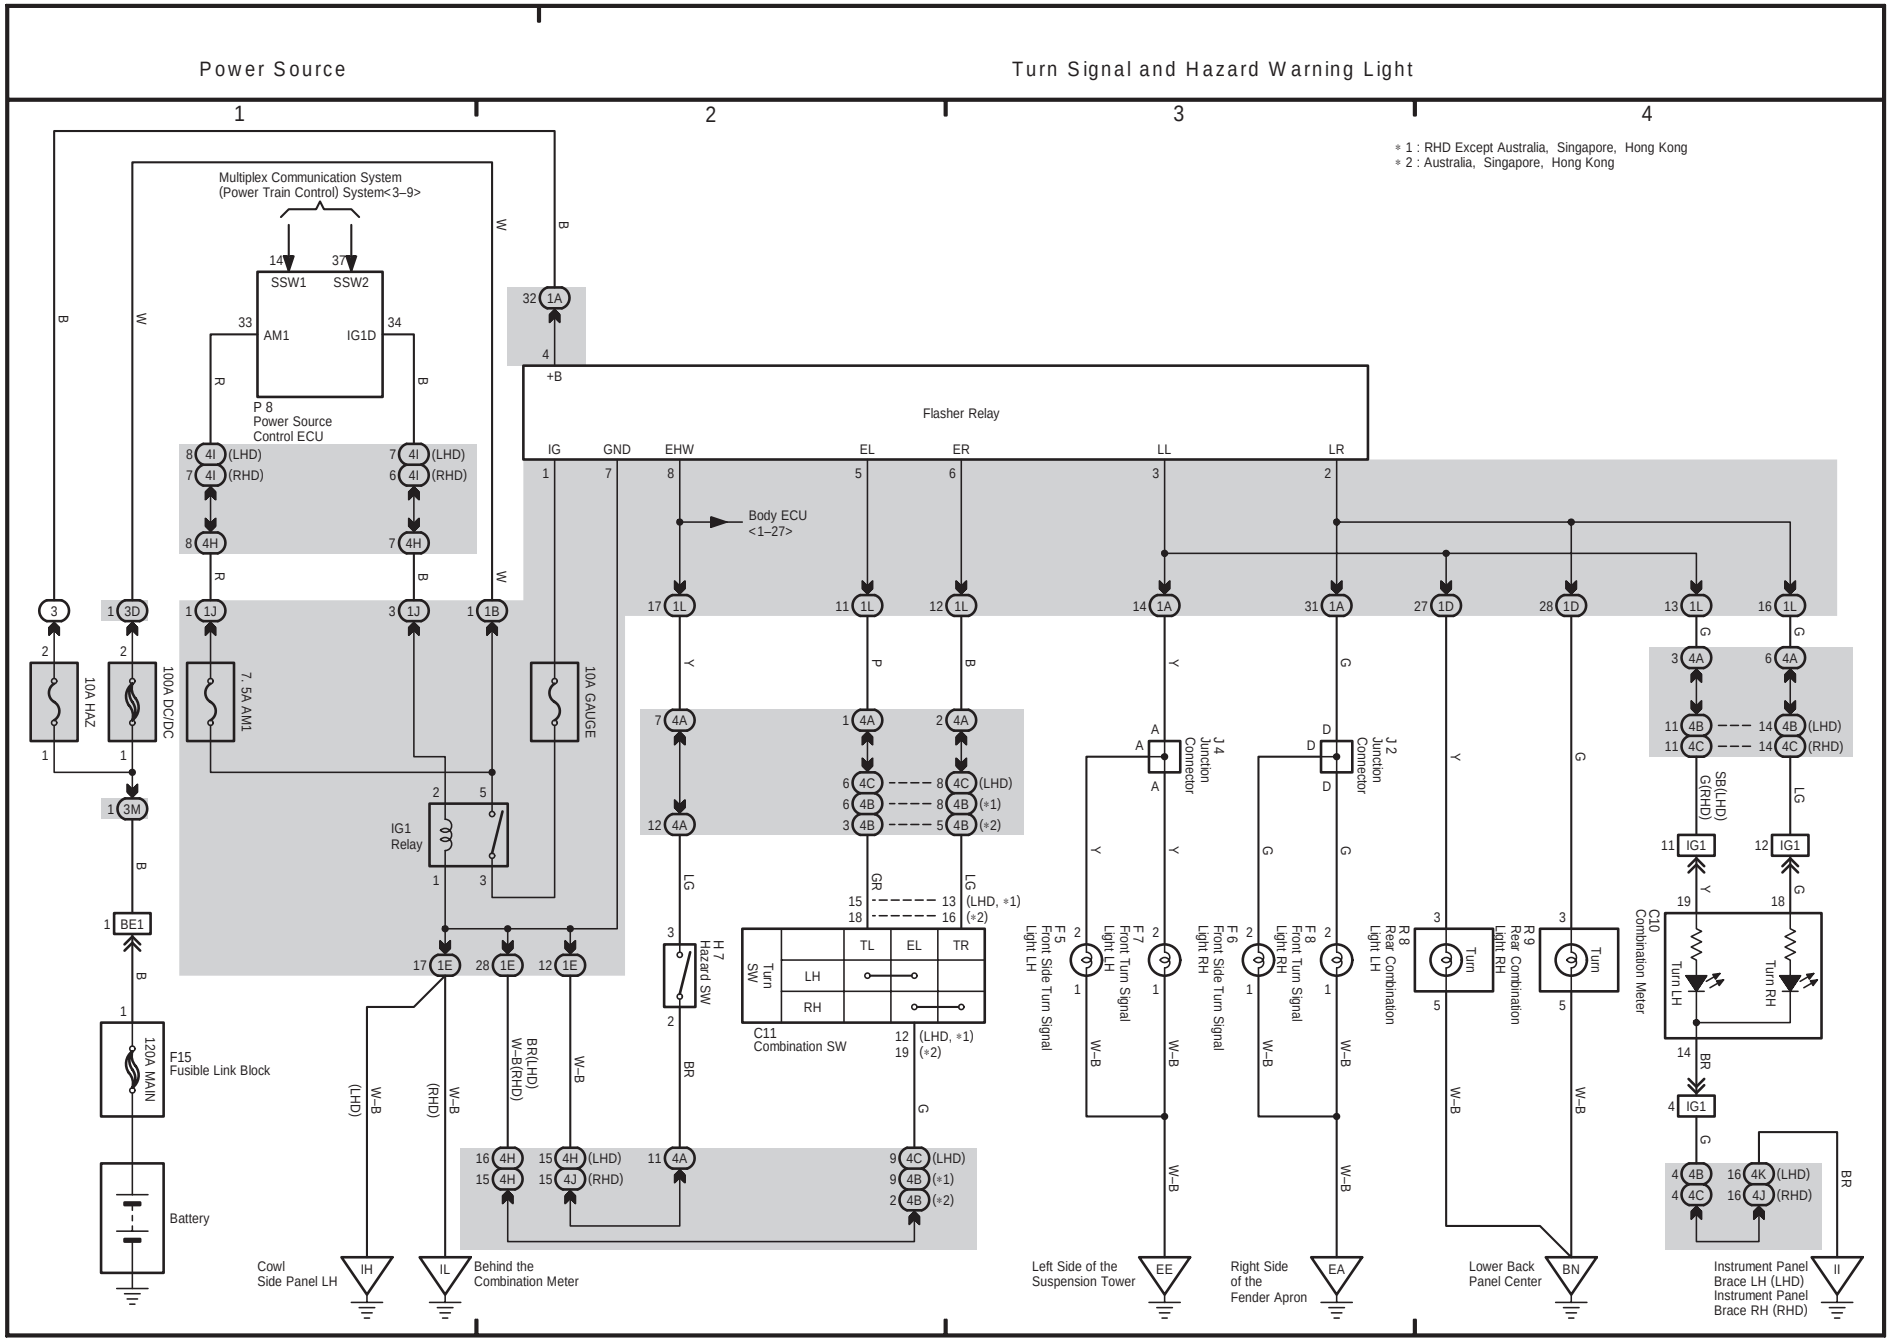

Power Source
Turn Signal and Hazard Warning Light
1
2
3
4
* 1 : RHD Except Australia, Singapore, Hong Kong
* 2 : Australia, Singapore, Hong Kong
Multiplex Communication System (Power Train Control) System<3–9>
SSW1
SSW2
AM1
IG1D
P 8 Power Source Control ECU
Flasher Relay
+B
IG
GND
EHW
EL
ER
LL
LR
Body ECU <1–27>
10A HAZ
100A DC/DC
7. 5A AM1
10A GAUGE
IG1 Relay
H 7 Hazard SW
C11 Combination SW
TL
EL
TR
LH
RH
Turn SW
F15 Fusible Link Block
120A MAIN
Battery
J 4 Junction Connector
J 2 Junction Connector
F 5 Front Side Turn Signal Light LH
F 7 Front Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 8 Front Turn Signal Light RH
R 8 Rear Combination Light LH
R 9 Rear Combination Light RH
Turn
C10 Combination Meter
Turn LH
Turn RH
IG1
Cowl Side Panel LH
IH
IL
Behind the Combination Meter
Left Side of the Suspension Tower
EE
Right Side of the Fender Apron
EA
Lower Back Panel Center
BN
Instrument Panel Brace LH (LHD) Instrument Panel Brace RH (RHD)
II