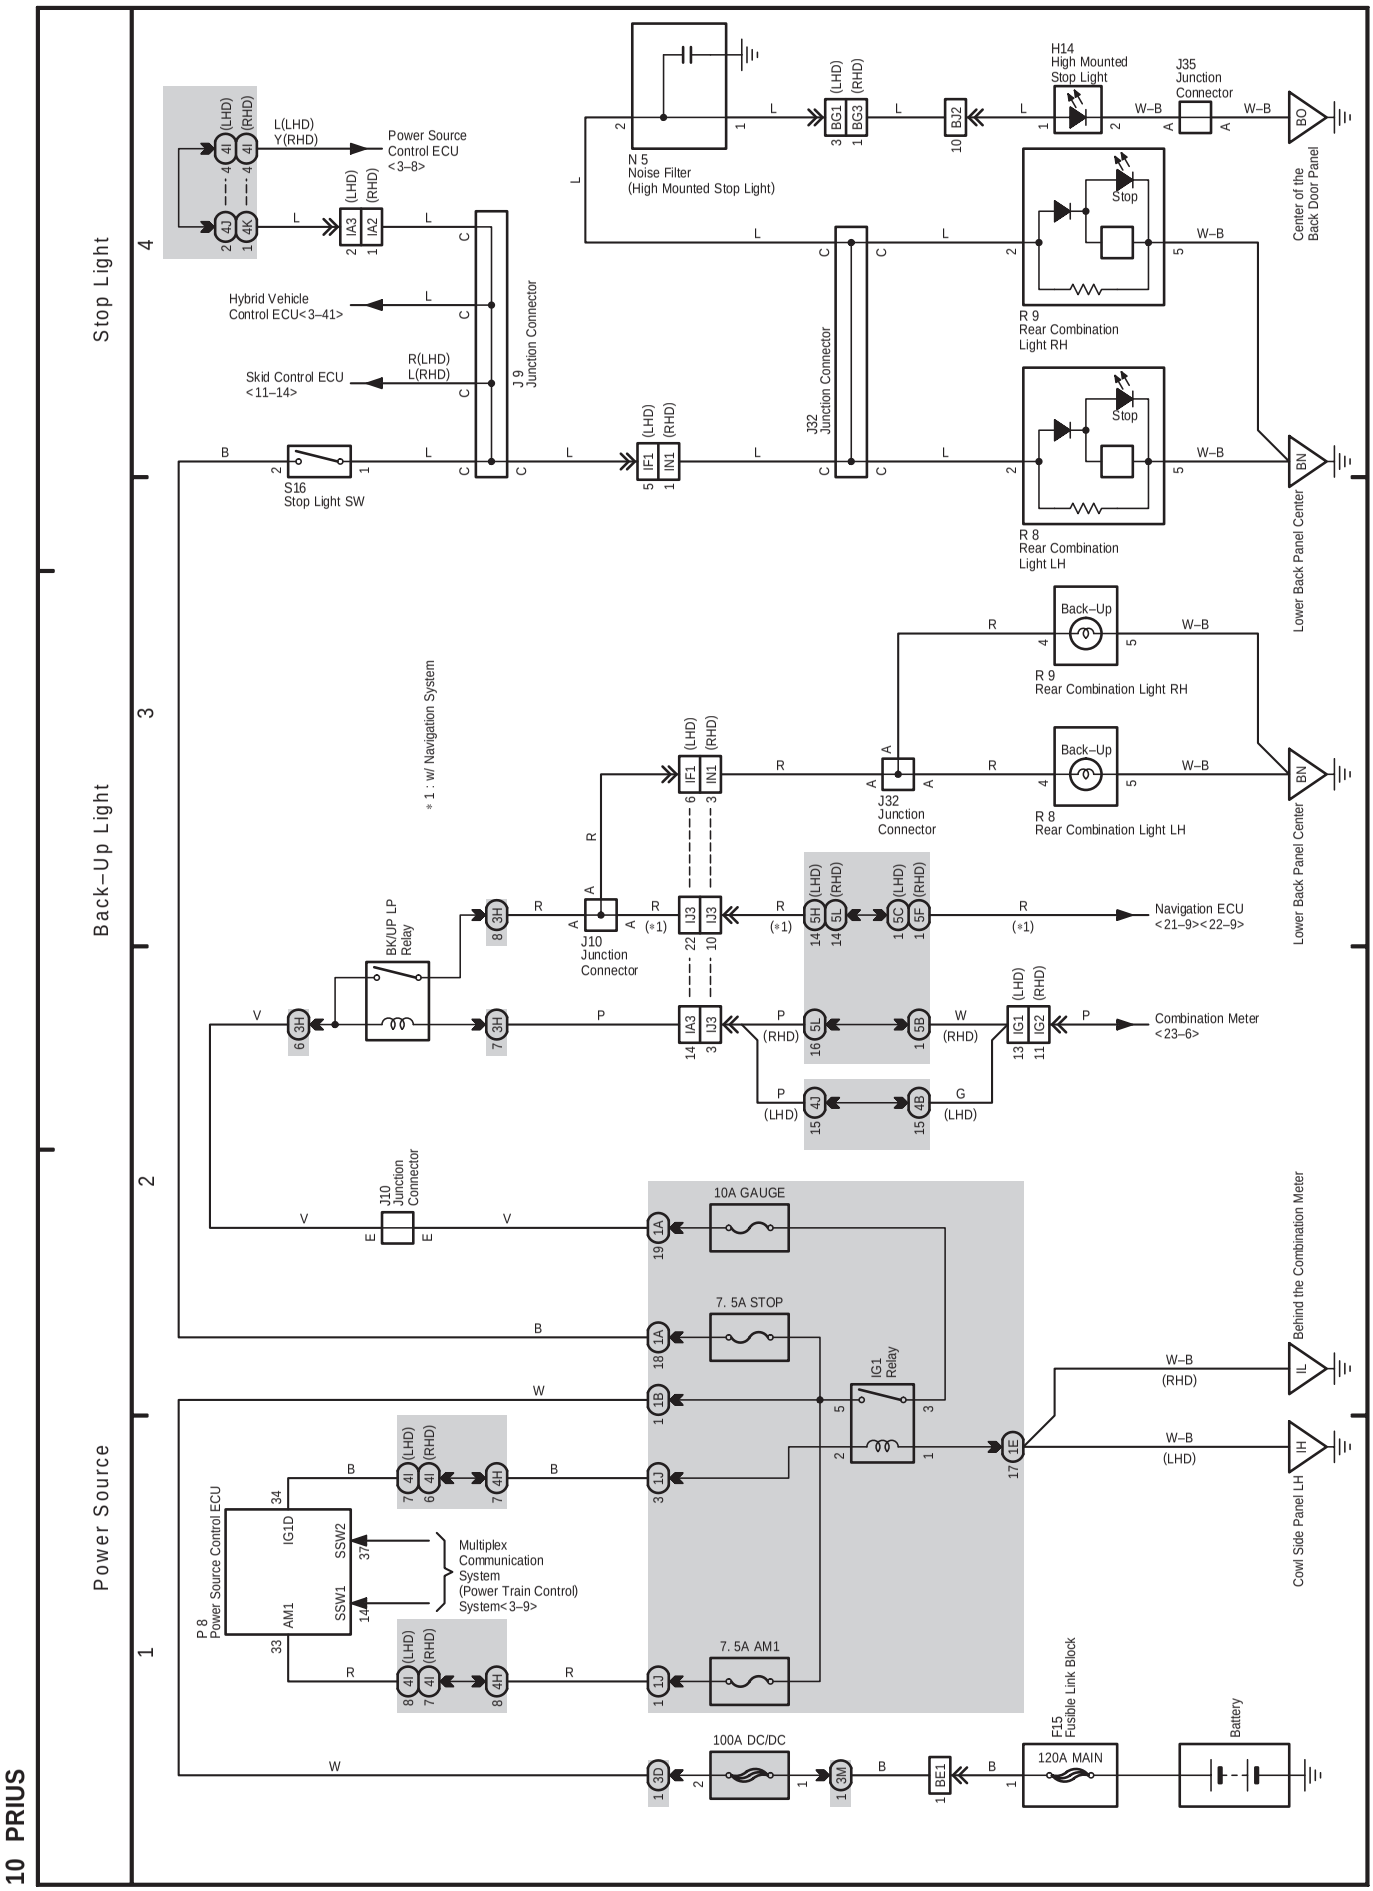

Stop Light
Back–Up Light
Power Source
10 PRIUS
L(LHD)
Y(RHD)
Power Source
Control ECU
<3–8>
Hybrid Vehicle
Control ECU<3–41>
Skid Control ECU
<11–14>
R(LHD)
L(LHD)
J9
Junction Connector
S16
Stop Light SW
N 5
Noise Filter
(High Mounted Stop Light)
H14
High Mounted
Stop Light
J35
Junction
Connector
Center of the
Back Door Panel
R 9
Rear Combination
Light RH
R 8
Rear Combination
Light LH
Lower Back Panel Center
J32
Junction Connector
Back–Up
Stop
* 1 : w/ Navigation System
BK/UP LP
Relay
J10
Junction
Connector
Navigation ECU
<21–9><22–9>
Combination Meter
<23–6>
10A GAUGE
7. 5A STOP
7. 5A AM1
IG1
Relay
P 8
Power Source Control ECU
Multiplex
Communication
System
(Power Train Control)
System<3–9>
Behind the Combination Meter
Cowl Side Panel LH
100A DC/DC
120A MAIN
F15
Fusible Link Block
Battery