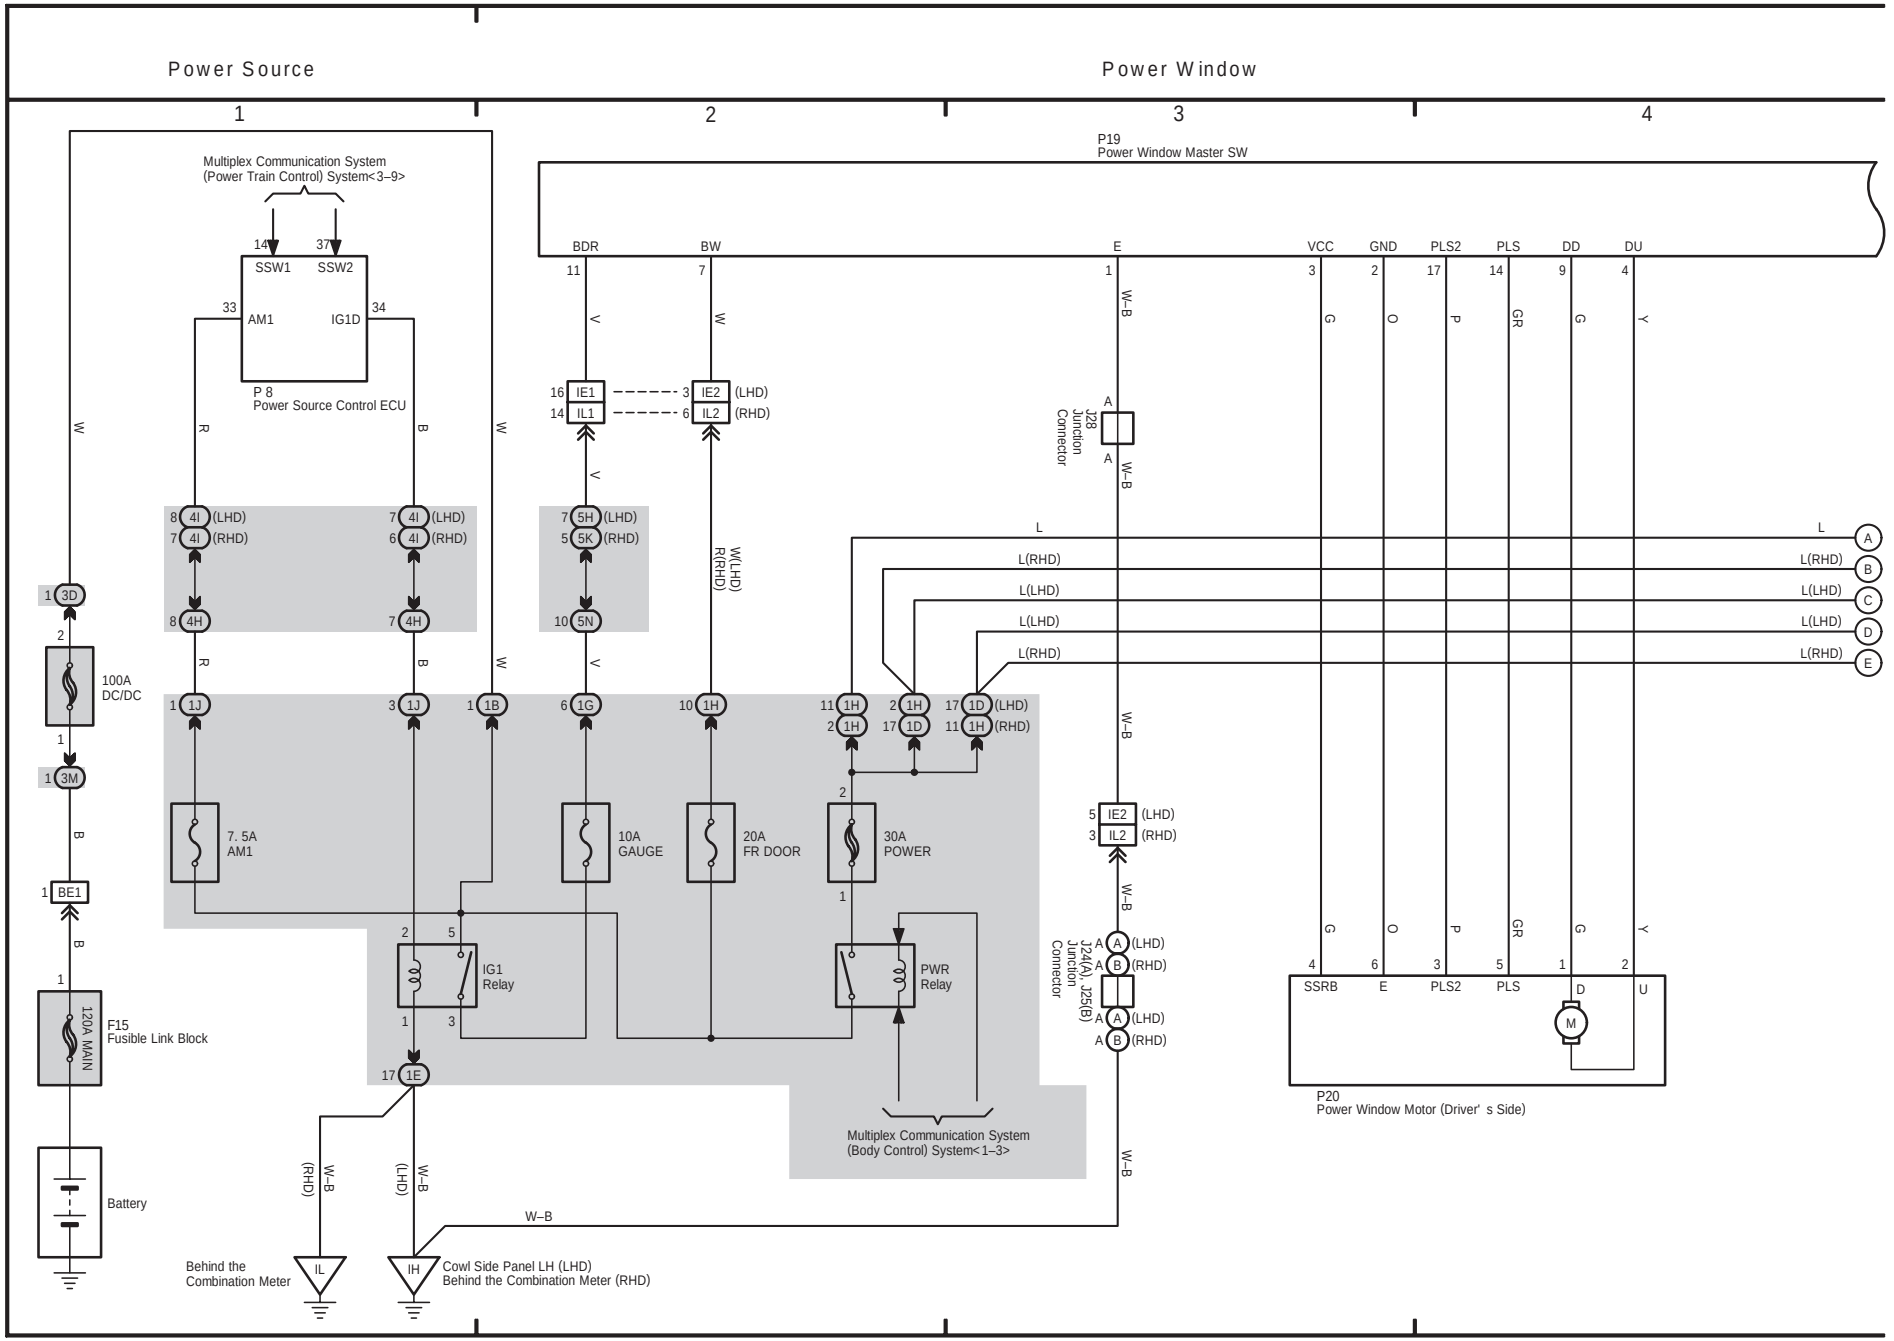
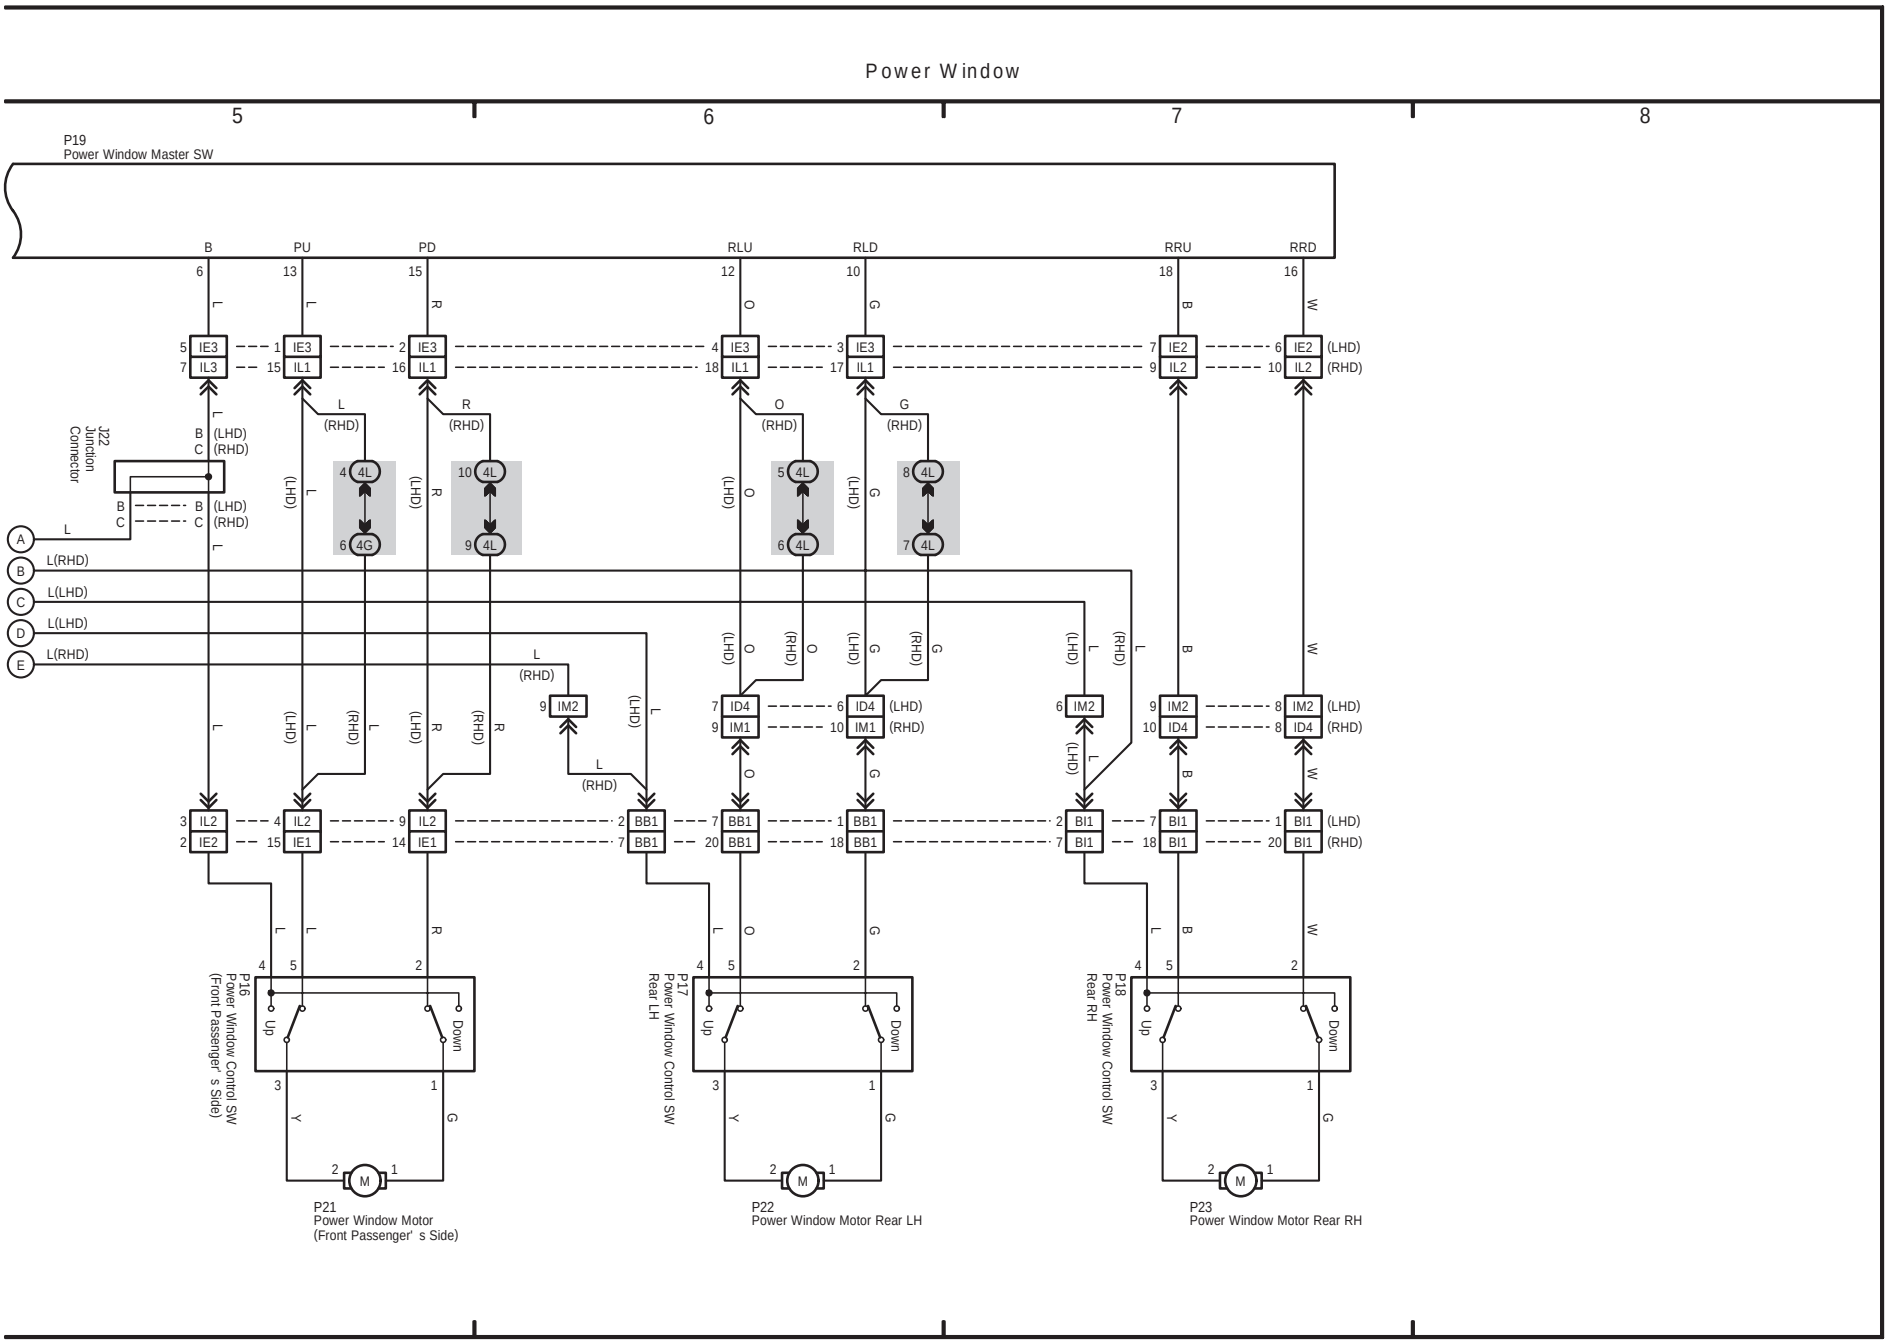

Power Source
Power Window
1
2
3
4
Multiplex Communication System
(Power Train Control) System<3–9>
SSW1
SSW2
AM1
IG1D
P 8
Power Source Control ECU
P19
Power Window Master SW
BDR
BW
E
VCC
GND
PLS2
PLS
DD
DU
J28
Junction
Connector
100A
DC/DC
F15
Fusible Link Block
120A MAIN
Battery
7. 5A
AM1
10A
GAUGE
20A
FR DOOR
30A
POWER
IG1
Relay
PWR
Relay
124(A), 125(B)
Junction
Connector
Multiplex Communication System
(Body Control) System< 1–3>
P20
Power Window Motor (Driver' s Side)
SSRB
Behind the
Combination Meter
Cowl Side Panel LH (LHD)
Behind the Combination Meter (RHD)
(LHD)
(RHD)
L
L(RHD)
W–B
W(LHD)
R(RHD)


Power Window
5
6
7
8
P19
Power Window Master SW
B
PU
PD
RLU
RLD
RRU
RRD
IE3
IL3
IL1
IE2
IL2
(LHD)
(RHD)
J22
Junction
Connector
4L
4G
IM2
ID4
IM1
IL2
IE1
IE2
BB1
BI1
P16
Power Window Control SW
(Front Passenger' s Side)
P17
Power Window Control SW
Rear LH
P18
Power Window Control SW
Rear RH
Up
Down
M
P21
Power Window Motor
(Front Passenger' s Side)
P22
Power Window Motor Rear LH
P23
Power Window Motor Rear RH