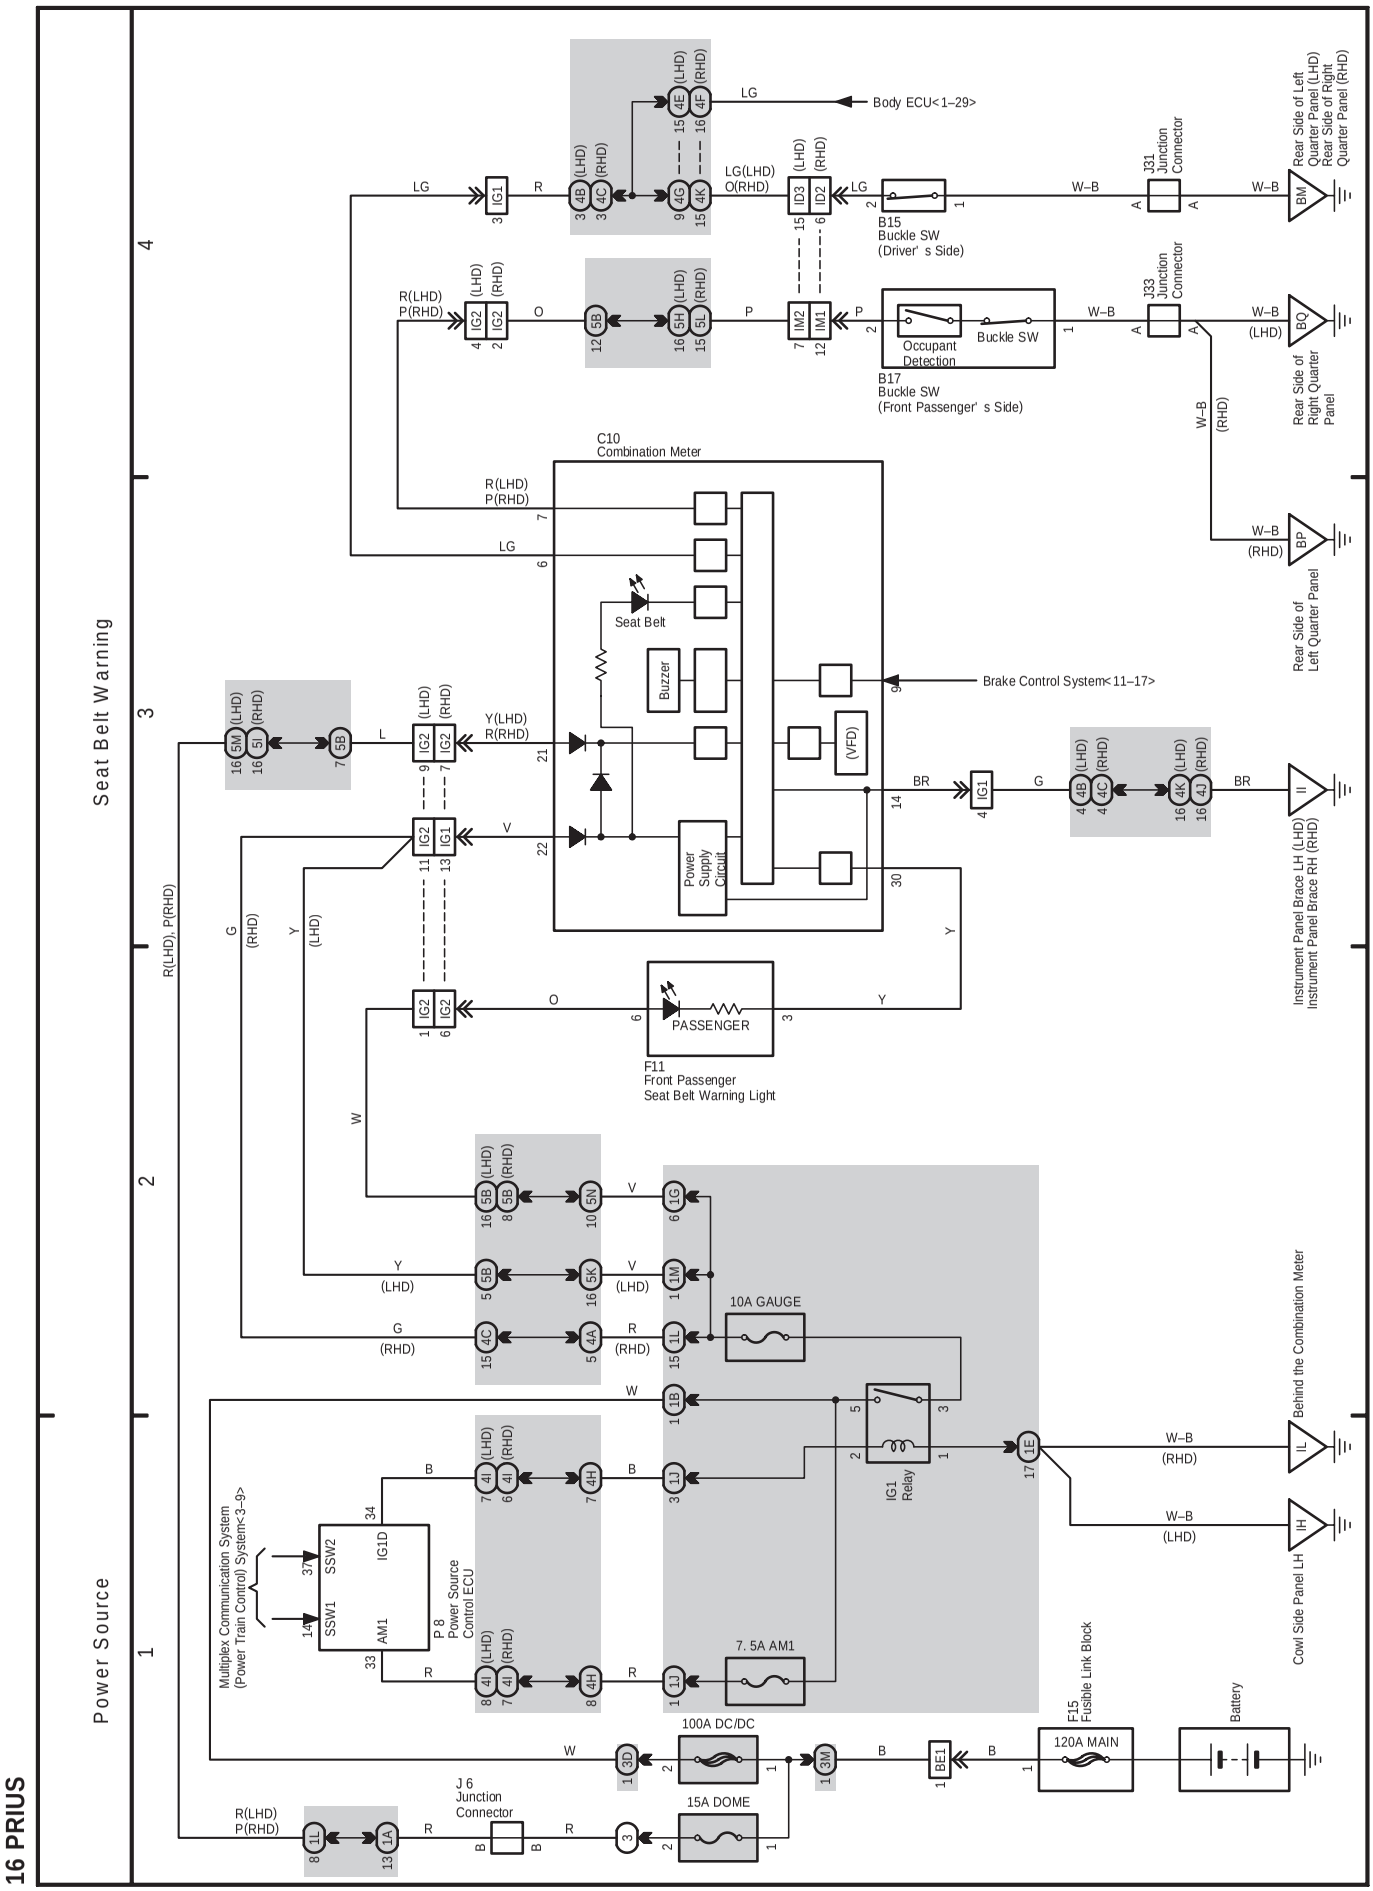

Seat Belt Warning
Power Source
Body ECU<1–29>
B15
Buckle SW
(Driver' s Side)
B17
Buckle SW
(Front Passenger' s Side)
Occupant Detection
Buckle SW
J31 Junction Connector
J33 Junction Connector
Rear Side of Left Quarter Panel (LHD)
Rear Side of Right Quarter Panel (RHD)
Rear Side of Right Quarter Panel
Rear Side of Left Quarter Panel
C10
Combination Meter
Seat Belt
Buzzer
(VFD)
Power Supply Circuit
Brake Control System<11–17>
PASSENGER
F11
Front Passenger
Seat Belt Warning Light
Instrument Panel Brace LH (LHD)
Instrument Panel Brace RH (RHD)
10A GAUGE
7. 5A AM1
IG1 Relay
100A DC/DC
15A DOME
120A MAIN
F15
Fusible Link Block
Battery
J 6
Junction Connector
Multiplex Communication System
(Power Train Control) System<3–9>
P 8
Power Source Control ECU
SSW2
SSW1
IG1D
AM1
Behind the Combination Meter
Cowl Side Panel LH