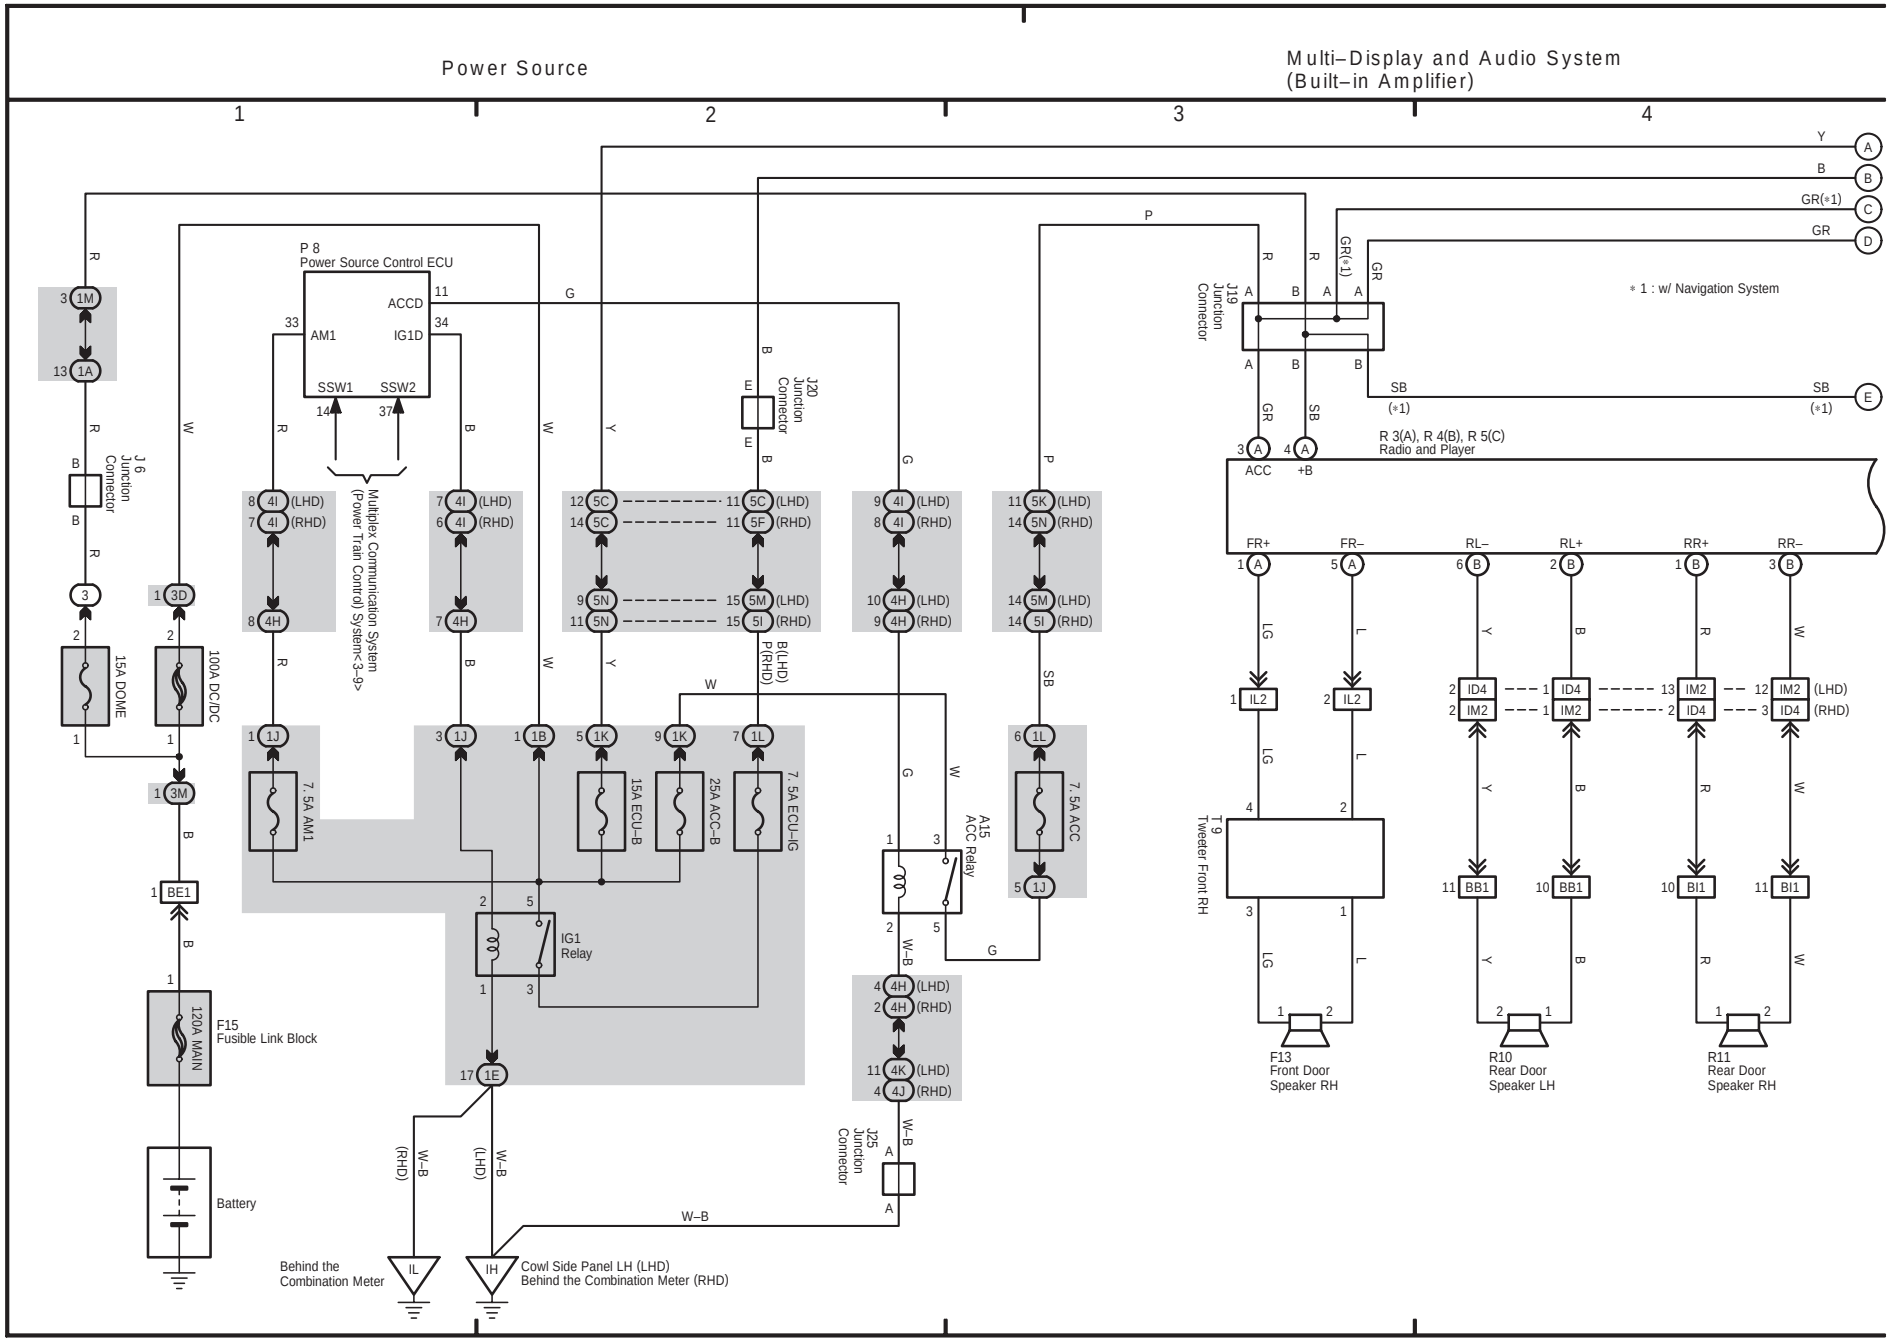
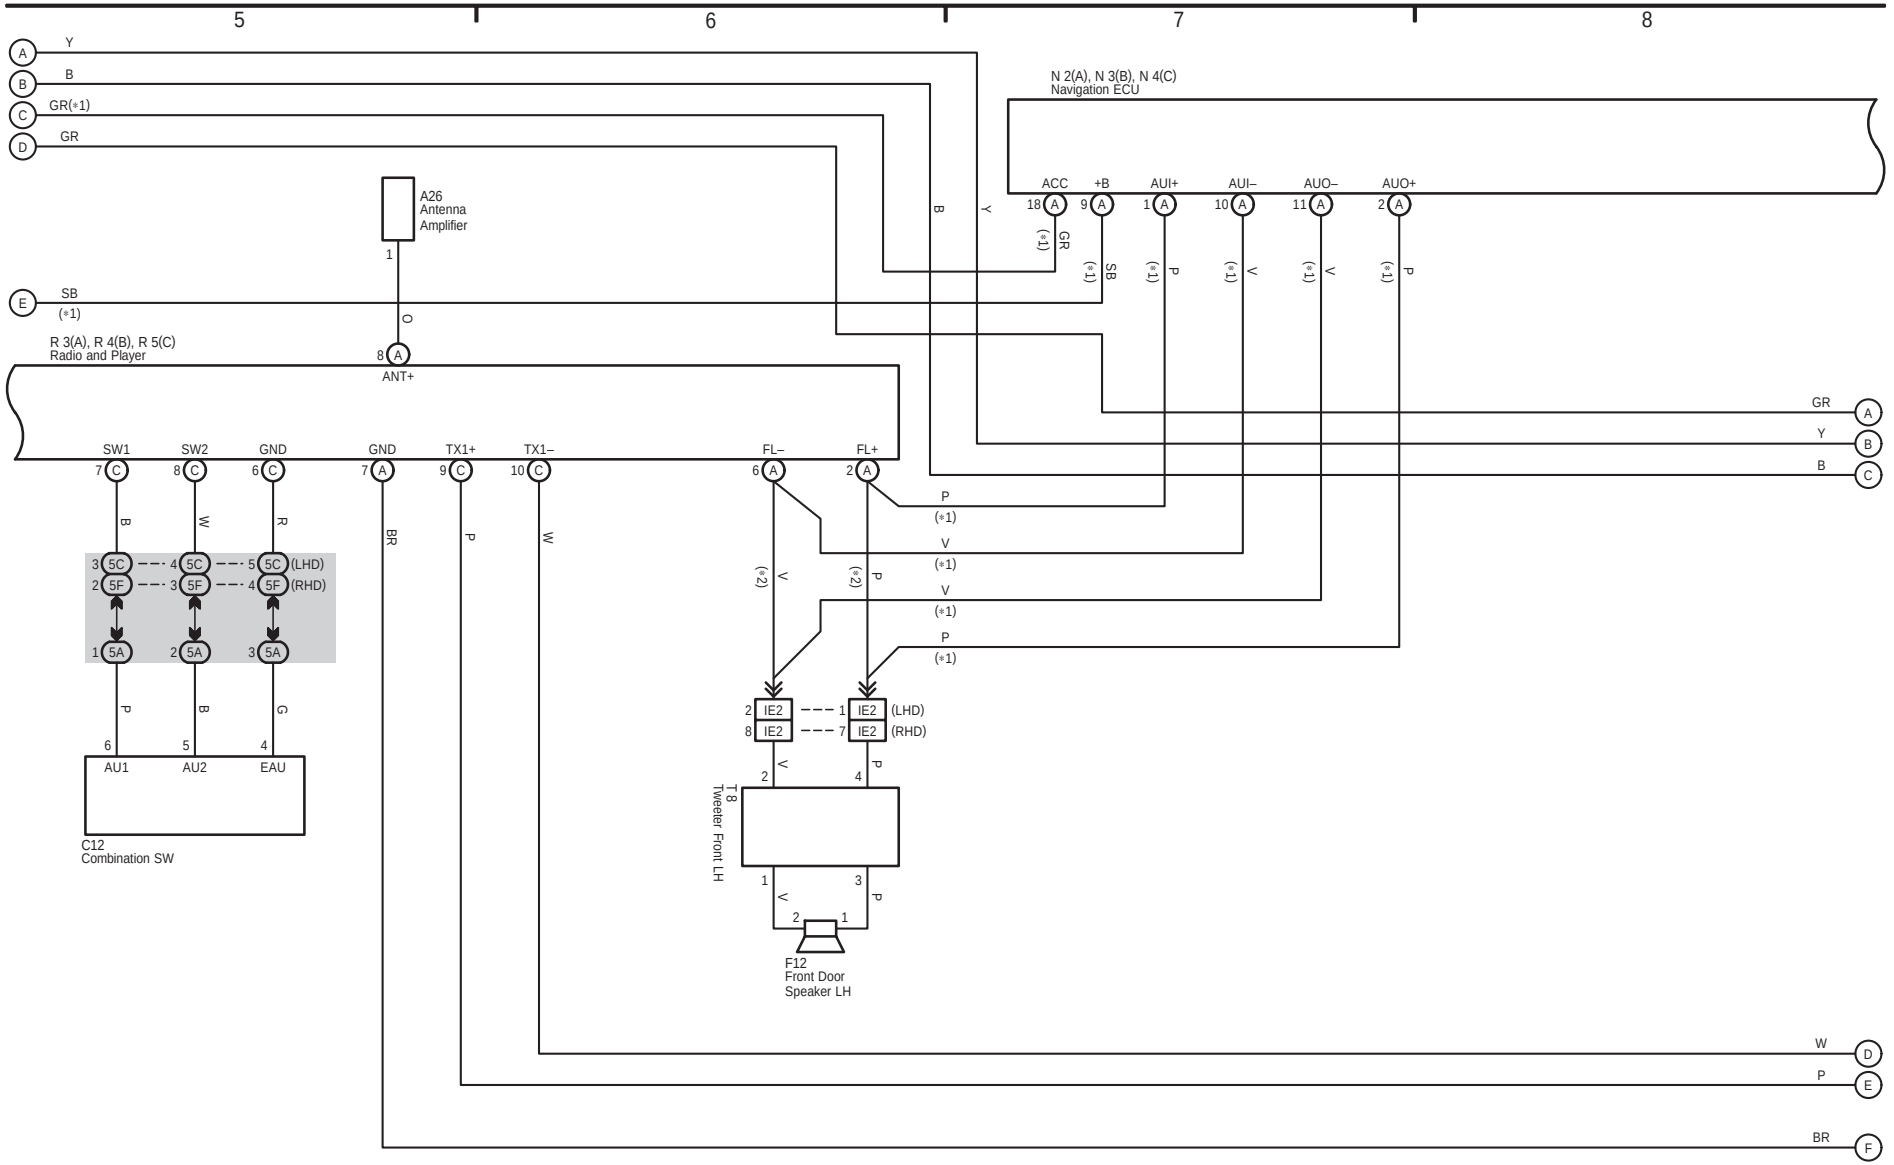

Power Source
Multi–Display and Audio System (Built–in Amplifier)
1
2
3
4
P 8
Power Source Control ECU
ACCD
AM1
IG1D
SSW1
SSW2
Multiplex Communication System (Power Train Control System<3–9>)
J 6 Junction Connector
J20 Junction Connector
J19 Junction Connector
J25 Junction Connector
15A DOME
100A DC/DC
7. 5A AM1
15A ECU–B
25A ACC–B
7. 5A ECU–IG
7. 5A ACC
IG1 Relay
A15 ACC Relay
120A MAIN
F15 Fusible Link Block
Battery
Behind the Combination Meter
Cowl Side Panel LH (LHD) Behind the Combination Meter (RHD)
∗ 1 : w/ Navigation System
R 3(A), R 4(B), R 5(C) Radio and Player
ACC
+B
FR+
FR–
RL–
RL+
RR+
RR–
T 9 Tweeter Front RH
F13 Front Door Speaker RH
R10 Rear Door Speaker LH
R11 Rear Door Speaker RH

Multi–Display and Audio System (Built–in Amplifier)

∗ 1 : w/ Navigation System
∗ 2 : w/o Navigation System



22 PRIUS (Cont' d)

