
STEERING PAD SWITCH

■DESCRIPTION

- A steering wheel with steering pad switches is standard equipment on all models. The frequently used switches are located on the steering pad for easy use.
- The switches that are provided on the steering pad vary by destination country and optional equipment, as indicated in the table below.

System		Switch	Europe		Australia	
			With Navigation	Without Navigation	Without Navigation	Without Navigation
Audio		• VOLUME (+/-) • MODE • SEEK (+/-)	○	○	○	○
Air Conditioner		• AUTO • Front DEF • TEMP (+/-) • Rear DEF • RECIRCULATION	○	○	○	○
Multi Display	Information	• INFO	○	—	○	—
	Navigation	• MAP	○	—	○	—
		• VOICE	○	—	—	—
	Telephone	• ON HOOK • OFF HOOK	○	—	○	—

▶ System Diagram ◀

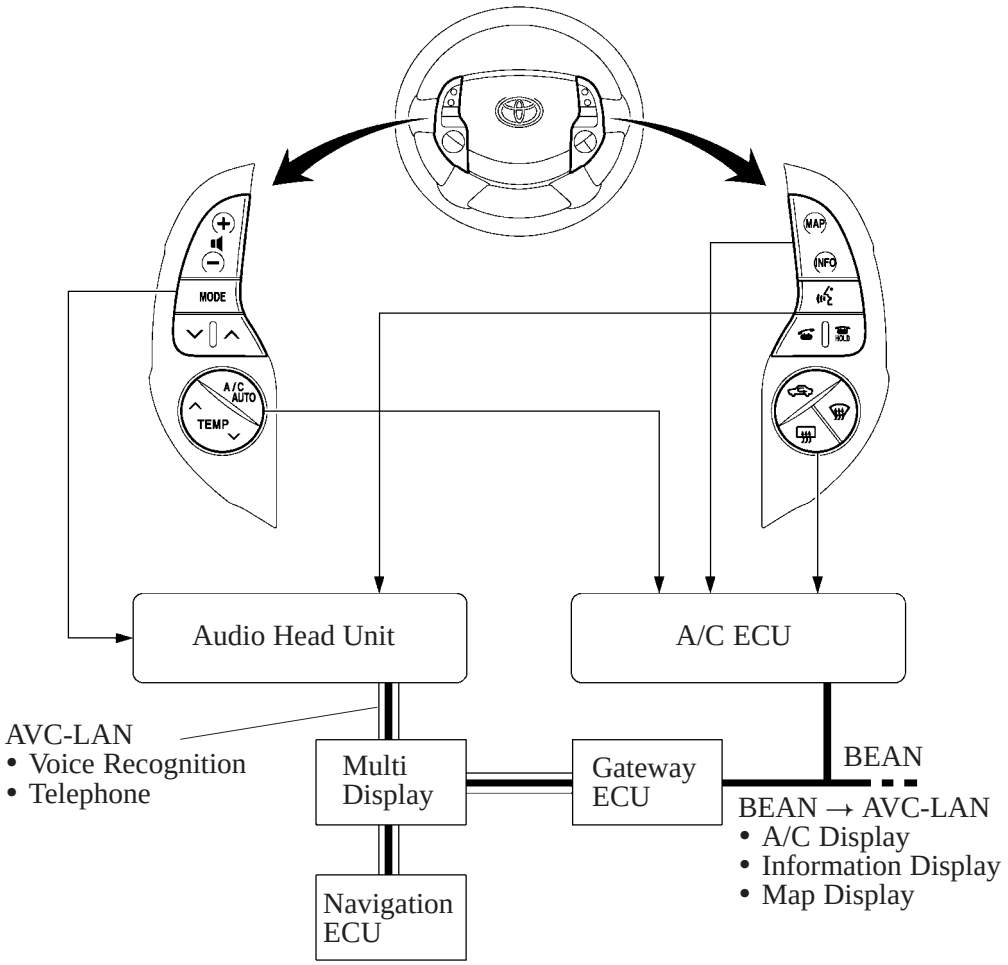

255BE27

BE