■SEAT BELT

1. General


Seat belts are provided with the function listed below:

Seat	Seat Belt Type	Remarks
Driver & Front Passenger	3-point ELR*1	Electrical Sensing type Pretensioner & Force Limiter
Rear Passenger	3-point ELR*1 & ALR*2	—

*1: Emergency Locking Retractor
*2: Automatic Locking Retractor

2. Pretensioner and Force Limiter

In accordance with the ignition signal from the airbag sensor assembly, the seat belt pretensioner activates simultaneously with the deployment of SRS airbag for the driver and front passenger.
In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

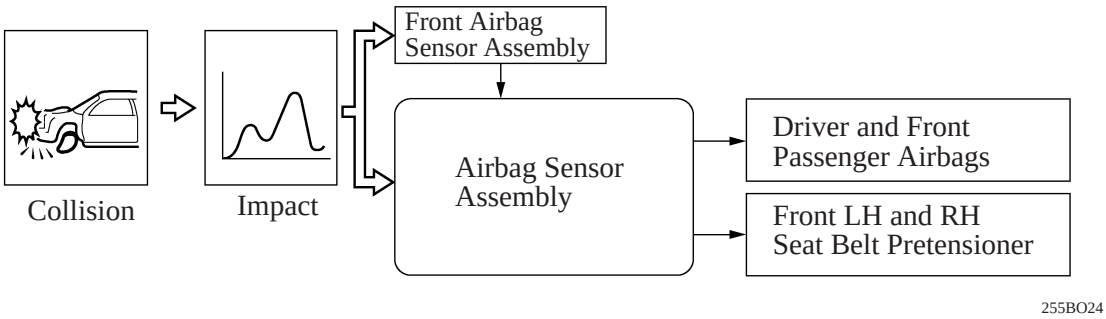

255BO24