
■DIAGNOSIS

- If the transmission control ECU detects a malfunction in the shift control system, the ECU performs a diagnosis and memorizes the failed section.
  Furthermore, it causes the shift position indicator to blink, the master warning light to illuminate, and display a warning message on the multi display to inform the driver.

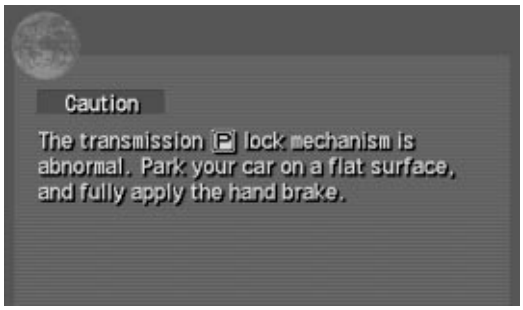

256CH03

- The transmission control ECU will also store the DTCs (Diagnostic Trouble Codes) of the malfunctions.
- The DTCs can be accessed the use of the intelligent tester-II.
- Some DTCs have been newly added to this system. For details, refer to the Prius Repair Manual (Pub. No. RM1076E).

■FAIL-SAFE

If the transmission control ECU detects a malfunction in the system, the transmission control ECU controls the system according to the data already stored in memory.
For details, refer to the Prius Repair Manual (Pub. No. RM1076E).