





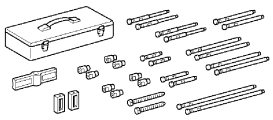




BRAKE



PREPARATION

023GE–01

SST

	09023–00100	Union Nut Wrench 10 mm	BRAKE STROKE SIMULATOR CYLINDER SUB–ASSY BRAKE ACTUATOR ASSY BRAKE MASTER CYLINDER SUB–ASSY(LHD) BRAKE MASTER CYLINDER SUB–ASSY(RHD)
	09214–76011	Crankshaft Pulley Replacer	SKID CONTROL SENSOR
	09520–00031	Rear Axle Shaft Puller	SKID CONTROL SENSOR
	(09520–00040)	Shocker	SKID CONTROL SENSOR
	09521–00020	Drive Shaft Boot Clamping Tool	SKID CONTROL SENSOR
	09950–00020	Bearing Remover	SKID CONTROL SENSOR
	09950–50013	Puller C Set	STEERING SENSOR SKID CONTROL ECU ASSY(LHD)
	(09951–05010)	Hanger 150	STEERING SENSOR SKID CONTROL ECU ASSY(LHD)
	(09952–05010)	Slide Arm	STEERING SENSOR SKID CONTROL ECU ASSY(LHD)
	(09953–05020)	Center Bolt 150	STEERING SENSOR SKID CONTROL ECU ASSY(LHD)
	(09954–05021)	Claw No.2	STEERING SENSOR SKID CONTROL ECU ASSY(LHD)

Recomended Tools

	09042–00010	Torx Socket T30	BRAKE ACTUATOR ASSY STEERING SENSOR BRAKE MASTER CYLINDER SUB–ASSY(LHD) SKID CONTROL ECU ASSY(LHD)
	(09060–20010)	Socket Wrench	STEERING SENSOR SKID CONTROL ECU ASSY(LHD)
	09070–20010	Moulding Remover	SKID CONTROL ECU ASSY(LHD) SKID CONTROL ECU ASSY(RHD)

Equipment

Stopwatch	
Dial indicator	
Micrometer	
Radiator cap tester	
Torque wrench	
Voltmeter	
Dial indicator with magnetic base	
Tire pressure gauge	
Alignment tester	
Toe–in gauge	
Slide calipers	
Camber–caster–kingpin gauge	
Wheel balancer	
Drill	

Lubricant

Item	Capacity	Classification
Brake fluid	–	SAE J1703 or FMVSS No. 116 DOT3