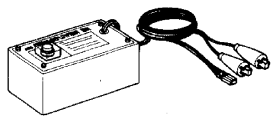










SUPPLEMENTAL RESTRAINT SYSTEM


023E7–01

PREPARATION

SST

	09082–00700	SRS Airbag Deployment Tool	HORN BUTTON ASSY CURTAIN SHIELD AIRBAG ASSY FRONT SEAT AIRBAG ASSY FRONT PASSENGER AIRBAG ASSY
	09082–00750	Airbag Deployment Wire Sub–harness No.3	FRONT SEAT AIRBAG ASSY
	09082–00780	Airbag Deployment Wire Sub–harness No.6	HORN BUTTON ASSY FRONT PASSENGER AIRBAG ASSY
	09082–00802	Airbag Deployment Wire Sub–Harness No. 8	HORN BUTTON ASSY CURTAIN SHIELD AIRBAG ASSY FRONT PASSENGER AIRBAG ASSY
	(09082–10801)	Wire A	HORN BUTTON ASSY CURTAIN SHIELD AIRBAG ASSY FRONT PASSENGER AIRBAG ASSY
	(09082–20801)	Wire B	CURTAIN SHIELD AIRBAG ASSY
	(09082–30801)	Wire C	HORN BUTTON ASSY FRONT PASSENGER AIRBAG ASSY
	09950–50013	Puller C Set	SPIRAL CABLE SUB–ASSY
	(09951–05010)	Hanger 150	SPIRAL CABLE SUB–ASSY
	(09952–05010)	Slide Arm	SPIRAL CABLE SUB–ASSY
	(09953–05020)	Center Bolt 150	SPIRAL CABLE SUB–ASSY
	(09954–05021)	Claw No.2	SPIRAL CABLE SUB–ASSY

Recomended Tools

	09042–00010 Torx Socket T30	HORN BUTTON ASSY SPIRAL CABLE SUB–ASSY SEAT POSITION AIR BAG SENSOR

Equipment

Torque wrench	
Feeler gauge	
Bolt Length: 35.0 mm (1.378 in.) Pitch: 1.0 mm (0.039 in.) Diameter: 6.0 mm (0.236 in.)	Airbag disposal
Tire Width: 185 mm (7.28 in.) Inner diameter: 360 mm (14.17 in.)	Airbag disposal
Tire with disc wheel Width: 185 mm (7.28 in.) Inner diameter: 360 mm (14.17 in.)	Airbag disposal
Plastic bag	Airbag disposal