
05IH7–01

DTC CHECK/CLEAR

NOTICE:

- **If no DTC appears in normal mode: On the intelligent tester II, check the pending fault code using the Continuous Test Results function (Mode 7 for SAE J1979).**
- **When the diagnosis system is changed from normal mode to check mode or vice versa, all DTCs and freeze frame data recorded in normal mode will be erased. Before changing modes, always check and make a note of DTCs and freeze frame data.**

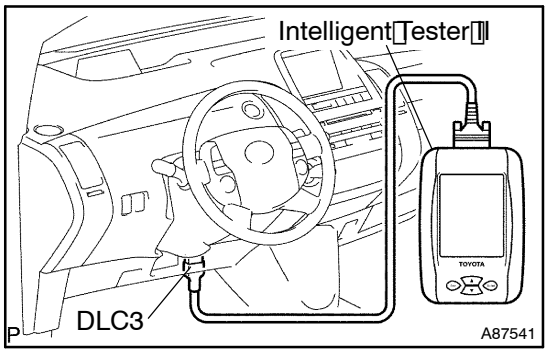

1. CHECK DTC (Using the intelligent tester II)

(a) Connect the intelligent tester II to the DLC3.

(b) Turn the power switch ON (IG).


(c) On the tester, enter the following menus: Powertrain / Engine and ECT / DTC.


(d) Check DTCs and freeze frame data, and then write them down.

(e) See page 05–39 to confirm the details of the DTCs.

NOTICE:

- **Turn OFF the HV main system (IG OFF) after the symptom is simulated once. Then repeat the simulation process again. When the problem has been simulated again, the CHK ENG illuminates and the DTCs are recorded in the ECM.**

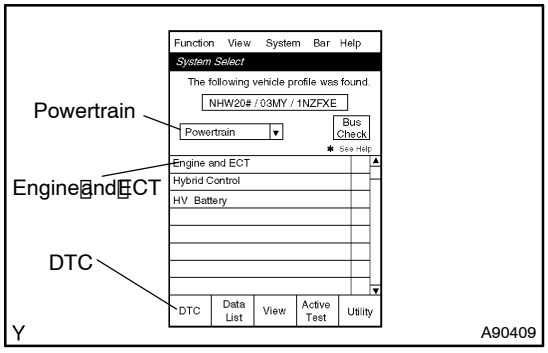

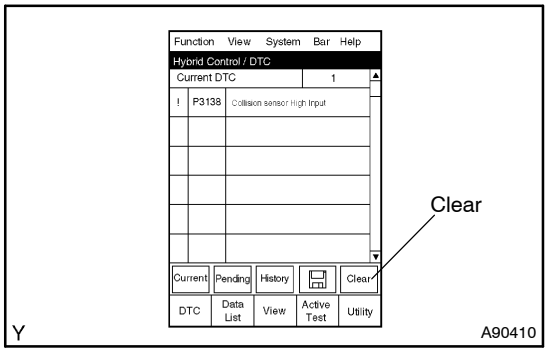

2. CLEAR DTC

(a) Connect the intelligent tester II to the DLC3.

(b) Turn the power switch ON (IG).

(c) On the tester, enter the following menus: Powertrain / Engine and ECT / DTC / Clear.

(d) Erase DTCs and freeze frame data by pressing the YES button on the tester.