


05IH0–01

LOCATION

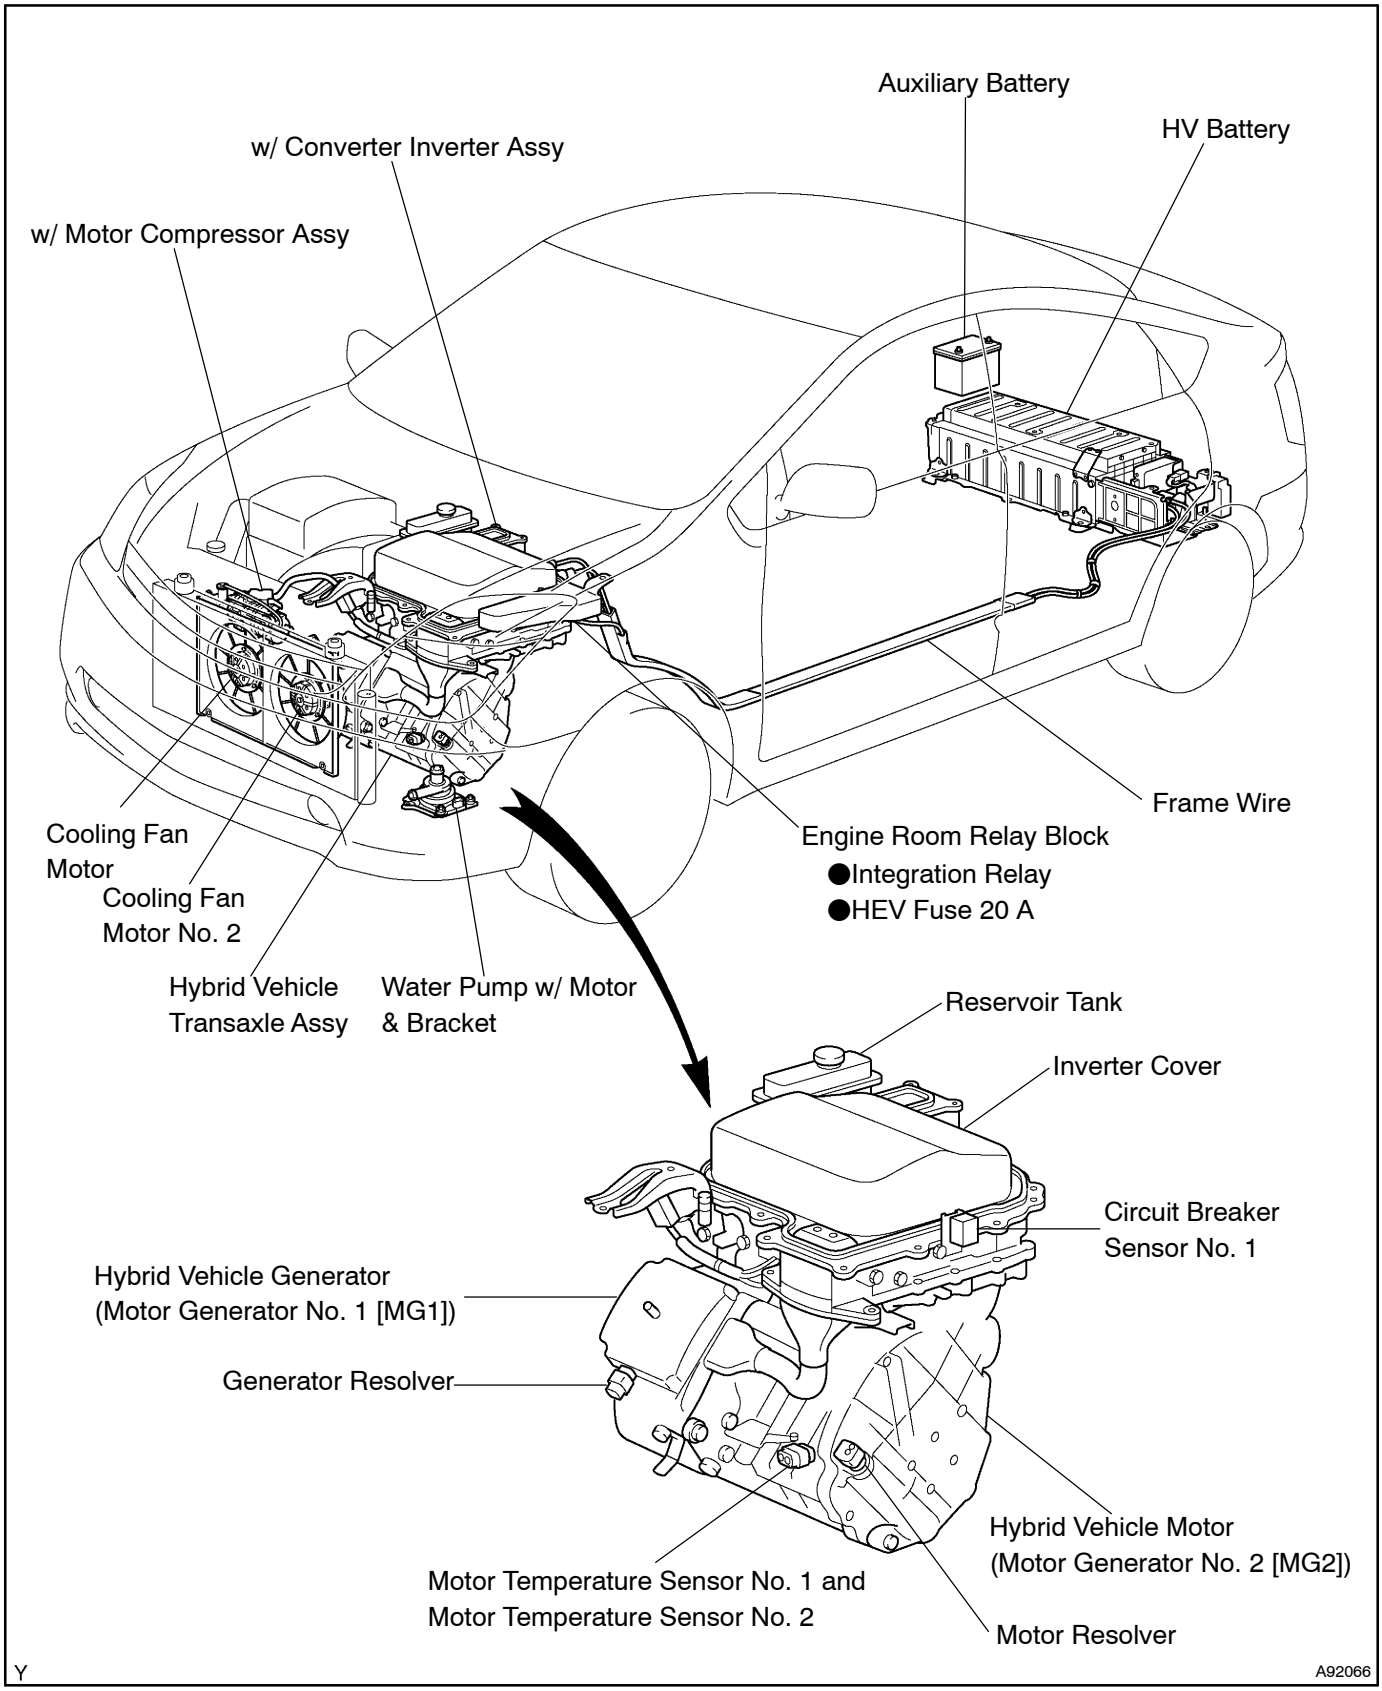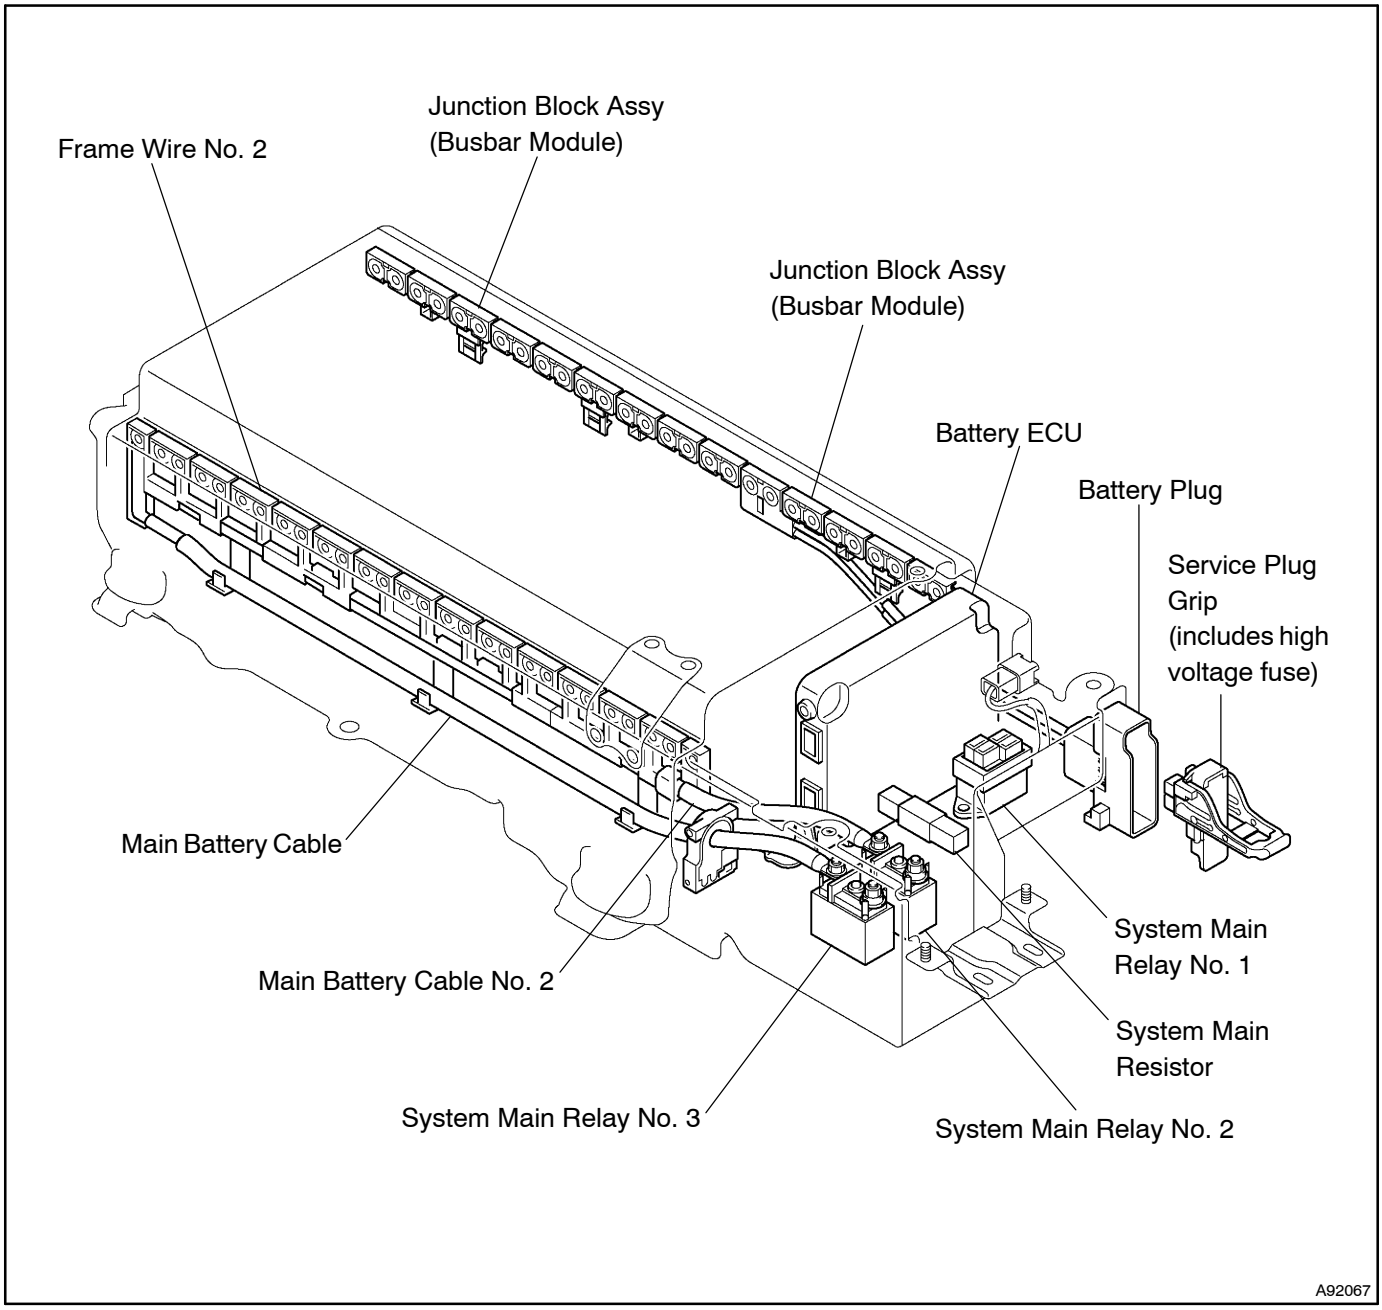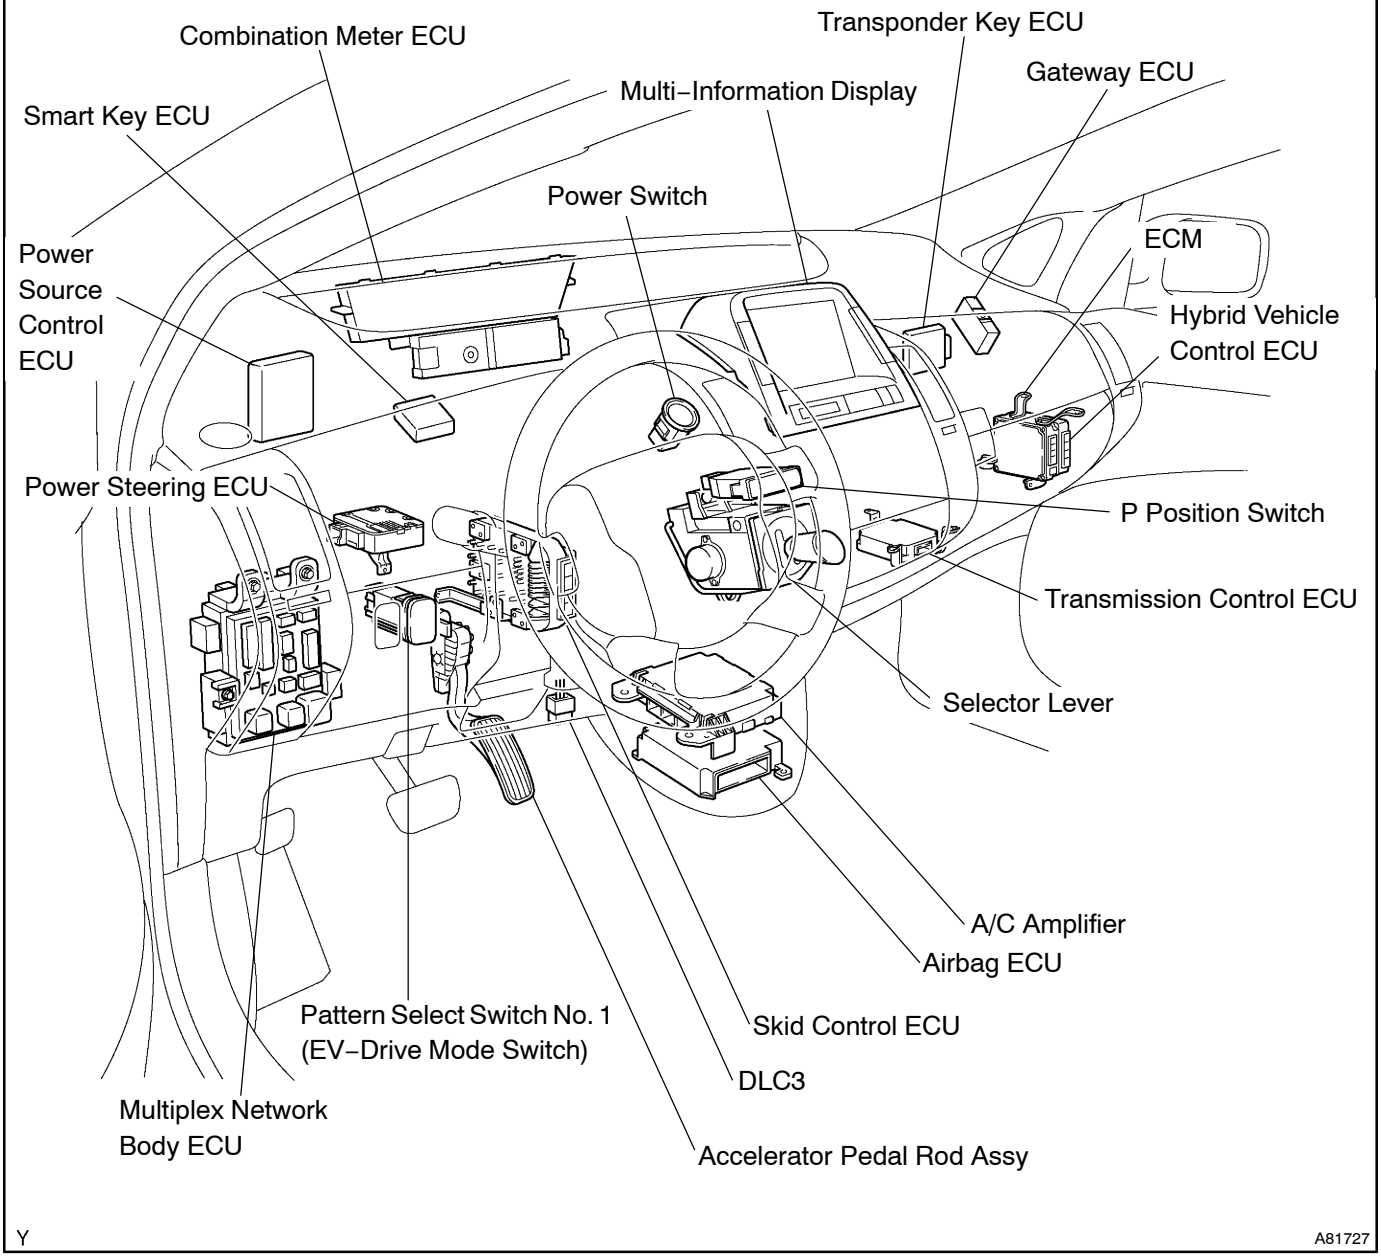



Junction Block Assy
(Busbar Module)
Frame Wire No. 2
Junction Block Assy
(Busbar Module)
Battery ECU
Battery Plug
Service Plug
Grip
(includes high
voltage fuse)
Main Battery Cable
Main Battery Cable No. 2
System Main
Relay No. 1
System Main
Resistor
System Main Relay No. 3
System Main Relay No. 2
A92067

LHD:


Combination Meter ECU
Transponder Key ECU
Gateway ECU
Multi–Information Display
Smart Key ECU
Power Switch
ECM
Power Source Control ECU
Hybrid Vehicle Control ECU
Power Steering ECU
P Position Switch
Transmission Control ECU
Selector Lever
A/C Amplifier
Airbag ECU
Pattern Select Switch No. 1 (EV–Drive Mode Switch)
Skid Control ECU
DLC3
Multiplex Network Body ECU
Accelerator Pedal Rod Assy
Y
A81727

RHD:

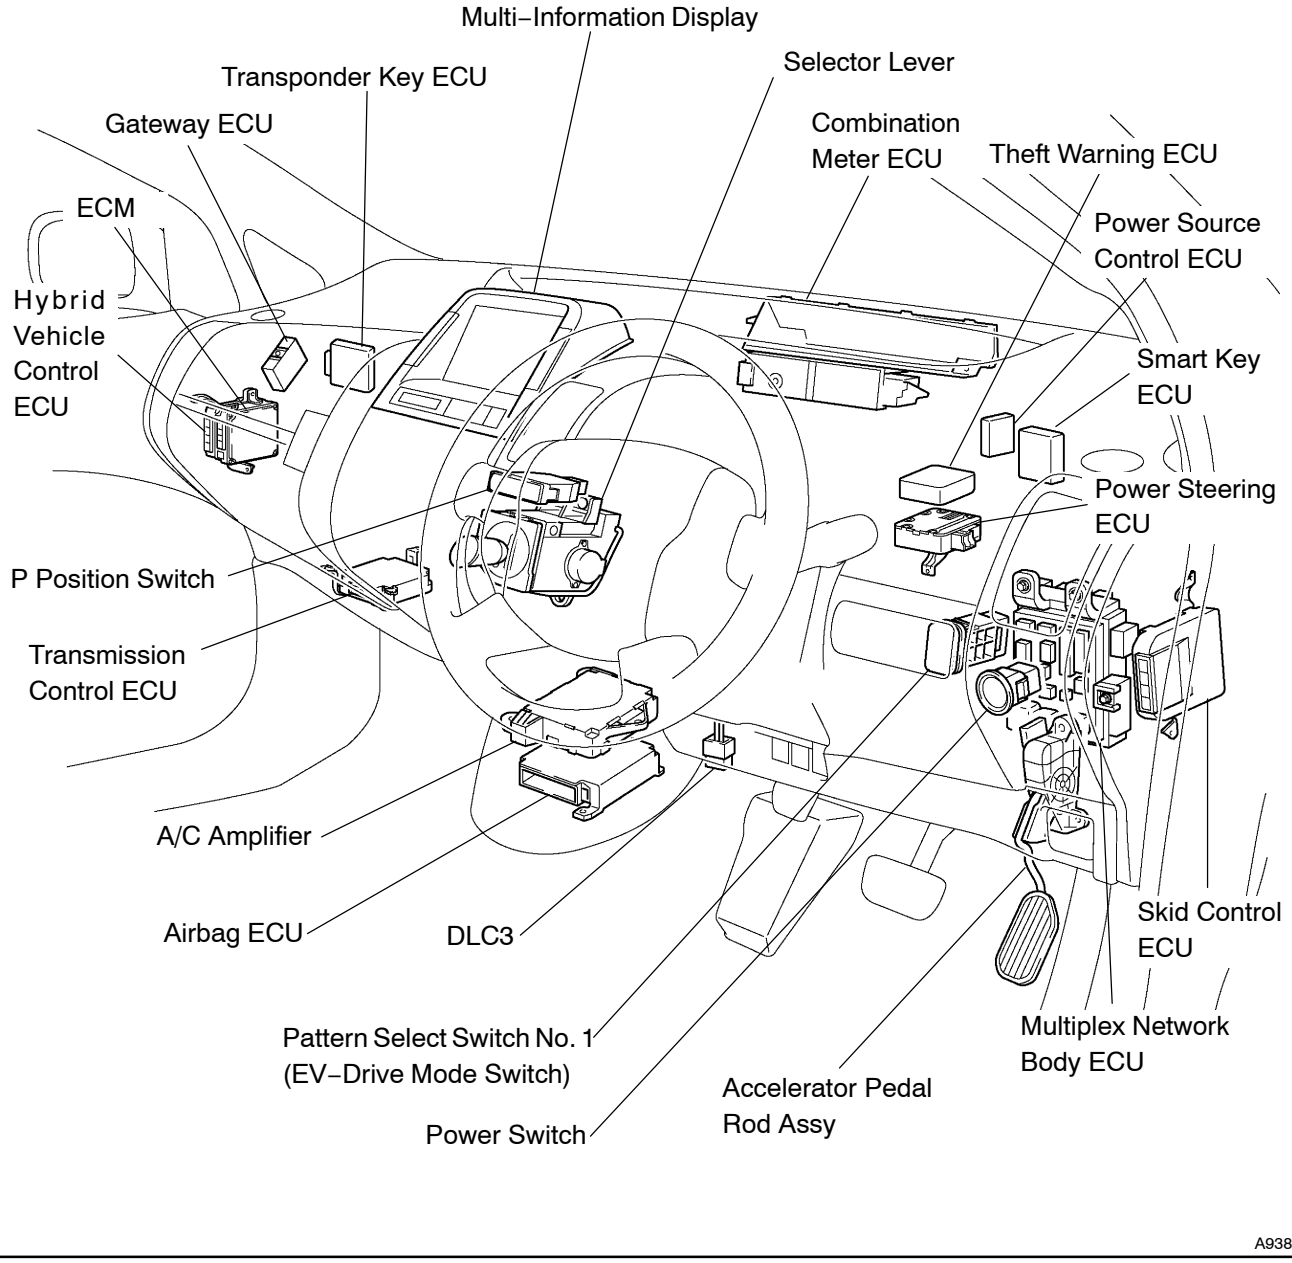
Multi–Information Display
Selector Lever
Transponder Key ECU
Gateway ECU
Combination Meter ECU
Theft Warning ECU
ECM
Power Source Control ECU
Hybrid Vehicle Control ECU
Smart Key ECU
Power Steering ECU
P Position Switch
Transmission Control ECU
A/C Amplifier
Airbag ECU
DLC3
Skid Control ECU
Pattern Select Switch No. 1 (EV–Drive Mode Switch)
Multiplex Network Body ECU
Accelerator Pedal Rod Assy
Power Switch
Y
A93854