

05IG6–01

LOCATION

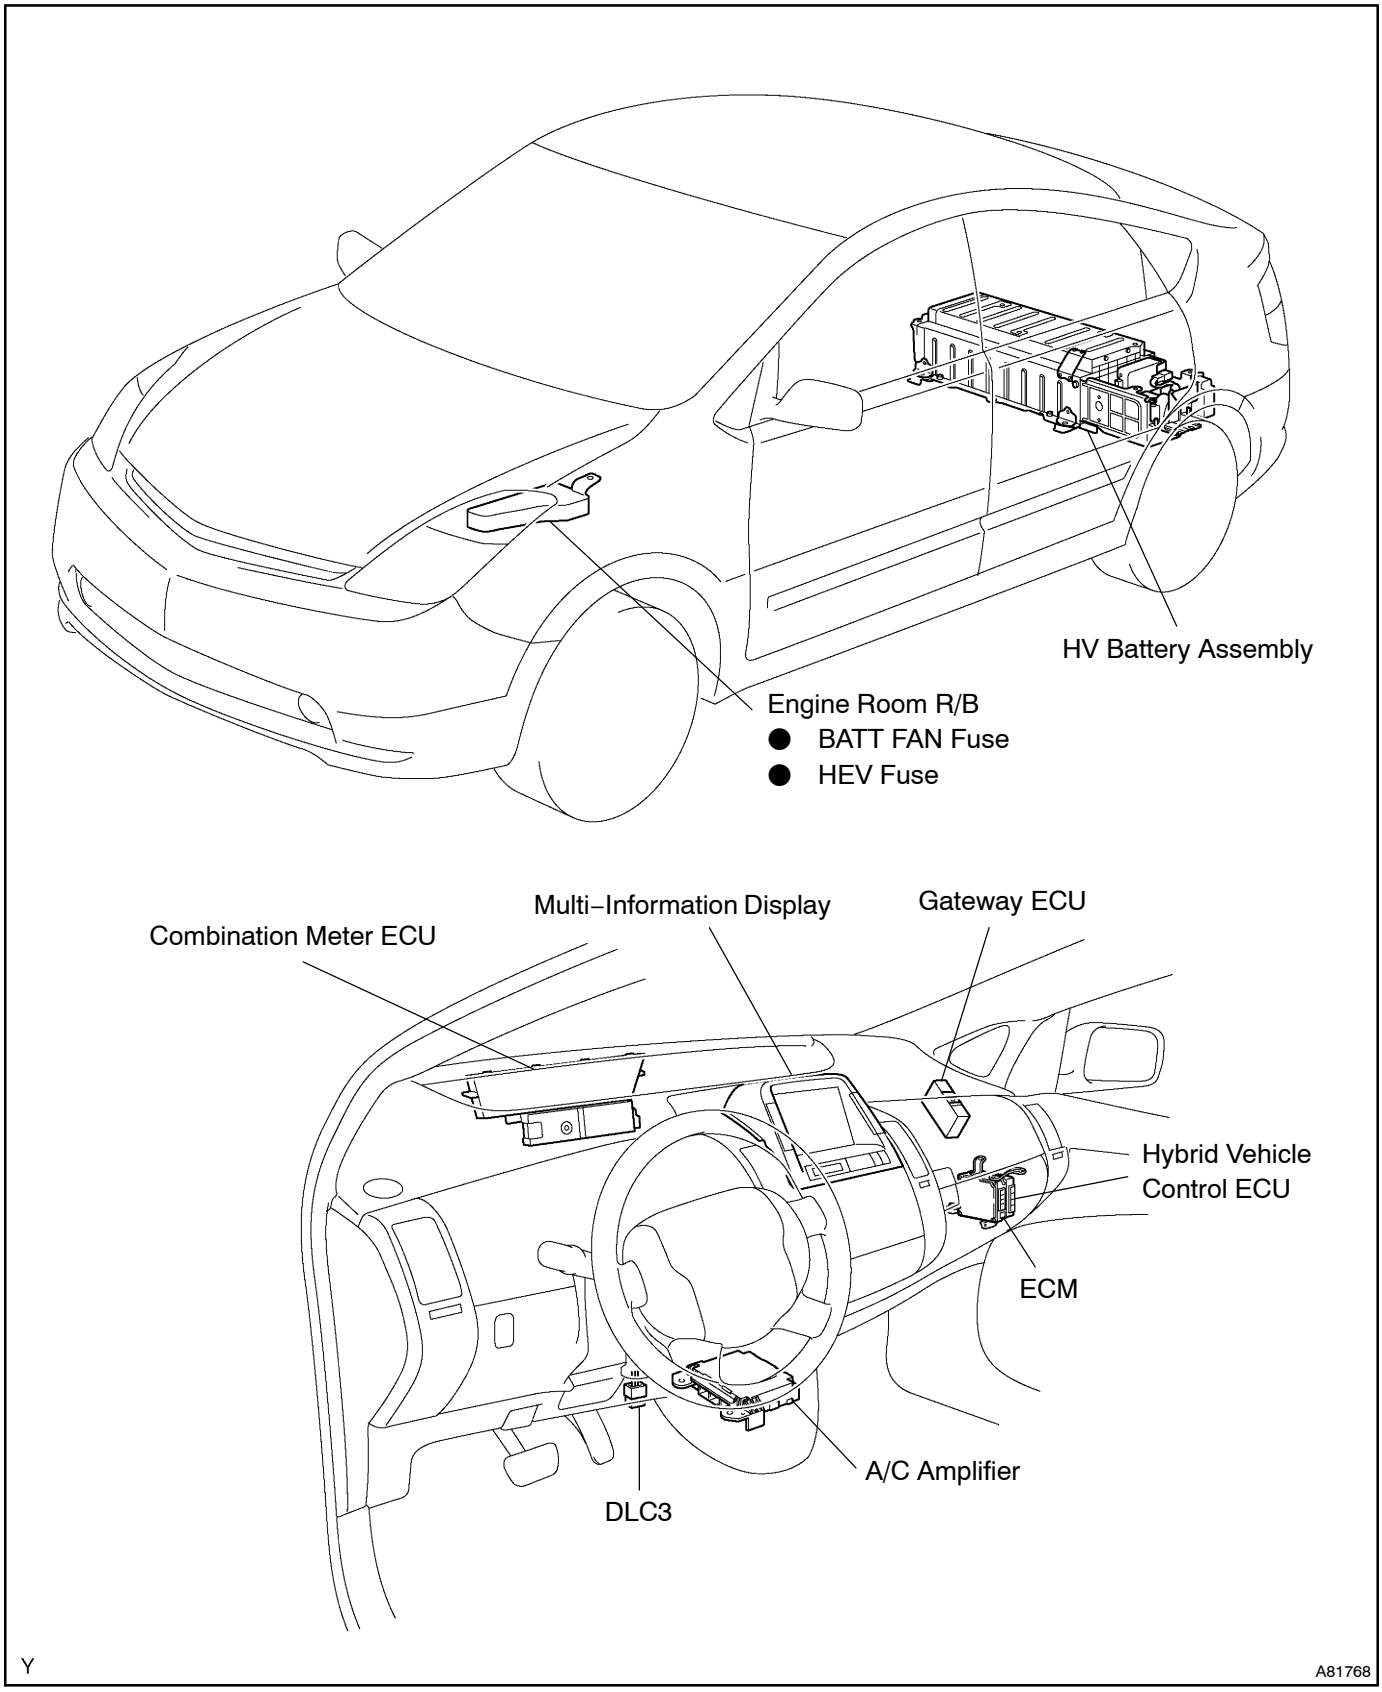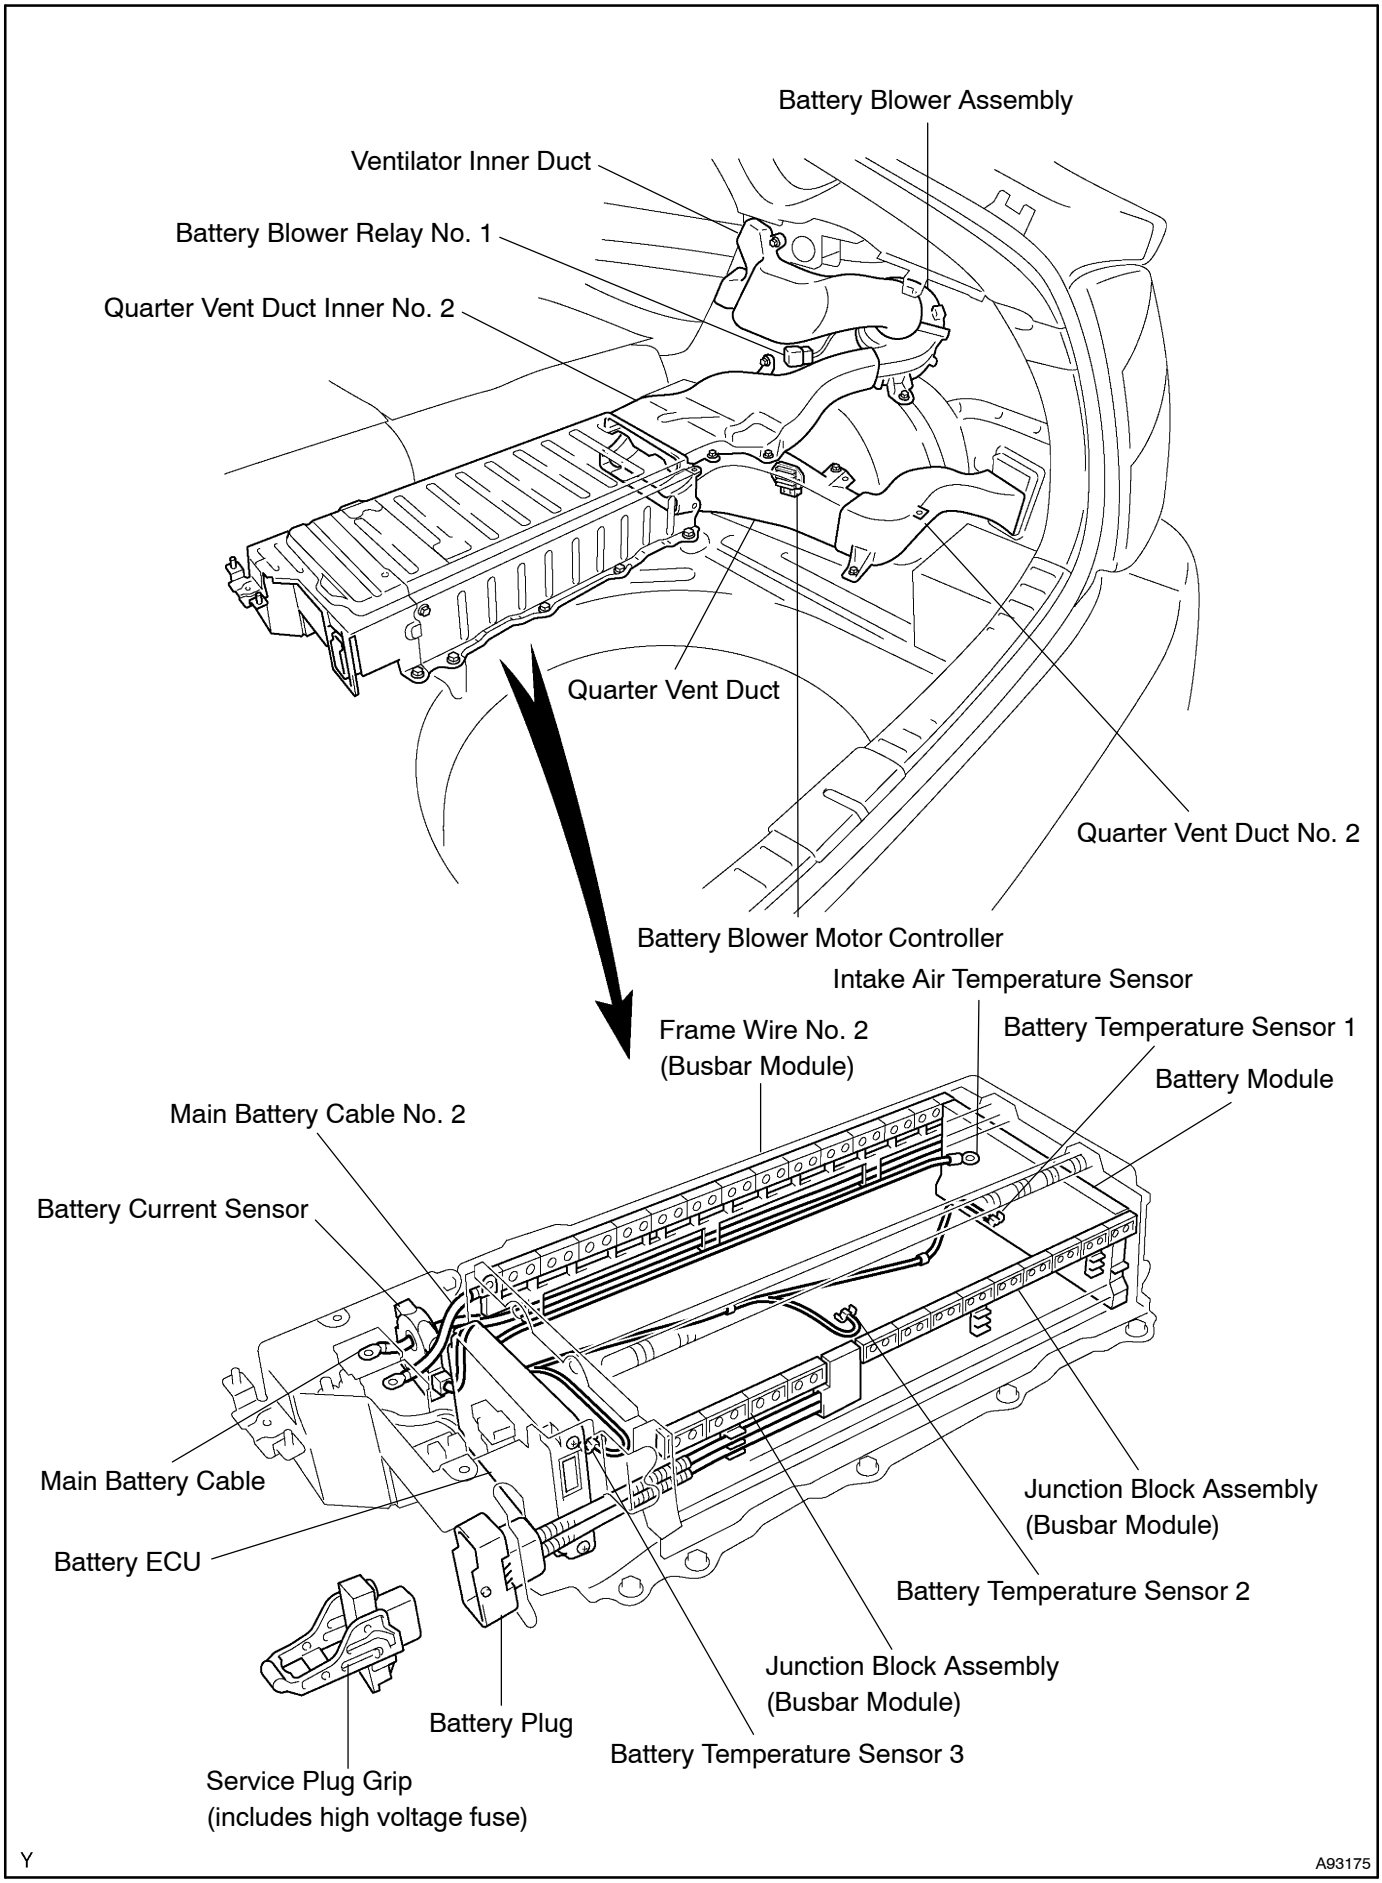


Battery Blower Assembly
Ventilator Inner Duct
Battery Blower Relay No. 1
Quarter Vent Duct Inner No. 2
Quarter Vent Duct
Quarter Vent Duct No. 2
Battery Blower Motor Controller
Intake Air Temperature Sensor
Frame Wire No. 2
(Busbar Module)
Battery Temperature Sensor 1
Battery Module
Main Battery Cable No. 2
Battery Current Sensor
Main Battery Cable
Junction Block Assembly
(Busbar Module)
Battery ECU
Battery Temperature Sensor 2
Junction Block Assembly
(Busbar Module)
Battery Plug
Battery Temperature Sensor 3
Service Plug Grip
(includes high voltage fuse)
Y
A93175