

05IG7–01

SYSTEM DIAGRAM

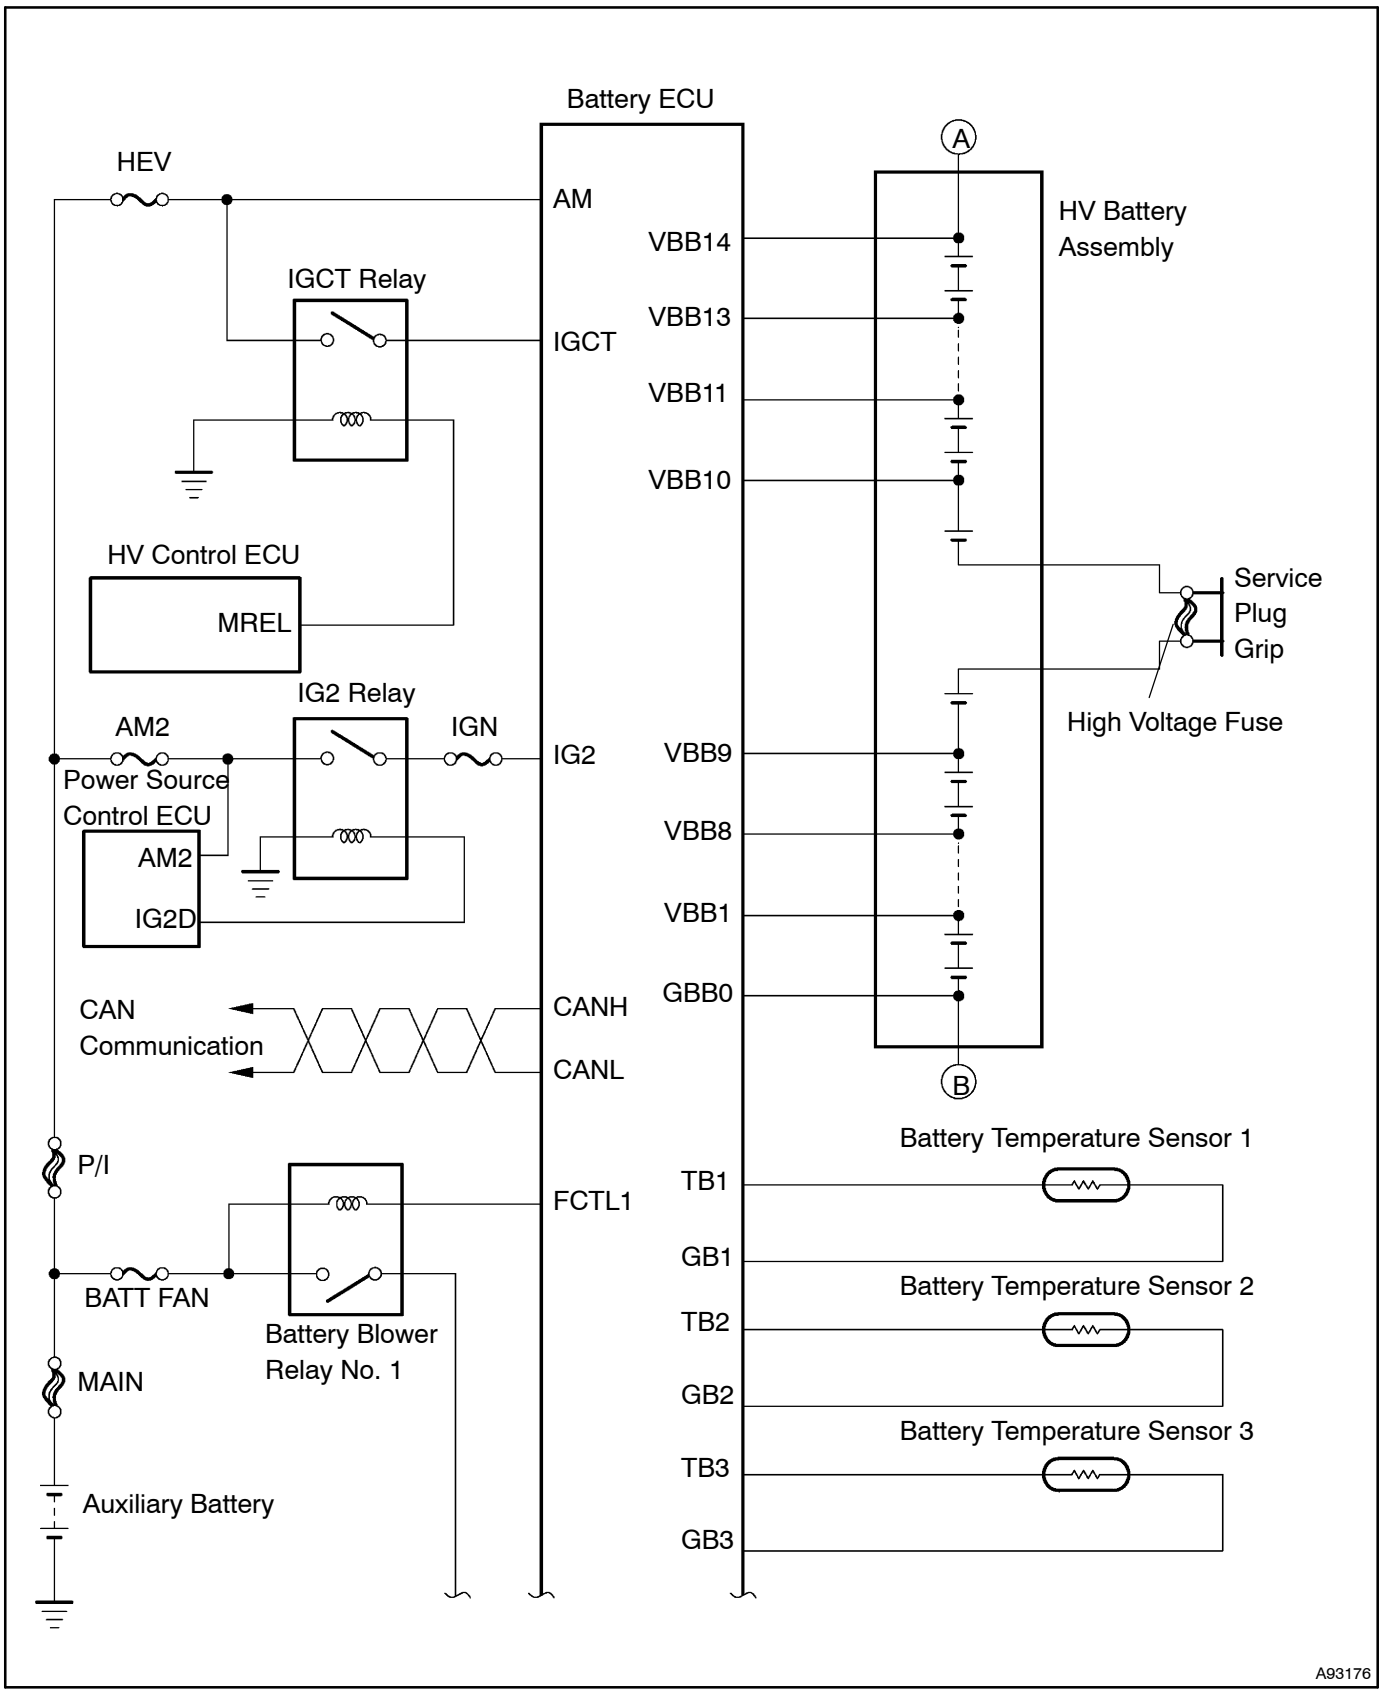


Battery Blower Assembly
M
+B
VM
SI
GND
Battery Blower Motor Controller
VM
SI
GND
VIB
IB
GIB
TC1
GC1
Intake Air
Temperature Sensor
System Main Relay
No. 3
B
(–)
CON3
HV Control ECU
Battery Current Sensor
System Main
Relay
No. 1
CON1
System Main
Resistor
System Main
Relay
No. 2
A
(+)
CON2
Y
A81738

Communication System Diagram:

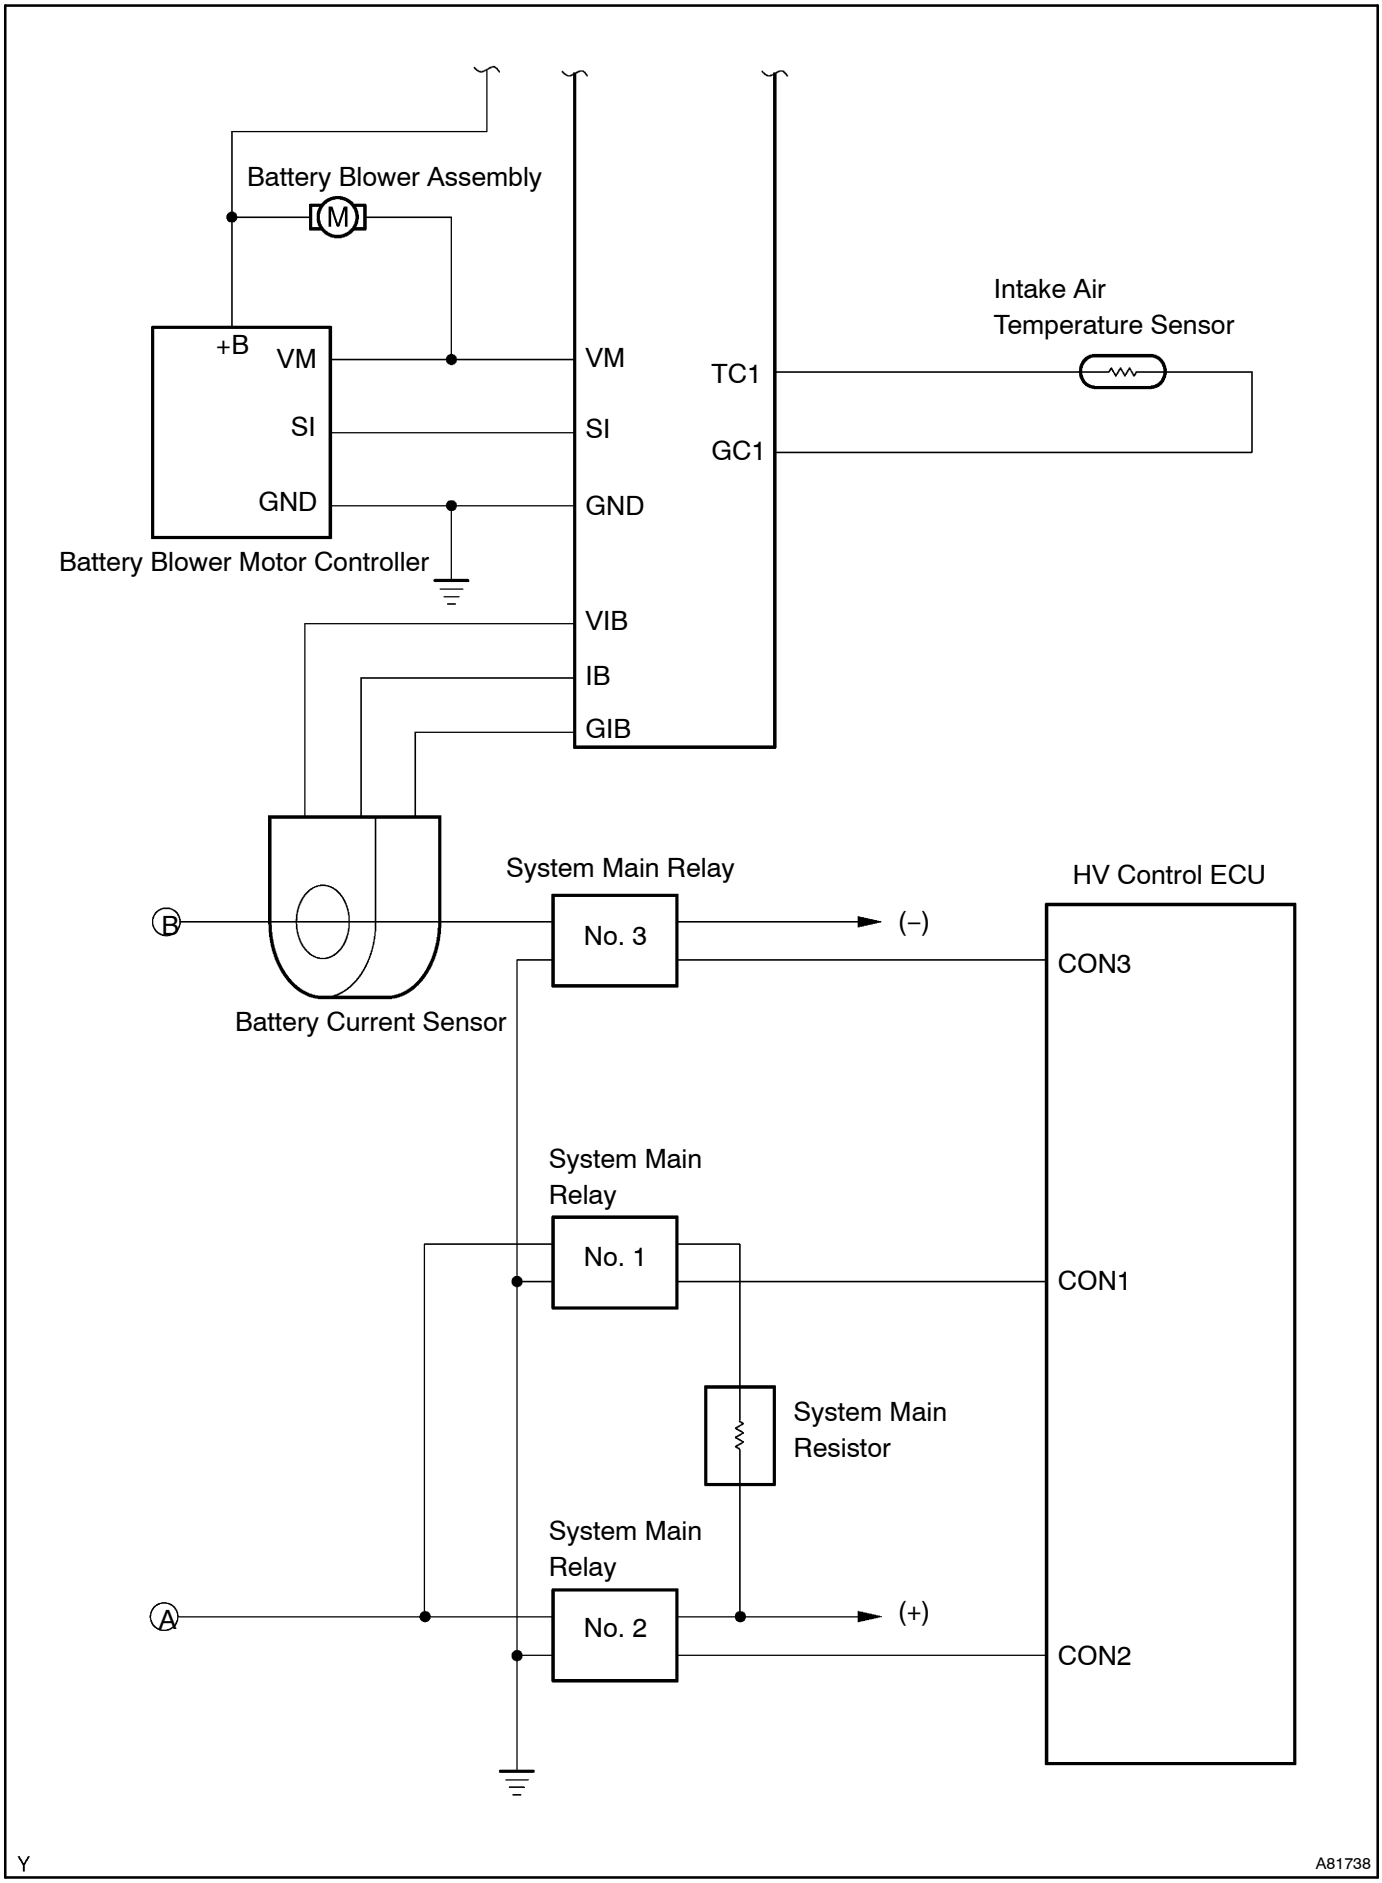