

05IJ2–01

LOCATION

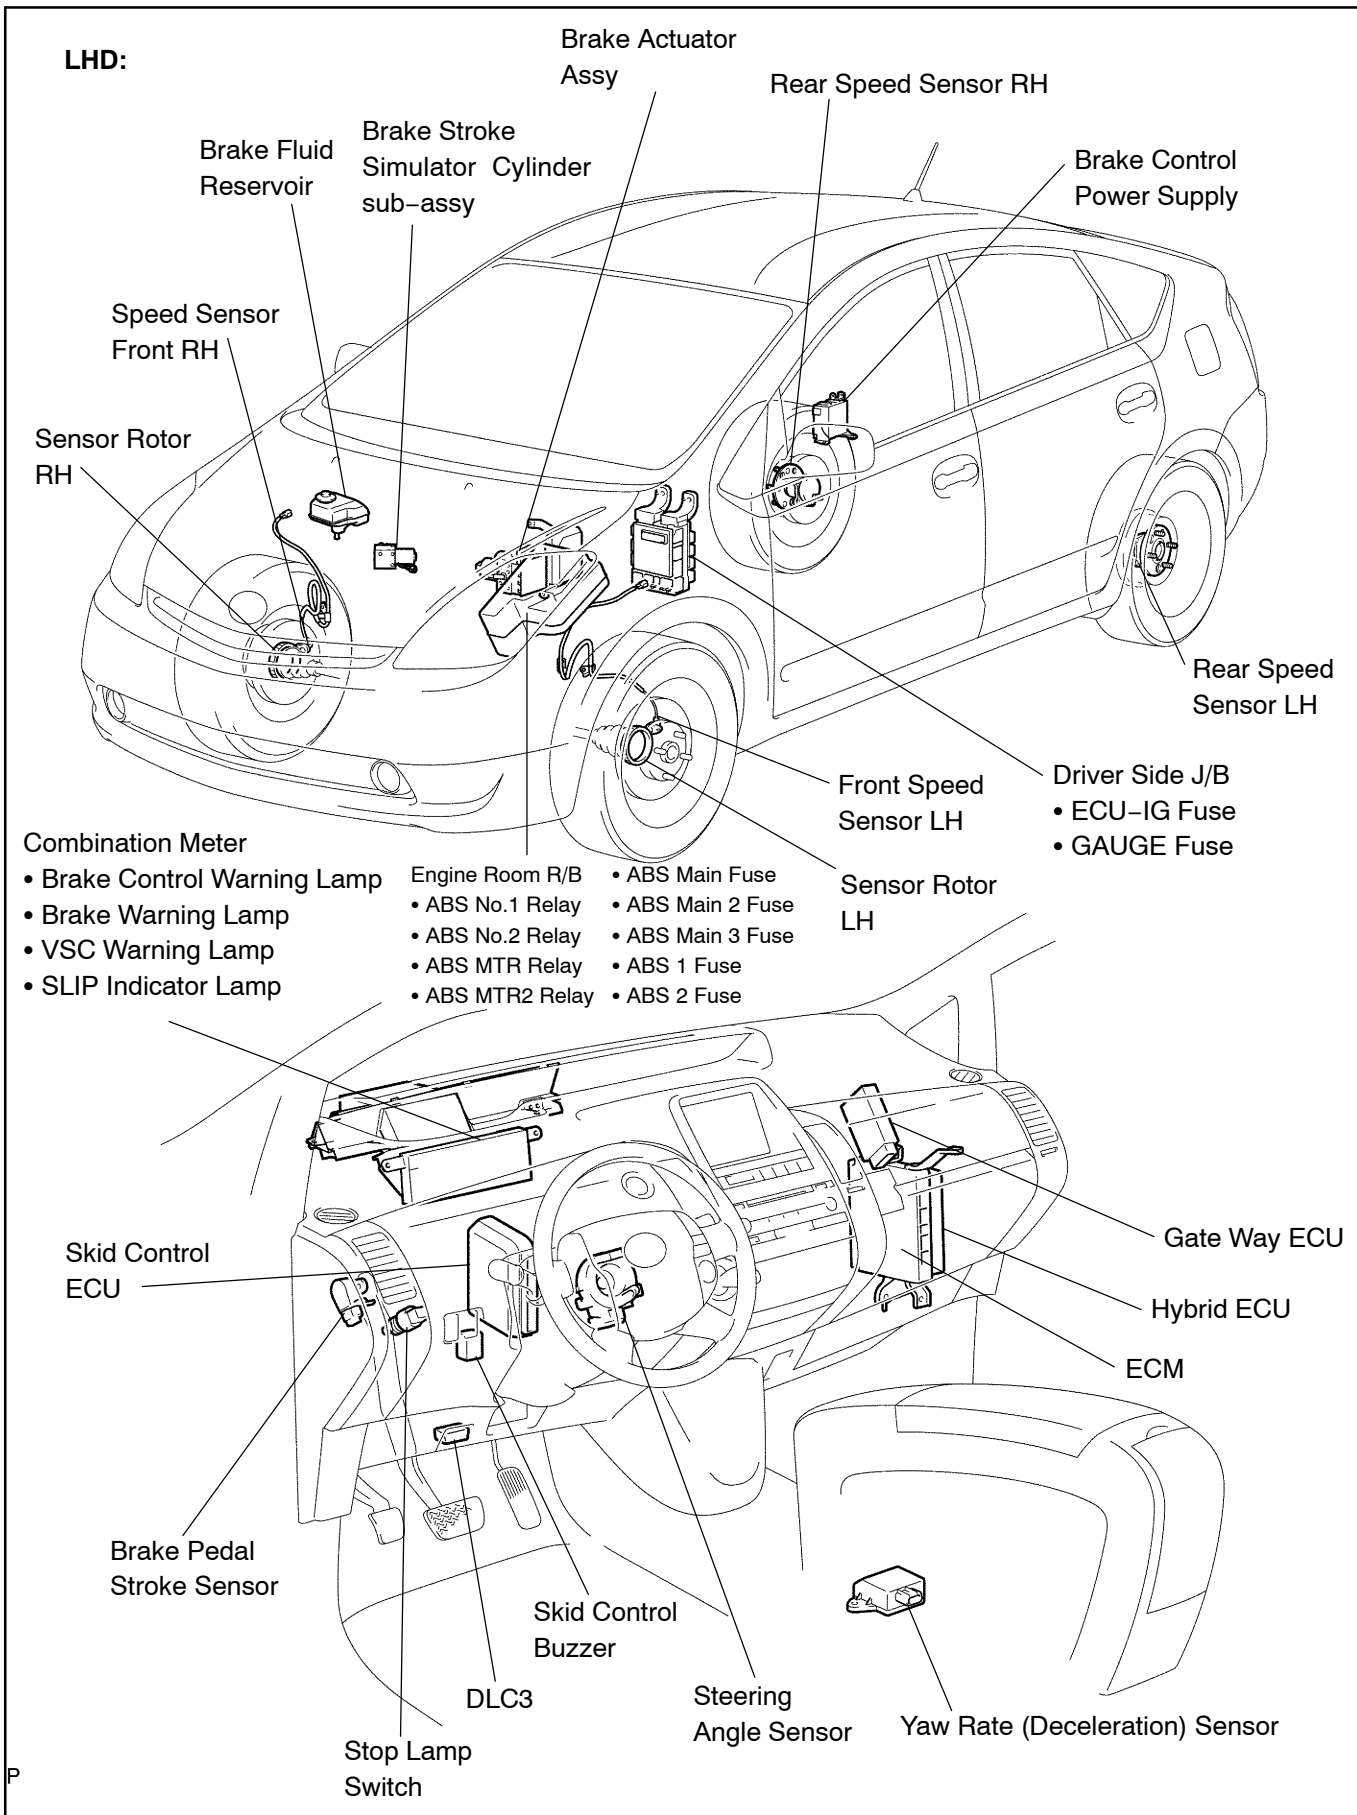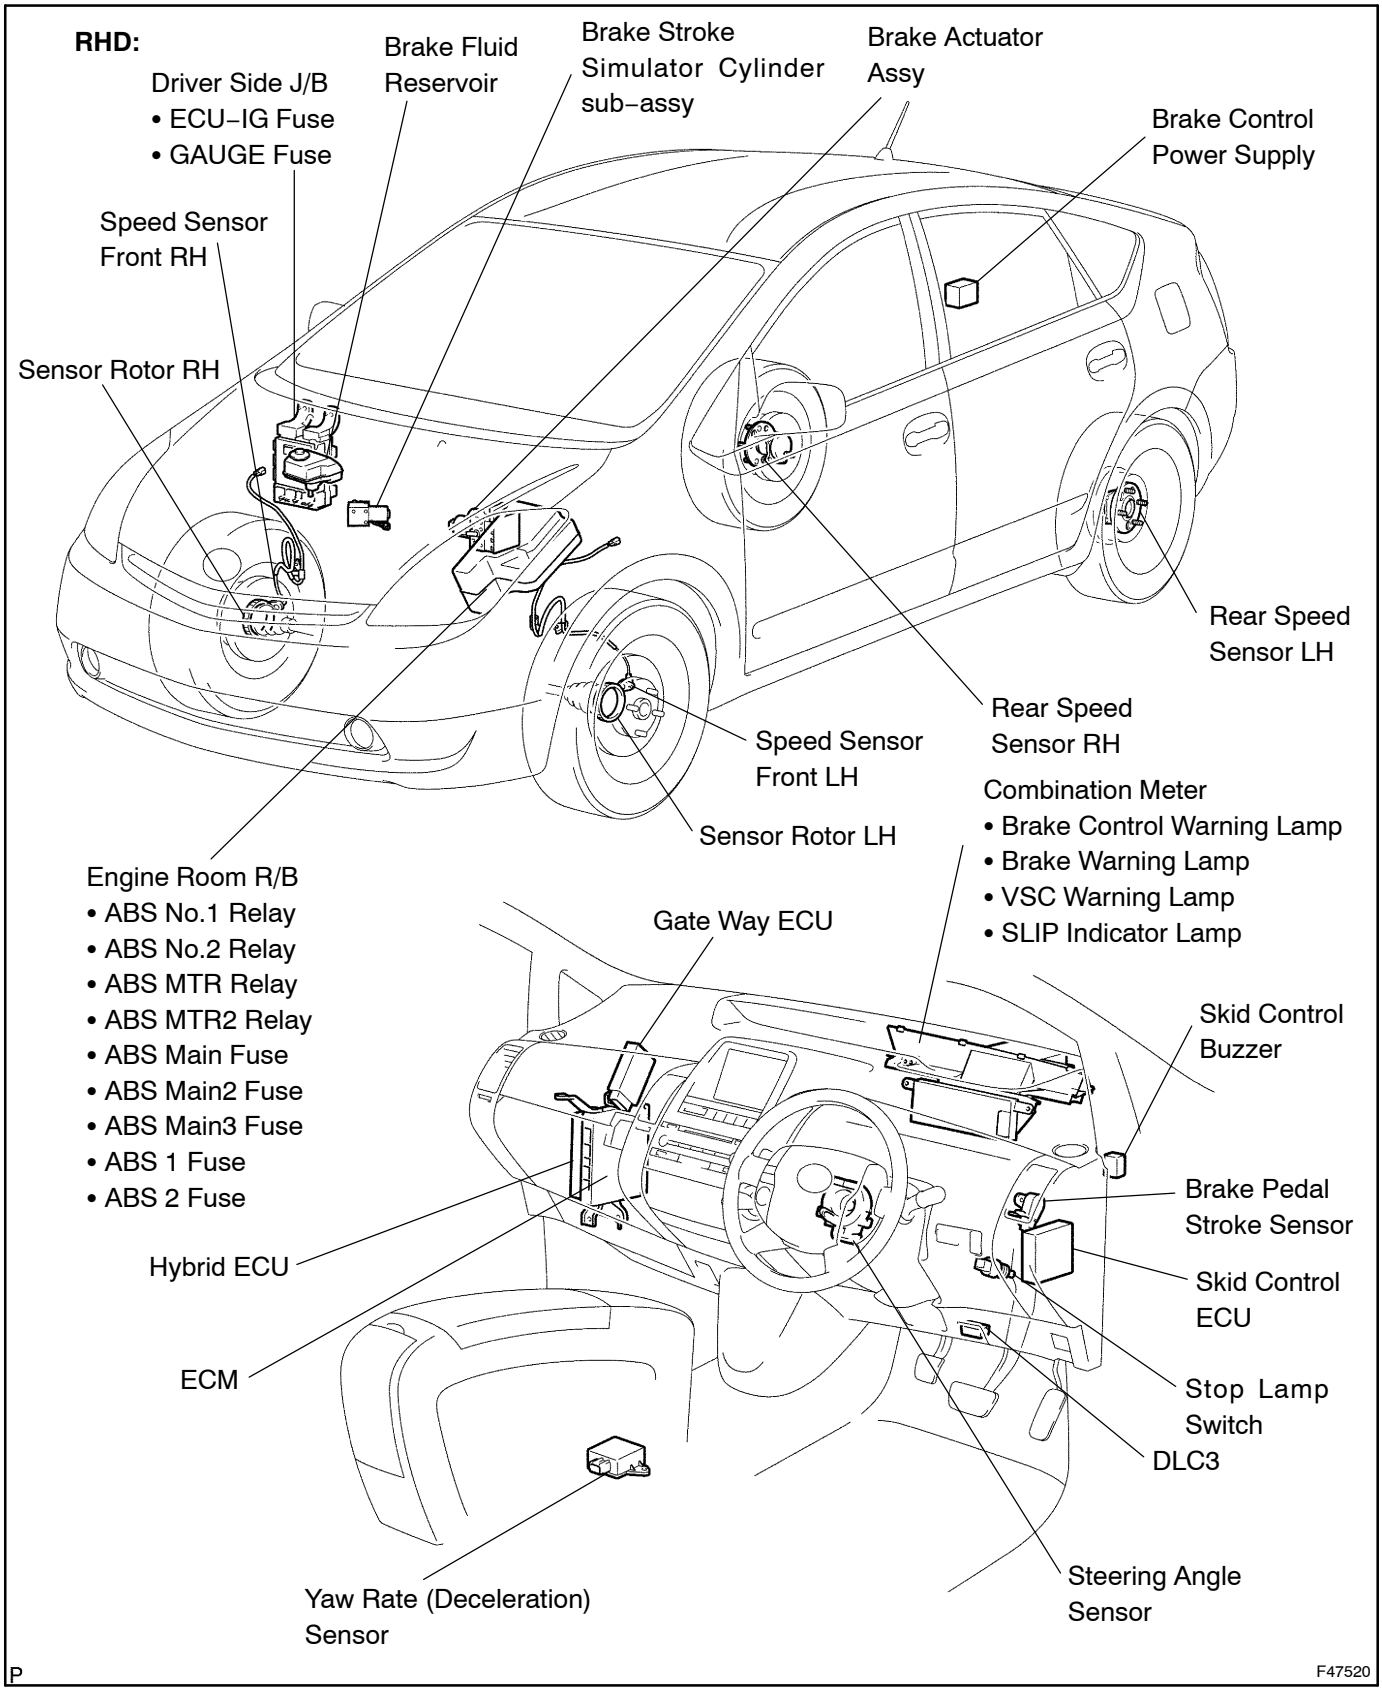

F47097


RHD:
Driver Side J/B
• ECU–IG Fuse
• GAUGE Fuse
Brake Fluid Reservoir
Brake Stroke Simulator Cylinder sub–assy
Brake Actuator Assy
Brake Control Power Supply
Speed Sensor Front RH
Sensor Rotor RH
Rear Speed Sensor LH
Rear Speed Sensor RH
Speed Sensor Front LH
Sensor Rotor LH
Combination Meter
• Brake Control Warning Lamp
• Brake Warning Lamp
• VSC Warning Lamp
• SLIP Indicator Lamp
Engine Room R/B
• ABS No.1 Relay
• ABS No.2 Relay
• ABS MTR Relay
• ABS MTR2 Relay
• ABS Main Fuse
• ABS Main2 Fuse
• ABS Main3 Fuse
• ABS 1 Fuse
• ABS 2 Fuse
Gate Way ECU
Skid Control Buzzer
Brake Pedal Stroke Sensor
Hybrid ECU
Skid Control ECU
ECM
Stop Lamp Switch
DLC3
Steering Angle Sensor
Yaw Rate (Deceleration) Sensor
P
F47520