

05J0A–01

LOCATION

LHD:

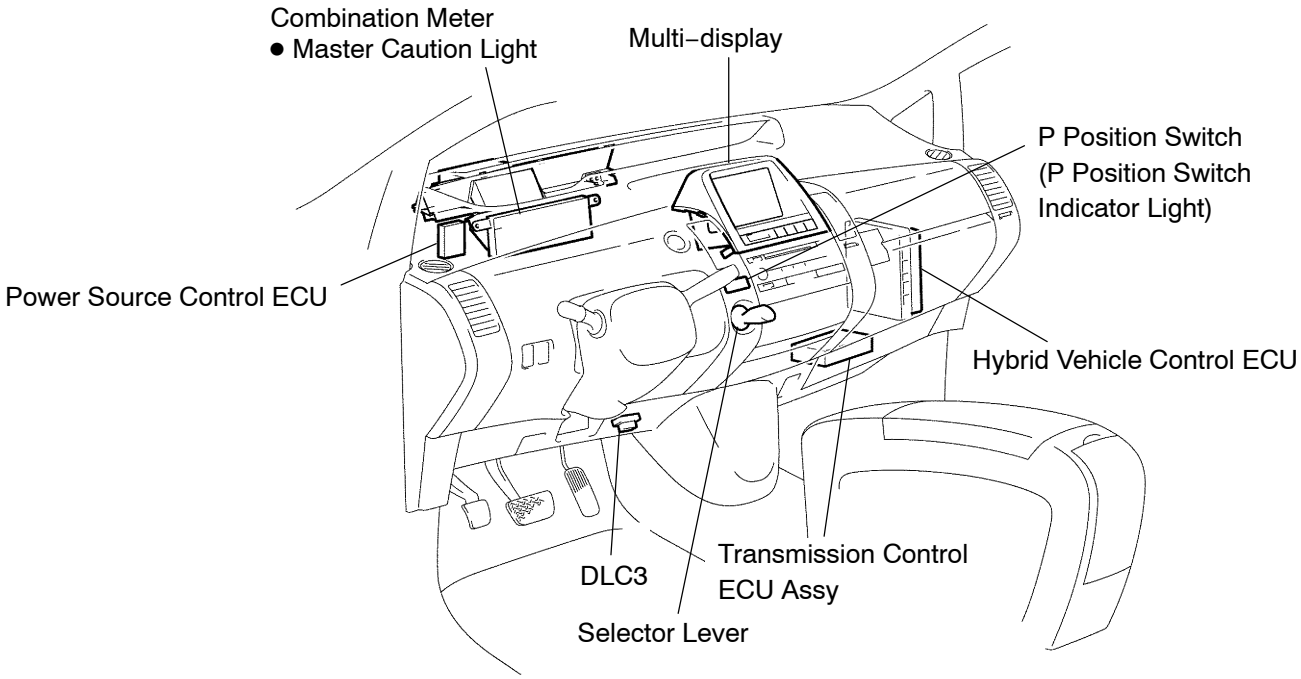


RHD:

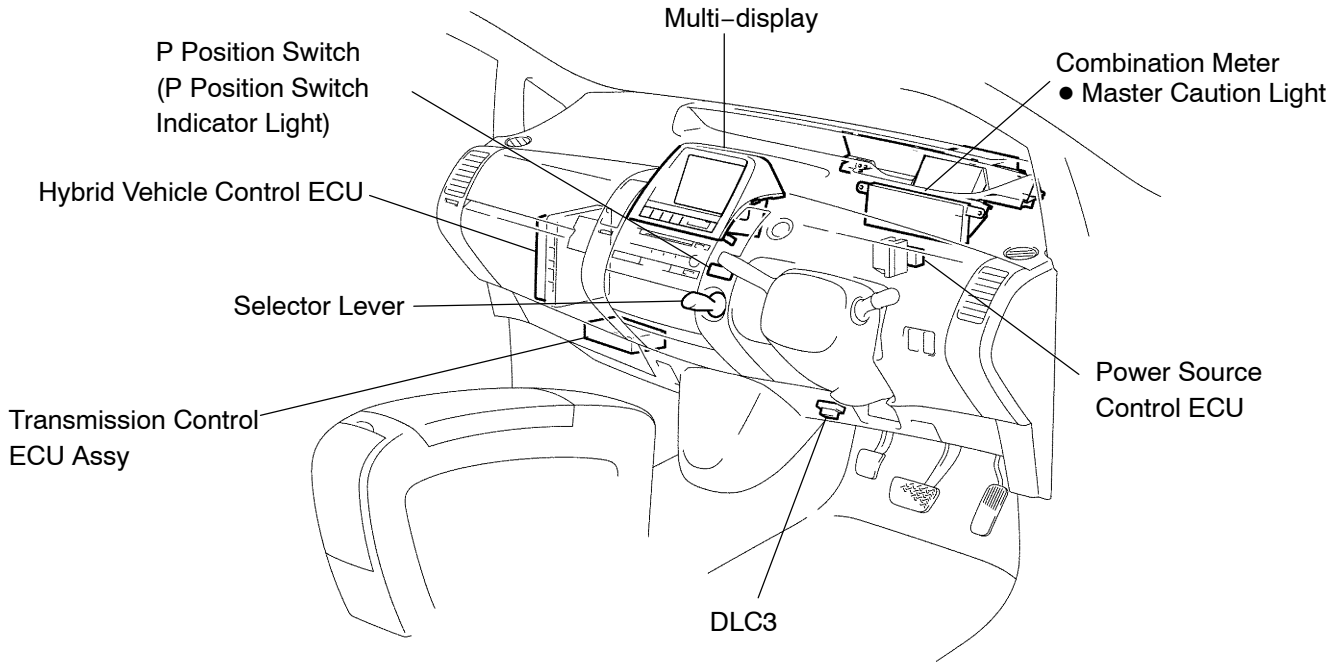

P

F47587

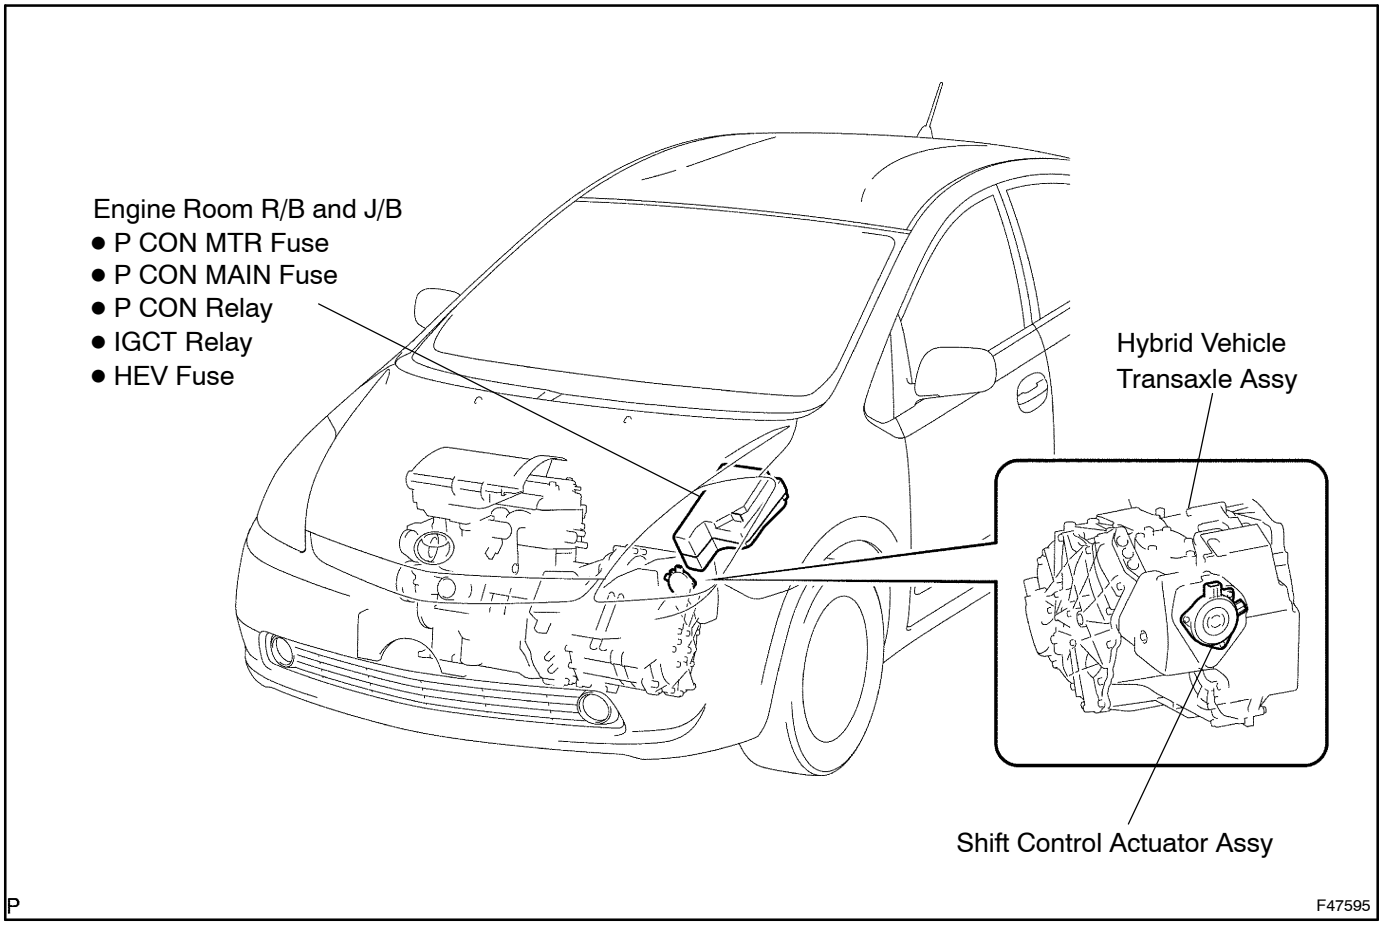
Engine Room R/B and J/B
● P CON MTR Fuse
● P CON MAIN Fuse
● P CON Relay
● IGCT Relay
● HEV Fuse
Hybrid Vehicle Transaxle Assy
Shift Control Actuator Assy
P
F47595