
05ILX–02

SYSTEM DIAGRAM

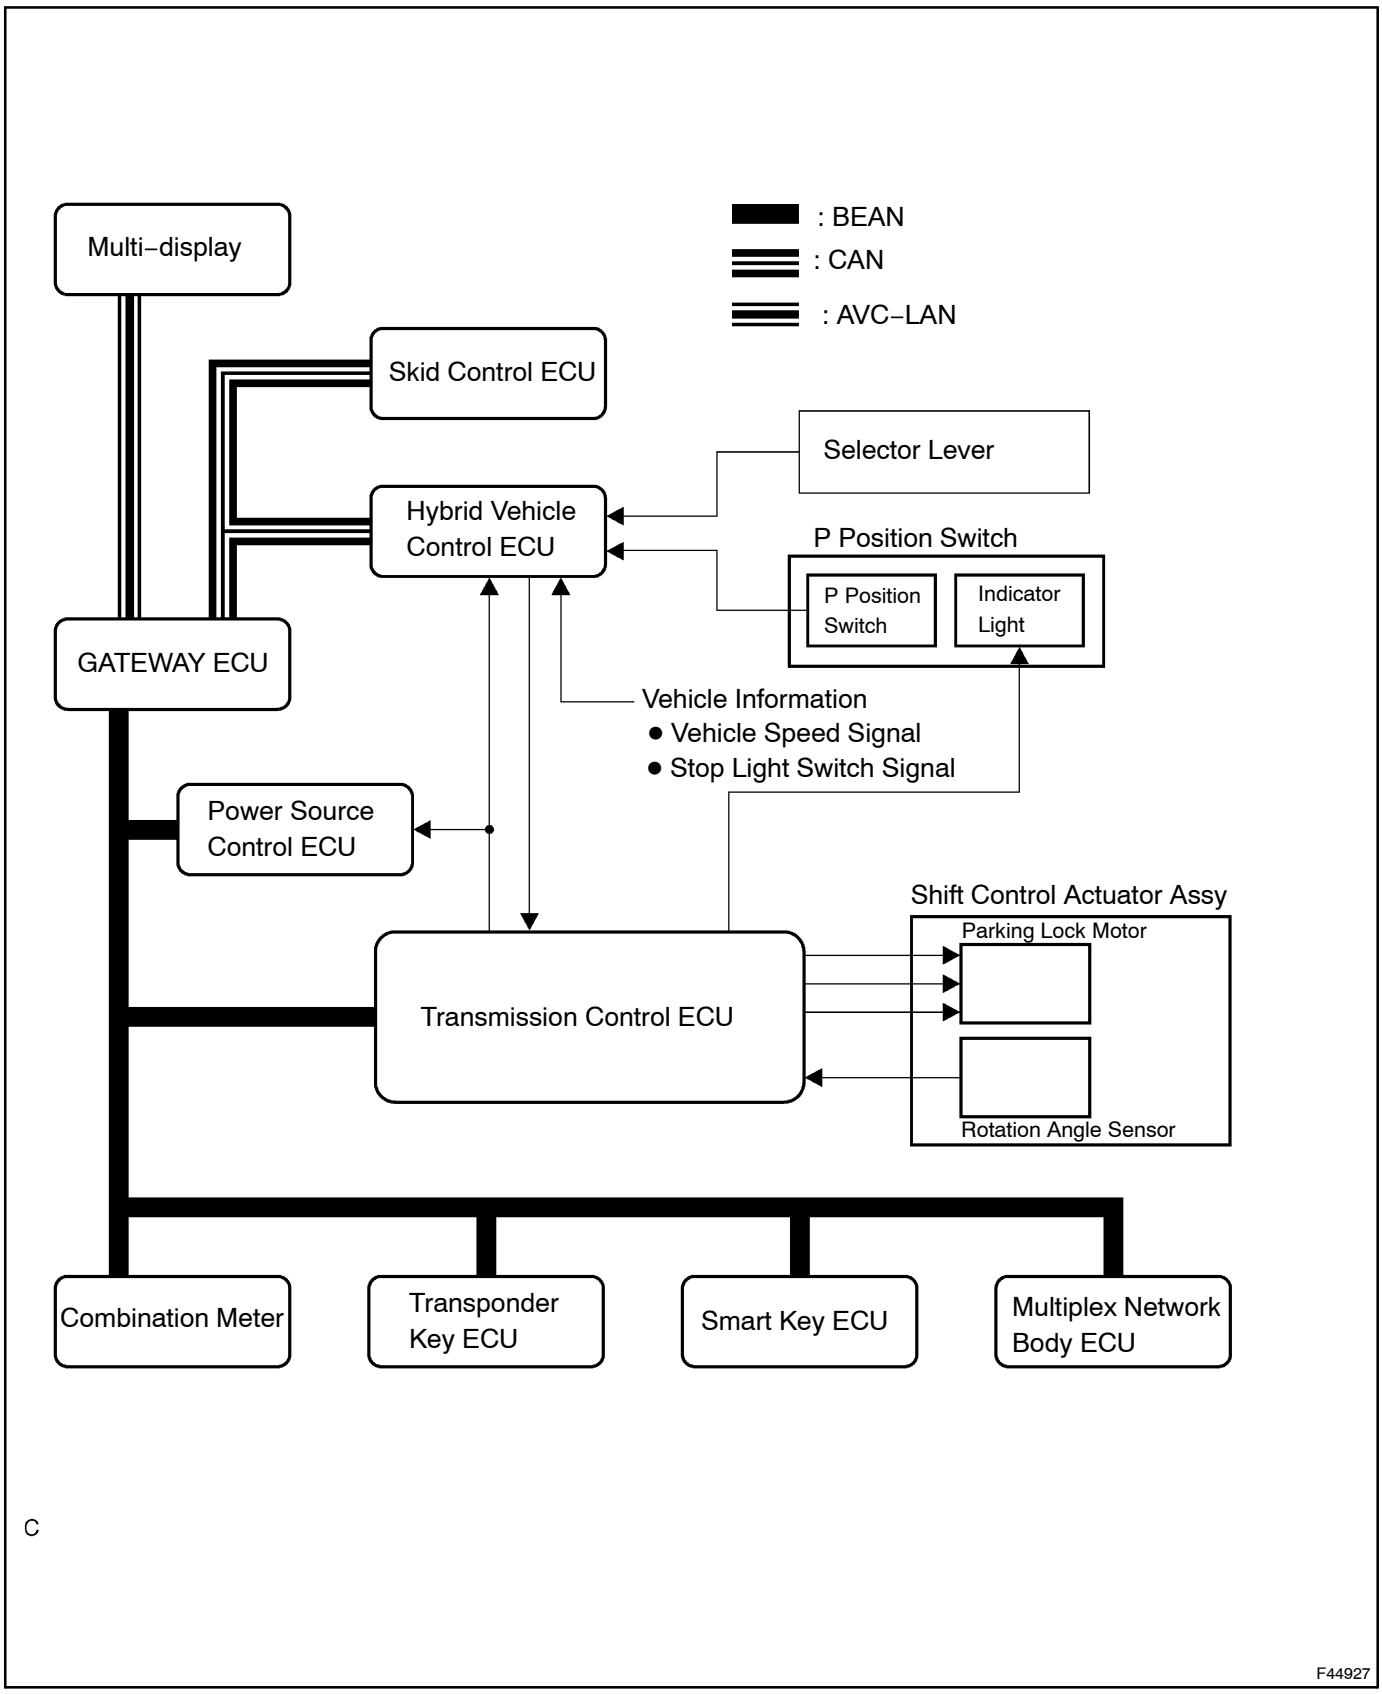

C

F44927

Input and output signals of each ECU.

Transmitting ECU (transmitter)	Receiving ECU	Signals	Communication method
Skid Control ECU	Transmission Control ECU Assy	• PKB switch signal	CAN, BEAN
Power Source Control ECU	Transmission Control ECU Assy	• Power off preparation signal	BEAN
Multiplex Network Body ECU	Transmission Control ECU Assy	• Ignition switch signal • ACC switch signal	BEAN
Transmission Control ECU Assy	Ignition Control ECU	• P position state signal • Transmission control ECU trouble condition signal • Auto P cancel signal • Non–P position state signal • Auto P permit signal	BEAN
Transmission Control ECU Assy	Multi–display	• Transmission control ECU trouble signal	AVC–LAN, BEAN
Transmission Control ECU Assy	Combination Meter	• Transmission control ECU trouble signal	BEAN
Transmission Control ECU Assy	Transponder Key Amplifier	• P position state signal • Key condition signal	BEAN
Transmission Control ECU Assy	Smart Key ECU	• P position state signal	BEAN