
05IME–02

DTC CHECK/CLEAR

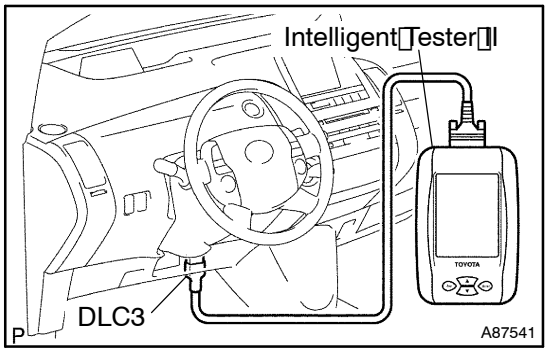

1. CHECK FOR DTCs

(a) Prepare the intelligent tester II.

(b) Connect the intelligent tester II to the DLC3 at the lower part of the instrument panel.

(c) Turn the power switch on (IG) and turn the intelligent tester II on.

(d) Use the intelligent tester II to check for DTCs and the freeze frame data, and note or print the result (see the operator's manual for operating instructions).

(e) See page 05–929 to confirm the details of the DTCs.

2. CLEAR DTCs

HINT:

The following procedures clear the DTCs and freeze frame data.

(a) When using the intelligent tester II:
Operate the intelligent tester II to clear the DTCs (see the operator's manual for operating instructions).

(b) When not using the intelligent tester II:

HINT:

Remove the P CON MAIN fuse to erase DTCs C2300, C2301, C2303, C2304, C2305, C2306, and C2307 because they cannot be erased with the intelligent tester II.

(1) Turn the power switch off.

(2) Remove the P CON MAIN fuse (7.5 A) for 60 seconds or more, and then reconnect it.

(3) Turn the power switch on (IG).

(4) Check that no DTCs are output.