
05IJZ–02

DTC CHECK/CLEAR

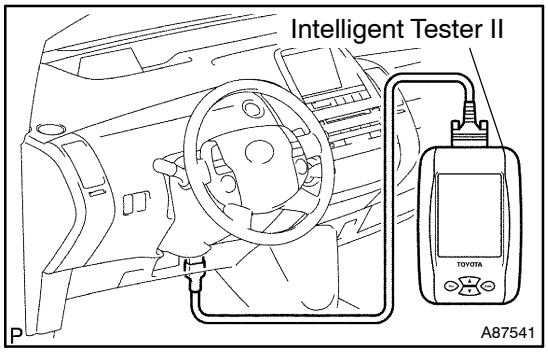

1. CHECK FOR DTCs

(a) Check for DTCs.

(1) Connect the intelligent tester II to the DLC3.

(2) Turn the power switch on (IG).

(3) Read the DTCs by following the display on the intelligent tester II.

HINT:

Refer to the intelligent tester II operator's manual for further details.

2. CLEAR THE DTCs

(a) Clear the DTCs from the memory.

(1) Connect the intelligent tester II to the DLC3.

(2) Turn the power switch on (IG).

(3) Clear the DTCs by following the display on the intelligent tester II.

HINT:

Refer to the intelligent tester II operator's manual for further details.