
05ILS–01

DTC CHECK/CLEAR

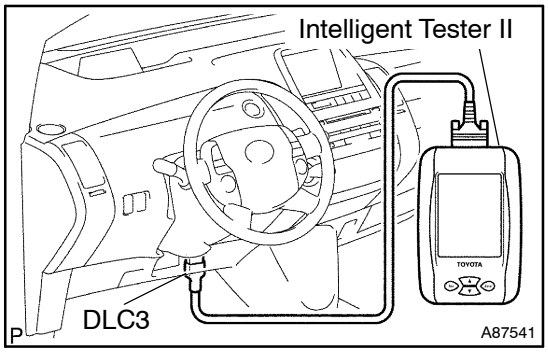

1. DTC CHECK USING INTELLIGENT TESTER II

(a) Hook up the intelligent tester II to the DLC3.

(b) Power switch ON (ready).

(c) Read the DTC following the prompts on the tester screen. Please refer to the intelligent tester II operator's manual for further details.

(d) Clear the DTCs.

HINT:

After repairing the malfunctions, clear the DTC.

(1) Connect the intelligent tester II to DLC3.

(2) Turn the ignition switch to the ON position.

(3) Erase the DTCs following the prompts on the tester screen.

HINT:

Refer to the intelligent tester II operator's manual for further details.