
050X3–16

TERMINALS OF ECU

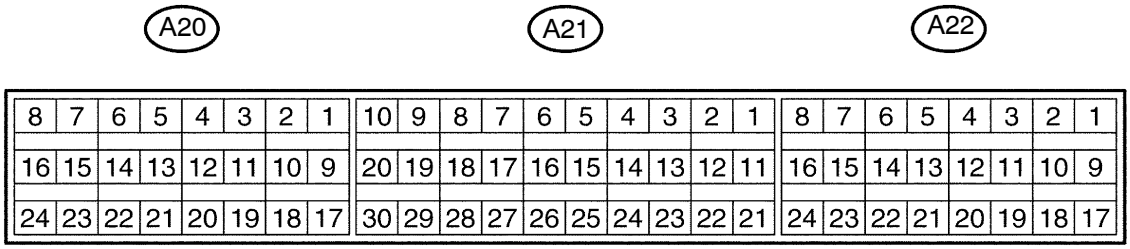

P H43423

Terminal No.	Terminal Symbol	Destination
A20–1	SFD+	Front seat airbag assy LH (Side squib (D seat side)) (*1) Front seat airbag assy RH (Side squib (D seat side)) (*2)
A20–2	SFD–	Front seat airbag assy LH (Side squib (D seat side)) (*2) Front seat airbag assy RH (Side squib (D seat side)) (*2)
A20–3	ICD–	Curtain shield airbag assy LH (Curtain shield airbag (D seat side) squib) (*1) Curtain shield airbag assy RH (Curtain shield airbag (D seat side) squib) (*2)
A20–4	ICD+	Curtain shield airbag assy LH (Curtain shield airbag (D seat side) squib) (*1) Curtain shield airbag assy RH (Curtain shield airbag (D seat side) squib) (*2)
A20–5	PD+	Front seat outer belt assy LH (P/T squib (D seat side)) (*1) Front seat outer belt assy RH (P/T squib (D seat side)) (*2)
A20–6	PD–	Front seat outer belt assy LH (P/T squib (D seat side)) (*1) Front seat outer belt assy RH (P/T squib (D seat side)) (*2)
A20–9	DSP+	Seat position airbag sensor
A20–10	DBE+	Front seat inner belt assy LH (D seat side) (*1) Front seat inner belt assy RH (D seat side) (*2)
A20–17	DSP–	Seat position airbag sensor
A20–18	DBE–	Front seat inner belt assy LH (D seat side) (*1) Front seat inner belt assy RH (D seat side) (*2)
A20–19	VUPD	Side airbag sensor assy LH (*1) Side airbag sensor assy RH (*2)
A20–20	VUCD	Airbag sensor rear LH (*1) Airbag sensor rear RH (*2)
A20–21	ESD	Side airbag sensor assy LH (*1) Side airbag sensor assy RH (*2)
A20–22	ESCD	Airbag sensor rear LH (*1) Airbag sensor rear RH (*2)
A21–1	P2+	Front passenger airbag assy (P squib, Dual stage – 2nd step)
A21–2	P2–	Front passenger airbag assy (P squib, Dual stage – 2nd step)
A21–3	P–	Front passenger airbag assy (P squib)
A21–4	P+	Front passenger airbag assy (P squib)
A21–5	D+	Horn button assy (D squib)
A21–6	D–	Horn button assy (D squib)
A21–7	D2–	Horn button assy (D squib, Dual stage – 2nd step)

Terminal No.	Terminal Symbol	Destination
A21–8	D2+	Horn button assy (D squib, Dual stage – 2nd step)
A21–14	LA	Combination meter assy (SRS warning light)
A21–15	TC	DLC3
A21–16	SIL	DLC3
A21–21	IG2	IGN Fuse
A21–22	GSW2	HV ECU
A21–25	E1	Ground
A21–26	E2	Ground
A21–27	–SR	Airbag sensor front RH
A21–28	–SL	Airbag sensor front LH
A21–29	+SR	Airbag sensor front RH
A21–30	+SL	Airbag sensor front LH
A22–3	PP–	Front seat outer belt assy RH (P/T squib (P seat side)) (*1) Front seat outer belt assy LH (P/T squib (P seat side)) (*2)
A22–4	PP+	Front seat outer belt assy RH (P/T squib (P seat side)) (*1) Front seat outer belt assy LH (P/T squib (P seat side)) (*2)
A22–5	ICP+	Curtain shield airbag assy RH (Curtain shield airbag (P seat side) squib) (*1) Curtain shield airbag assy LH (Curtain shield airbag (P seat side) squib) (*2)
A22–6	ICP–	Curtain shield airbag assy RH (Curtain shield airbag (D seat side) squib) (*1) Curtain shield airbag assy LH (Curtain shield airbag (P seat side) squib) (*2)
A22–7	SFP–	Front seat airbag assy RH (Side squib (P seat side)) (*1) Front seat airbag assy LH (Side squib (P seat side)) (*2)
A22–8	SFP+	Front seat airbag assy RH (Side squib (D seat side)) (*1) Front seat airbag assy LH (Side squib (P seat side)) (*2)
A22–19	ESCP	Airbag sensor rear RH (*1) Airbag sensor rear LH (*2)
A22–20	ESP	Side airbag sensor assy RH (*1) Side airbag sensor assy LH (*2)
A22–21	VUCP	Airbag sensor rear RH (*1) Airbag sensor rear LH (*2)
A22–22	VUPP	Side airbag sensor assy RH (*1) Side airbag sensor assy LH (*2)

*1: LHD
*2: RHD