
05INC–01

DTC CHECK/CLEAR

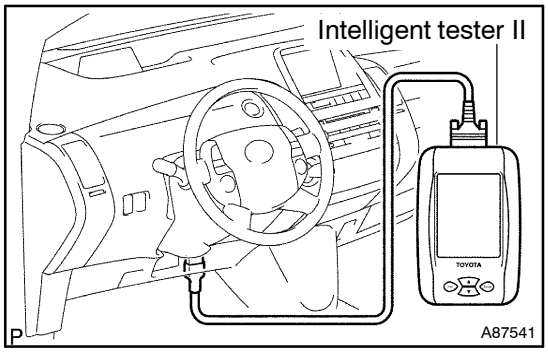

1. DTC CHECK

(a) Check the DTCs.

(1) Connect the intelligent tester II to the DLC3.

(2) Turn the power switch on (IG).

(3) Check the DTCs by following the prompts on the tester screen.

HINT:

Refer to the intelligent tester II operator's manual for further details.

(b) Clear the DTCs.

(1) Connect the intelligent tester II to the DLC3.

(2) Turn the power switch on (IG).

(3) Clear the DTCs by following the prompts on the tester screen.

HINT:

Refer to the intelligent tester II operator's manual for further details.