
CHECK MODE PROCEDURE

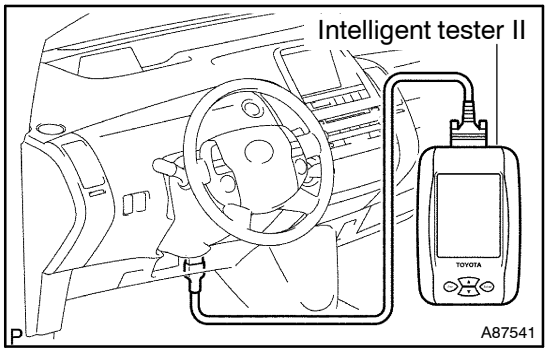

1. CHECK MODE (SIGNAL CHECK)

(a) Connect the intelligent tester II to the DLC3.

(b) Turn the power switch on (IG).

(c) Select the ”SIGNAL CHECK”, and proceed checking with the intelligent tester II.

HINT:

- Malfunctions can be detected in the check mode better than the normal check mode.
- If the normal system code is output in the normal check mode even when a sensor signal malfunction is suspected, perform the inspection in the check mode.