

05HH3–01

LOCATION

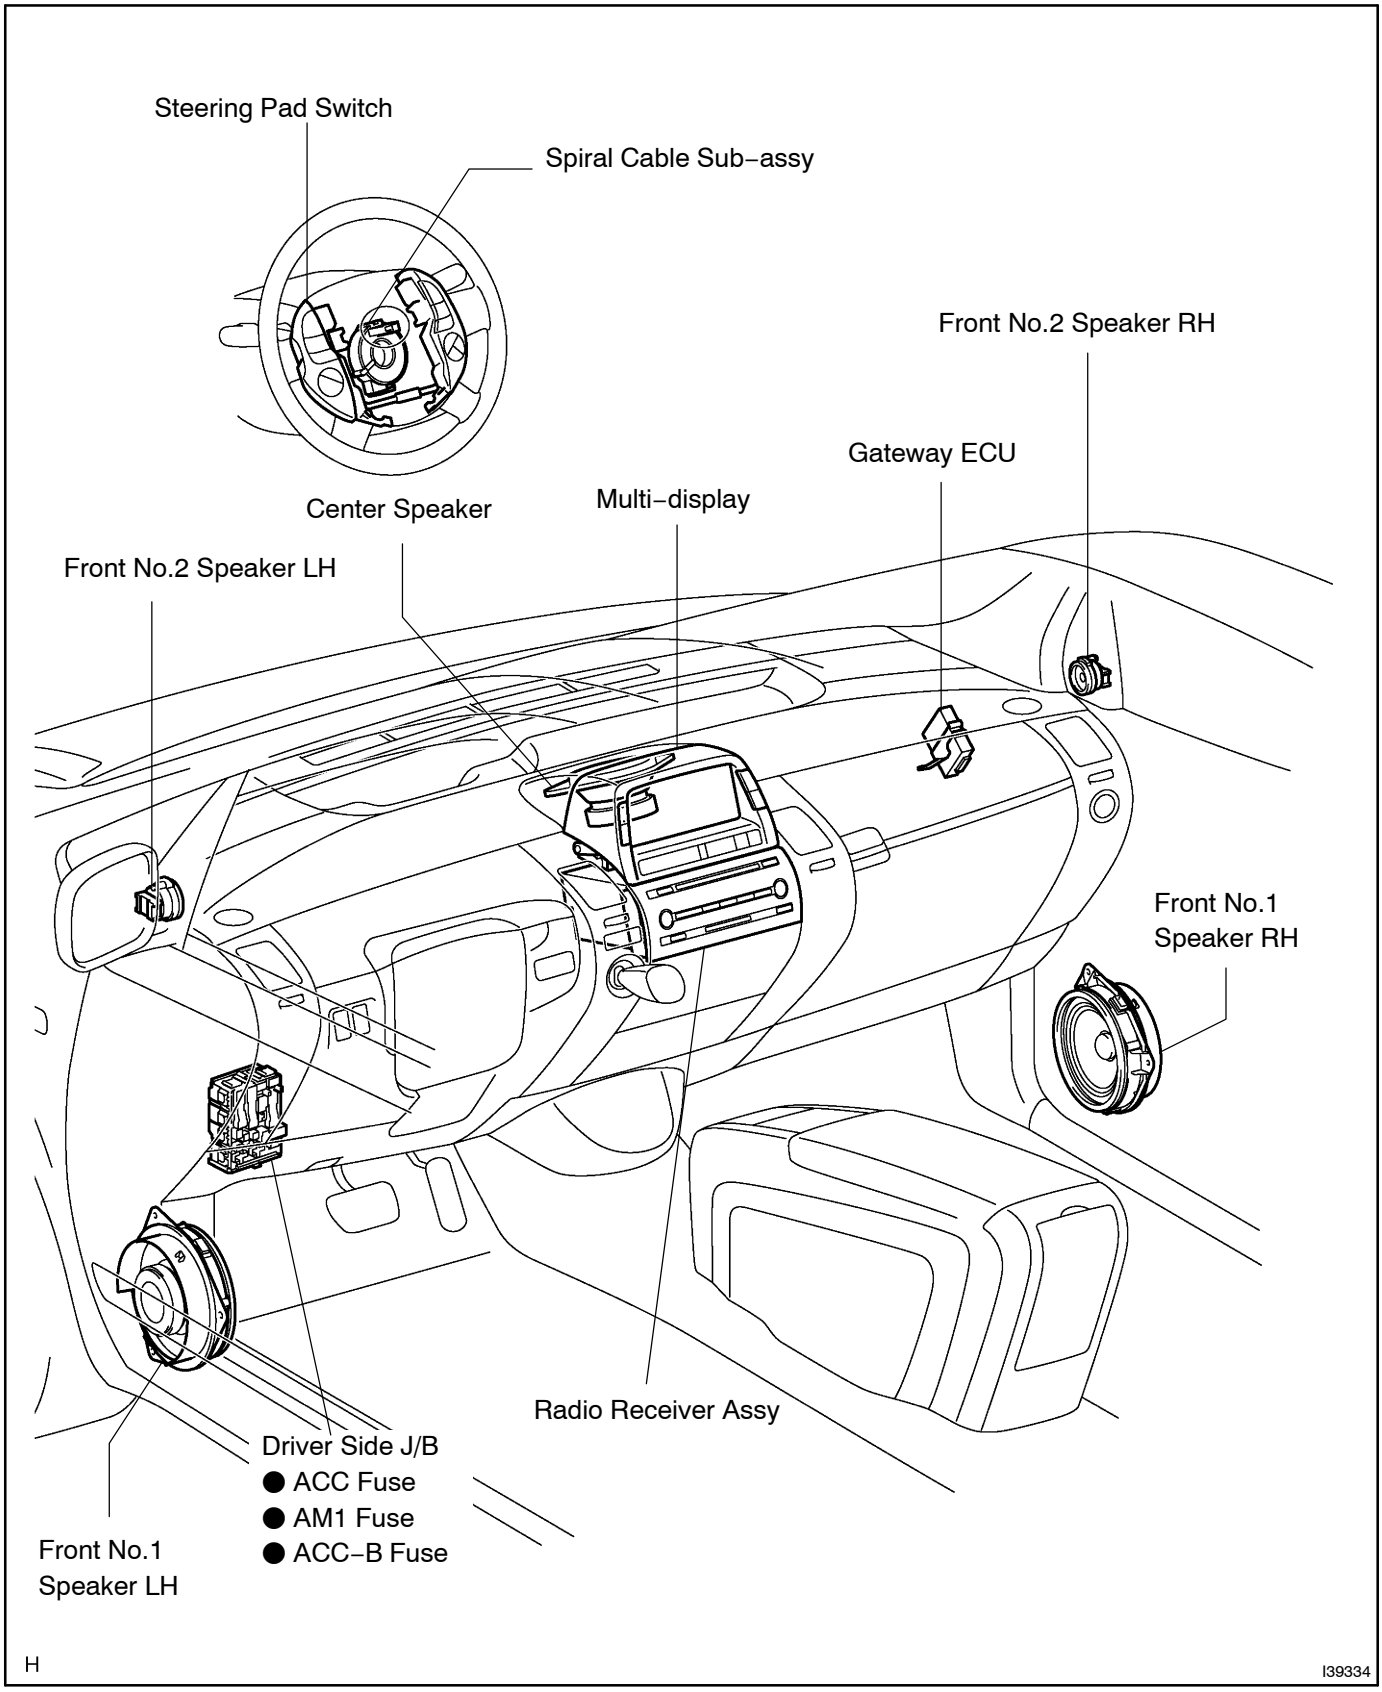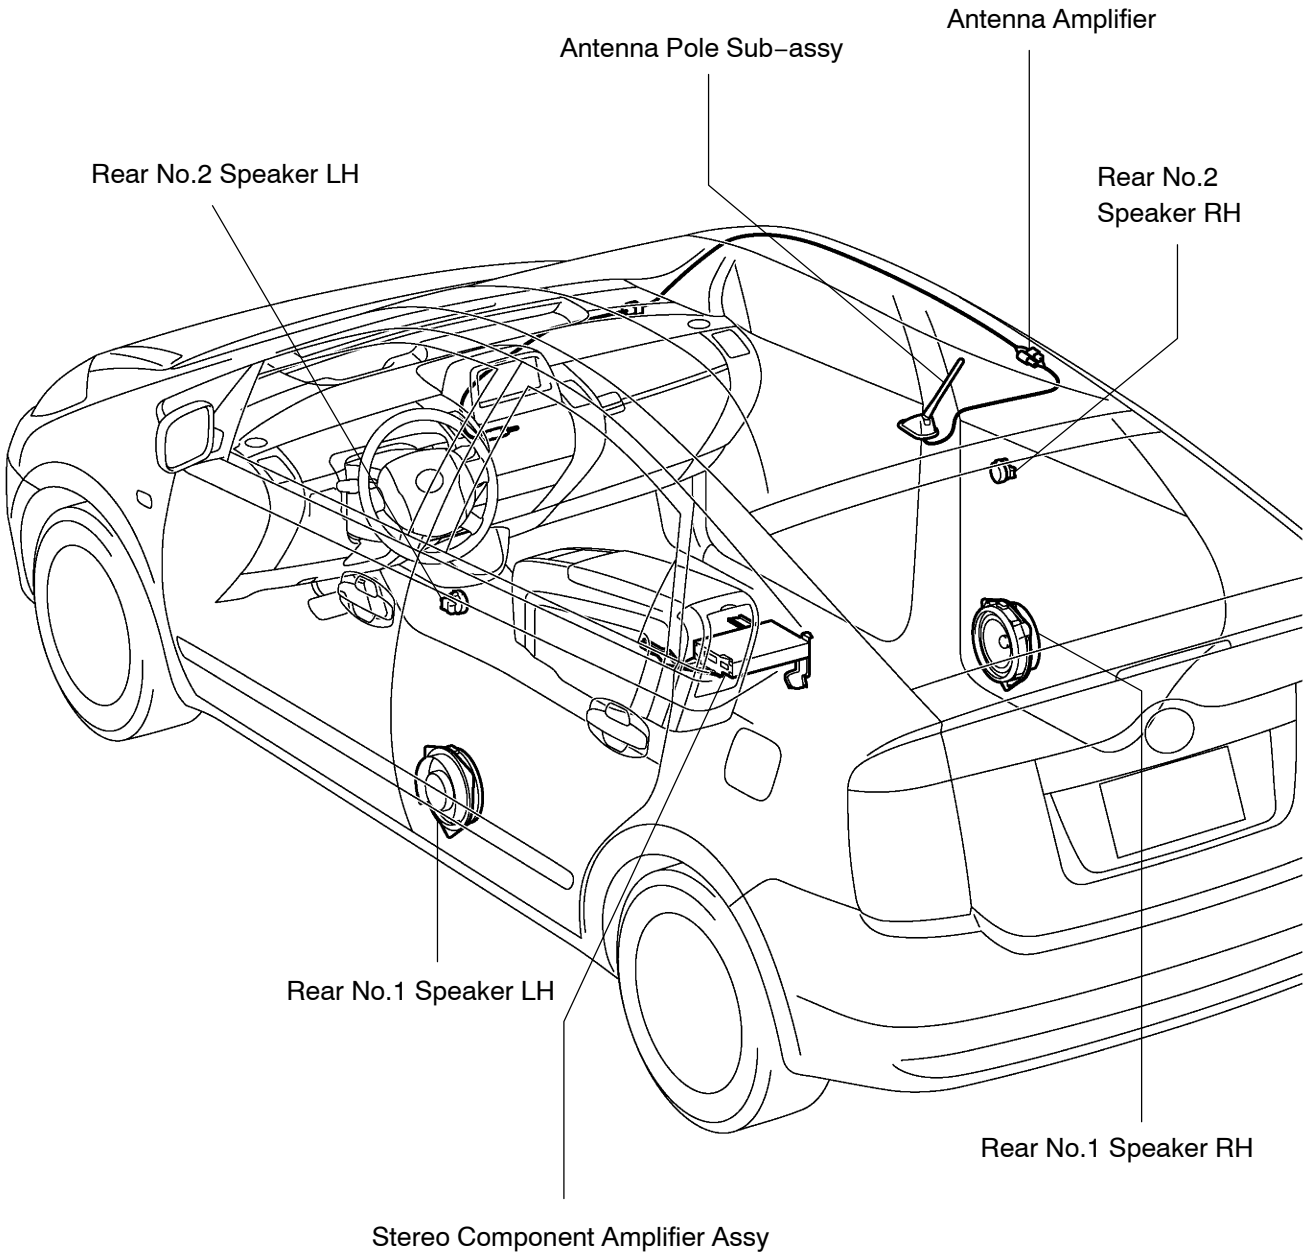


Antenna Amplifier
Antenna Pole Sub–assy
Rear No.2 Speaker LH
Rear No.2
Speaker RH
Rear No.1 Speaker LH
Rear No.1 Speaker RH
Stereo Component Amplifier Assy

H

I39335