
CD SOUND SKIPS

HINT:

- The sound may skip when driving on an unpaved road.
- Sudden temperature changes in the cabin will cause condensation inside the CD player and prevent it from playing.

INSPECTION PROCEDURE

1	DISC CLEANING

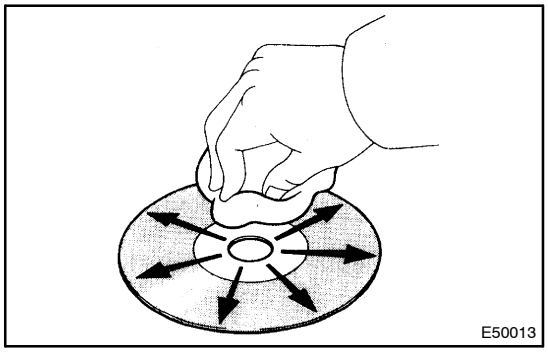

(a) Disc cleaning
  (1) If the disc gets dirty, clean the disc by wiping the surface from the center to outside in a radial direction a with a soft cloth.

NOTICE:
Do not use a conventional record cleaner or anti–static preservative.

OK: Malfunction disappears.

OK	DISC IS DIRTY

NG

2	REPLACE CD WITH ANOTHER AND RECHECK

(a) Replace the CD with another and recheck.
  (1) Replace the CD with another normal one to see if the same trouble occurs again.

OK: Malfunction disappears.

OK	CD IS FAULTY

NG

3	CHECK OF RADIO RECEIVER ASSEMBLY INSTALLATION

(a) Check the radio receiver assembly installation condition.
  (1) Check that the radio receiver assembly is installed properly.

OK: Installed properly.

NG	INSTALL THE RADIO RECEIVER ASSEMBLY PROPERLY

OK

CONDENSATION DUE TO TEMPERATURE CHANGE (LEAVE IT AS IT IS FOR A WHILE BEFORE USING)