TAPE IS TANGLED DUE TO INCORRECT TAPE SPEED OR AUTO-REVERSE MALFUNCTION

INSPECTION PROCEDURE

1	CHECK FOR ANY FOREIGN OBJECT

(a) Check for any foreign objects.
(1) Check that no foreign objects or defects are detected in the cassette tape player of the radio receiver assy.
OK: No foreign objects or defects are detected.

NG → **REMOVE FOREIGN OBJECT**

OK


2	REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK (BELOW 90 MIN.)

(a) Replace the cassette tape with another one and recheck.
(1) Replace the cassette tape with another normal one (90 minutes or less) to see if the same trouble occurs again.
OK: Malfunction disappears.

OK → **CASSETTE TAPE IS FAULTY**

NG

3	CLEAN HEAD AND CHECK OPERATION

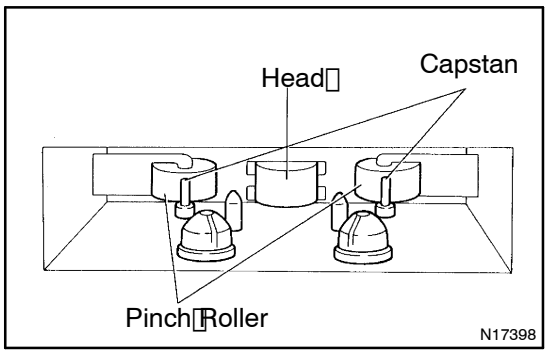

(a) Head cleaning
(1) Raise the cassette door with your finger. Using a pencil or similar object, push in the guide.
(2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
(3) Check if the same trouble occurs again.
OK: Malfunction disappears.

NG → **REPLACE RADIO RECEIVER ASSY (SEE PAGE 67–5)**

OK

HEAD IS DIRTY