TOUCH PANEL SWITCH DOES NOT FUNCTION

INSPECTION PROCEDURE

1	CHECK TOUCH PANEL


(a) Check for dirt on the display surface.
OK: The display surface is clean.

NG → **REMOVE ANY DIRT FOUND AND RECHECK TOUCH PANEL**

OK

2	DISPLAY CHECK MODE (TOUCH SWITCH CHECK)

(a) Enter the "Display Check" mode (Touch Switch Check) (see page 05–1552).

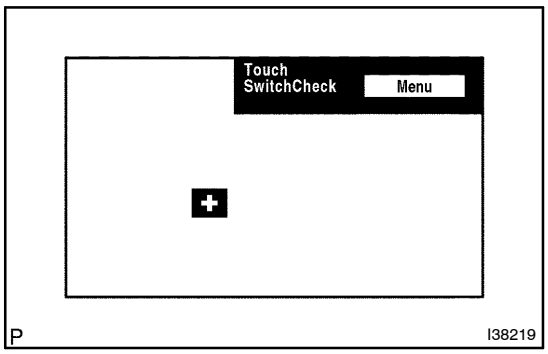

(b) Touch the display in the area where the abnormal switch occurs.
OK: A "+" mark appears at the touched position.

OK → **REPLACE MULTI–DISPLAY (SEE PAGE 05–1570)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–1570)