
MAP DISC CANNOT BE INSERTED

INSPECTION PROCEDURE

1 CHECK MAP DISC

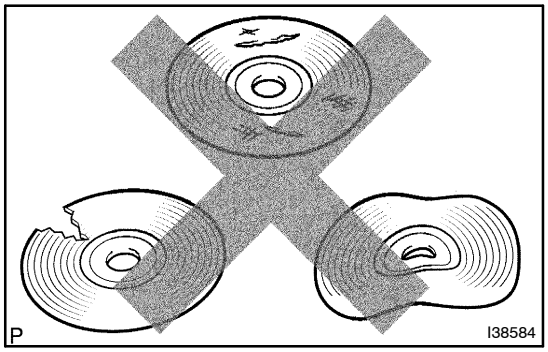

(a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG → REPLACE THE MAP DISC

OK

2 CHECK NAVIGATION ECU

(a) Check if the "PUSH" indicator near the disc slot comes on.
OK: It does not come on.

NG → PRESS THE EJECT SWITCH TO EJECT THE DISC

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–1570)