
CURRENT POSITION DISPLAY DOES NOT APPEAR

INSPECTION PROCEDURE

1	CHECK THE MAP DISC

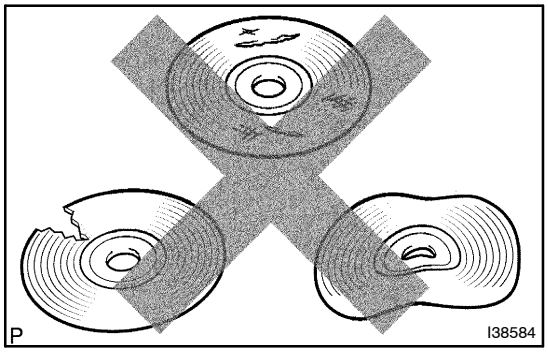

(a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG → **REPLACE THE MAP DISC**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–1570)