
SPEED SIGNAL ERROR

INSPECTION PROCEDURE

1	NAVIGATION CHECK MODE(VEHICLE SENSORS)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05–1556).

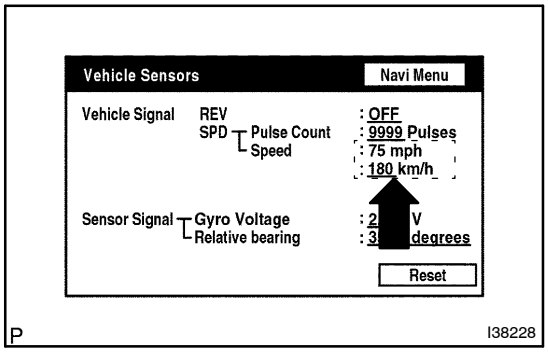

(b) While driving, compare the "SPD" indicator to the reading on the speedometer. Check if these readings are almost the same.

OK: The readings are almost the same.

OK → **REPLACE NAVIGATION ECU (SEE PAGE 05–1585)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05–1585)