VOICE RECOGNITION DIFFICULTY

INSPECTION PROCEDURE


1 CHECK CONDITION

(a) Check if the system's voice recognition level is low with only one particular voice.
OK: The system's voice recognition level is low with any voice.

NG → **SYSTEMS VOICE RECOGNITION LEVEL VARIES DEPENDING ON VOICE AND PRONUNCIATION. THIS IS NOT A MALFUNCTION**

OK

2 CHECK MAP DISC

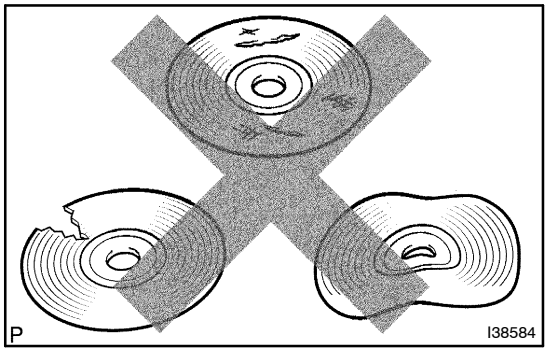


(a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG → **REPLACE MAP DISC**

OK

3 CHECK MAP DISC

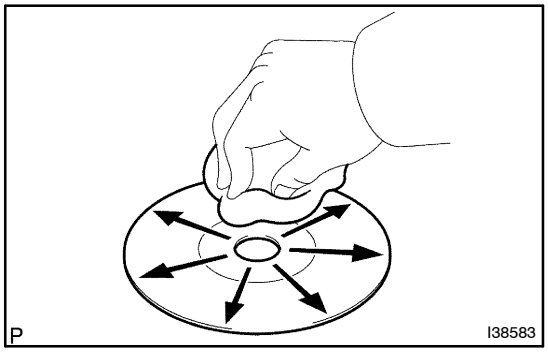

(a) Check for dirt on the map disc surface.
OK: No dirt is on the map disc surface.

HINT:
If dirt is on the map disc surface, wipe it with a soft cloth from inside to outside in a radial direction.


NOTICE:
Do not use conventional record cleaner or anti–static preservative.

NG → **CLEAN THE MAP DISC**

OK

4	NAVIGATION CHECK MODE(MICROPHONE CHECK)

(a) Enter the "Microphone Check" mode (see page 05–1559).

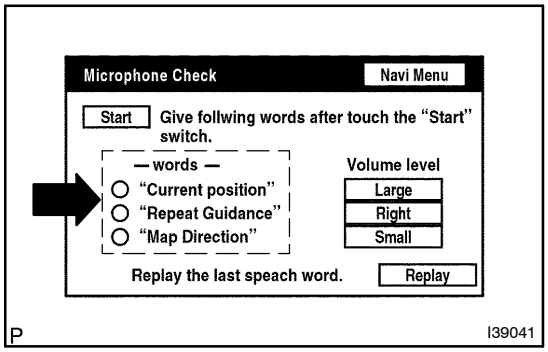

(b) Follow the directions on the screen. Check if the word recognition indicator is displayed in green in each item.
OK: All check items are recognized.

NG → **PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–1570)**

OK

NORMAL OPERATION