
VOICE IS NOT RECOGNIZED

INSPECTION PROCEDURE

1 CHECK MAP DISC

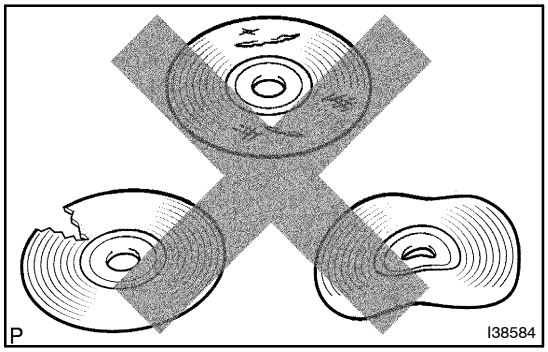


(a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG → **REPLACE MAP DISC**

OK

2 CHECK MAP DISC

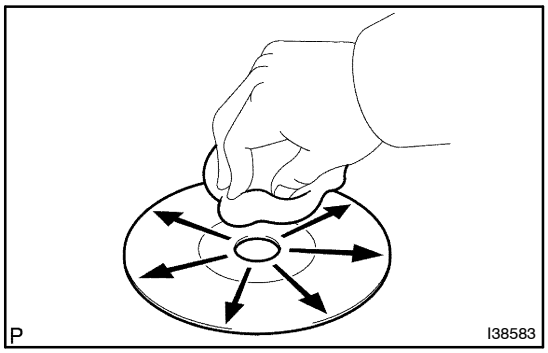

(a) Check for dirt on the map disc surface.
OK: No dirt is on the map disc surface.

HINT:
If dirt is on the map disc surface, wipe it with a soft cloth from inside to outside in a radial direction.


NOTICE:
Do not use conventional record cleaner or anti–static preservative.

NG → **CLEAN THE MAP DISC**

OK

3 NAVIGATION CHECK MODE(MICROPHONE CHECK)

(a) Enter the "Microphone Check" mode (see page 05–1559).

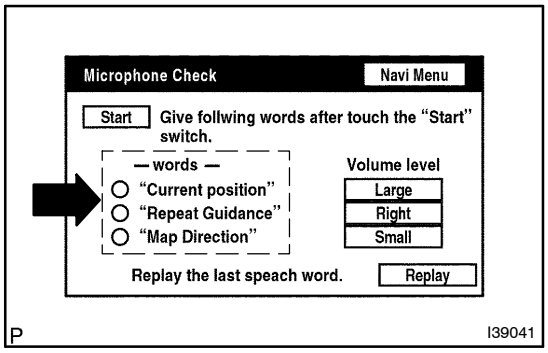

(b) Follow the directions on the screen. Check if the word recognition indicator is displayed in green in each item.
OK: All check items are recognized.

NG → **PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–1570)**

OK

REPLACE NAVIGATION ECU (SEE PAGE 67–23)