
REVERSE SIGNAL CIRCUIT

CIRCUIT DESCRIPTION


The navigation ECU receives the reverse signal from the BK/UP LP relay and information about the GPS antenna, and then adjusts the vehicle position.

WIRING DIAGRAM

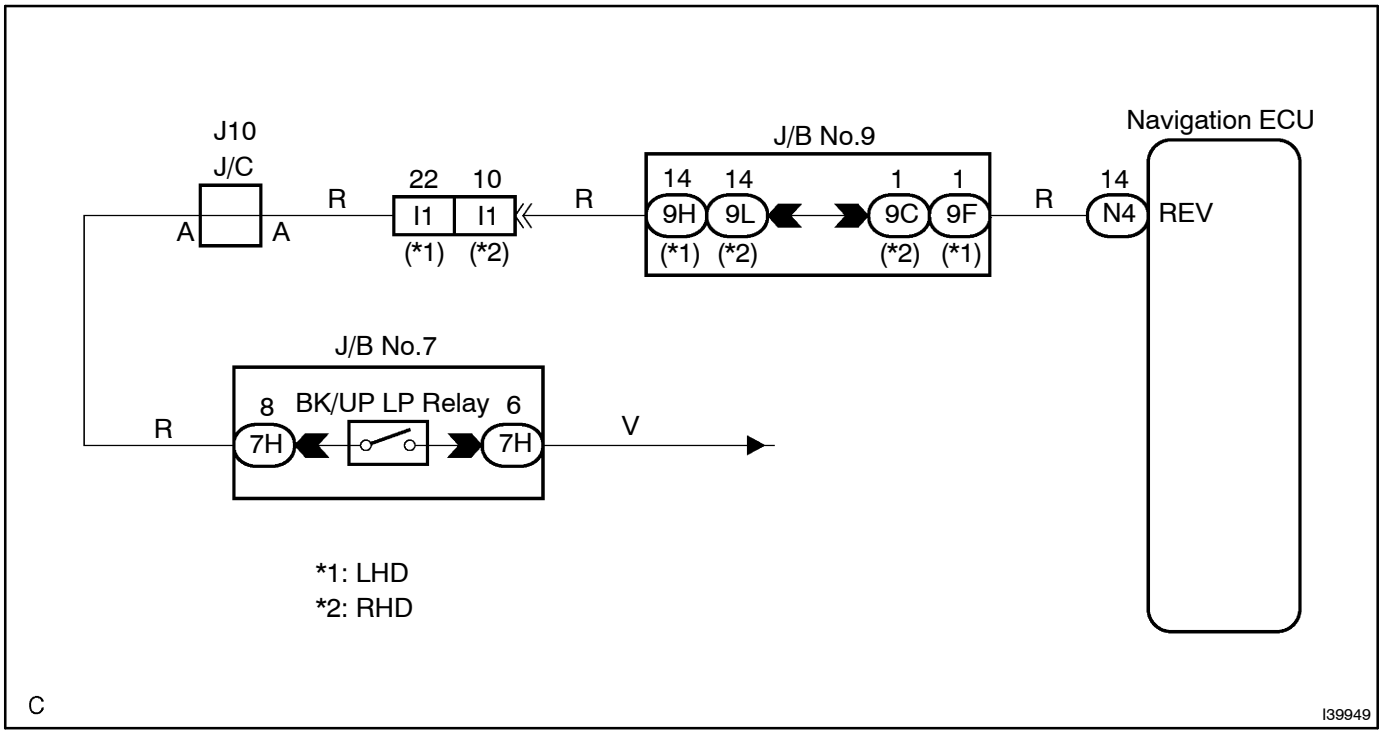

INSPECTION PROCEDURE

1	INSPECT NAVIGATION ECU

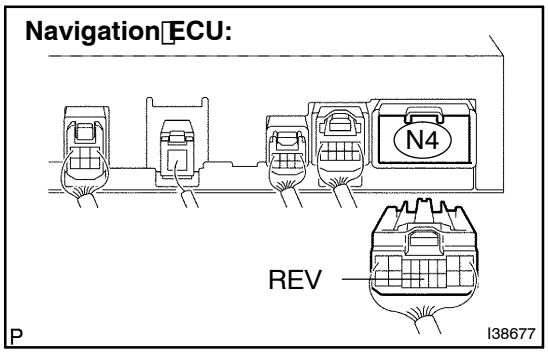

(a) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
REV – Body ground	Shift lever is moved to R position.	10 to 14 V
REV – Body ground	Shift lever is moved to except R position.	Below 1 V

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK →

REPLACE NAVIGATION ECU (SEE PAGE 67–23)